



Plus
AQUA MAGIC
1.5EE

Owner and Operational Manual

Model: _____

Serial Number: _____

Install Date: _____

Installed By: _____

Service Phone: _____

Sold By: _____




Please read this manual carefully before proceeding with installation. Your failure to follow any of these instructions or operating parameters may lead to personal injury or damage to the equipment and/or personal property. Do not use this water treatment system with water that is microbiologically unsafe or of unknown quality, without adequate disinfection before or after the system. This water treatment system contains replaceable treatment components critical for effective performance. It is the user's responsibility to periodically test the product water to verify the system is performing satisfactorily. Failure to properly maintain this water treatment system may cause a health risk.

Save this manual for future reference

Table of Contents

General Specifications	4
Installation.....	6
System Startup.....	8
Service Instructions.....	9
Front Cover and Drive Assembly	14
Regeneration and Error Screens.....	15
Button Operation and Function	15
User Displays	16
Setting Time of Day	16
Configuration Settings	17
Configuring the Control Valve for No Hard Water Bypass Operation:.....	18
Configuring the Control Valve for Separate Source Operation:	18
Configuring the Control Valve to Operate with Clack System Controller:	18
Configuring the Control Valve to Act as an Alternator:.....	19
OEM Softener System Setup.....	21
Setting Options Table	23
Filters should only use shaded options.....	23
OEM Filter System Setup.....	24
Installer Display Settings: 7 Day Regeneration	26
Installer Display Settings: 28 Day Regeneration / Auto.....	27
Diagnostics	28
Troubleshooting Procedures	31
AM1.5 Control Valve Cycle Positions	35
AM1.5 Regenerant Components.....	39
Drain Line Flow Controls	41
Meter Assembly for AM1.5 Valves	43
Motorized Alternating Valve Piston Style Applications.....	44
Water Treatment System Warranty	49

AM1.5 shown




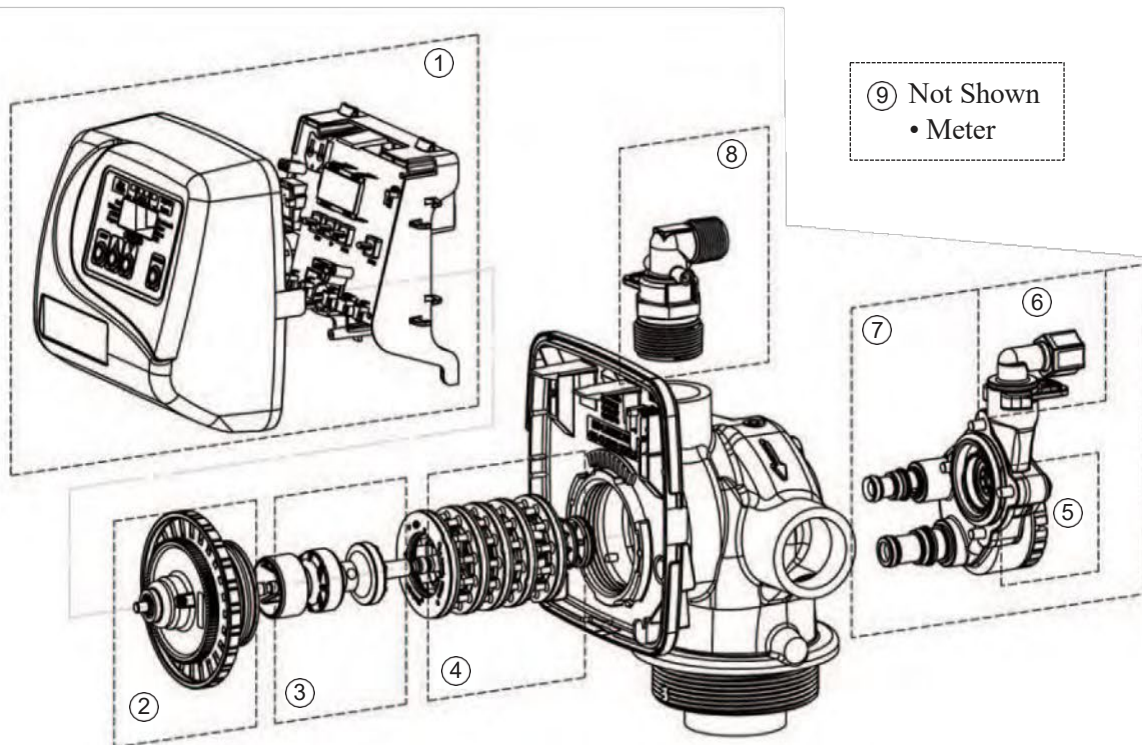


⑨ Not Shown
• Meter

General Specifications

Minimum/Maximum Operating Pressures	20 psi (138 kPa) -125 psi (862 kPa)			
Minimum/Maximum Operating Temperatures	40°F (4°C) – 110°F (43°C)			
Power Adapter: Supply Voltage Supply Frequency Output Voltage Output Current	U.S. 120V AC 60 Hz 12V AC 500 mA	International 230V AC 50 Hz 12V AC 500 mA		
No user-serviceable parts are on the PC board, the motor, or the Power adapter. The means of disconnection from the main power supply is by unplugging the Power adapter from the wall.				
Service flow rate	AM1.5 Valve: 70 gpm (265 lpm, 15.9 m ³ /h) @ 15psig (103kPa) drop AM2 Valve: 115 gpm (435 lpm, 26.1 m ³ /h) @ 15psig (103kPa) drop			
Backwash flow rate	AM1.5 Valve: 52 gpm (192 lpm, 11.8m ³ /h) @ 25 psig (172 kPa) drop			
CV Service	AM1.5 Valve: 18.1			
CV Backwash	AM1.5 Valve: 10.4			
Meter: Accuracy Flow Range	AM1.5 Valve: ± 5 % 0.5 – 75 gpm (1.9 – 283 lpm)			
Regenerant Refill Rate	AM1.5 Valves: 0.5 gpm (1.9 lpm)			
Injectors	AM1.5 Valve: See Injector Graphs V3010-15A through 15I			
Inlet/ Outlet	AM1.5 Valve: 1.5” Female NPT or BSPT			
Drain Line	AM1.5 Valve: 1.25” Female NPT			
*Distributor Tube Sizing: AM2QC Valve AM1.5and AM2 Valve	Female NPT Inlet & Outlet		Female BSPT Inlet & Outlet	
	2.375” OD (2.0” NPS) 1.90” OD (1.5” NPS)	+2.25” - +2.5” ± 0.5”	63 mm OD 50 mm OD	+57 mm - +64 mm ± 13 mm
Tank Connection	AM1.5 and AM2 Valves: 4”-8UN			
Shipping Weight	AM1.5 Valve with Meter: 23 lbs. (11 kg)			
PC Board Memory	Nonvolatile EEPROM (electrically erasable programmable read-only memory)			
Compatible with the following typical concentrations of regenerants/chemicals	Sodium chloride, potassium chloride, potassium permanganate, sodium bisulfite, chlorine and chloramines			

*Height is based off the top of tank. Installer to verify proper engagement and allowance for tank expansion

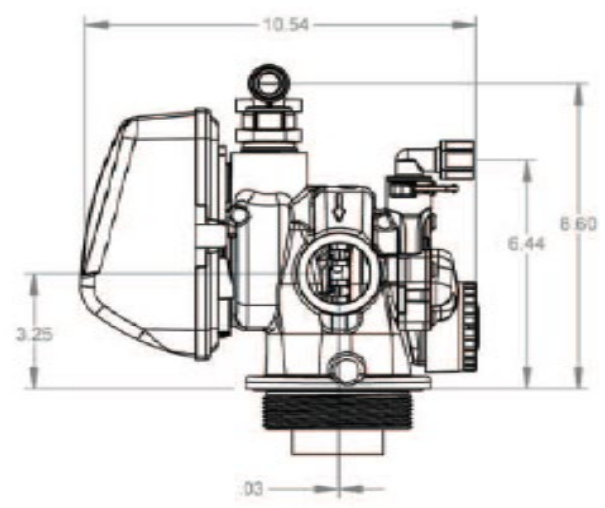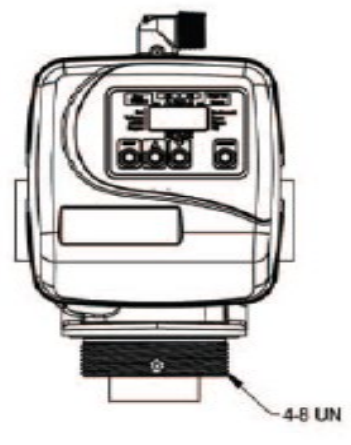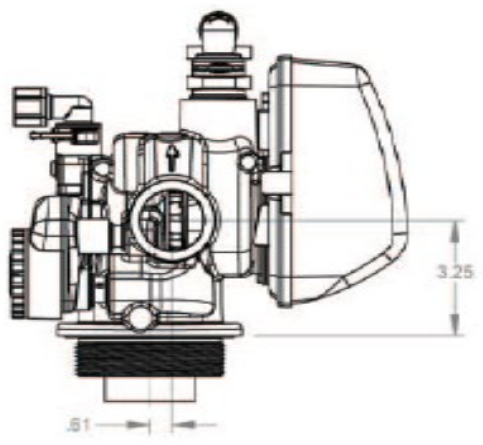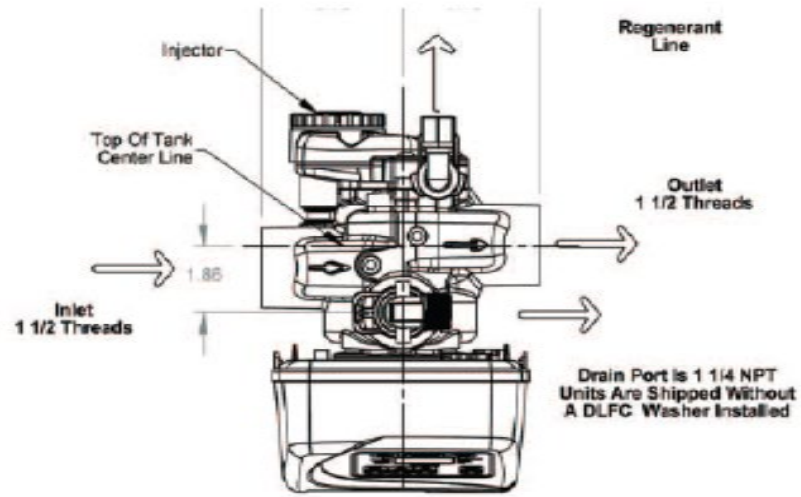

Installation

GENERAL INSTALLATION & SERVICE WARNINGS

The control valve and fittings are not designed to support the weight of the system or the plumbing.

Do not use Vaseline, oils, other hydrocarbon lubricants, or spray silicone anywhere. A silicone lubricant may be used on black O-rings but is not necessary.

HYDROCARBONS SUCH AS KEROSENE, BENZENE, GASOLINE, ETC., MAY DAMAGE PRODUCTS THAT CONTAIN O-RINGS OR PLASTIC COMPONENTS. EXPOSURE TO SUCH HYDROCARBONS MAY CAUSE THE PRODUCTS TO LEAK. DO NOT USE THE PRODUCT(S) CONTAINED IN THIS DOCUMENT ON WATER SUPPLIES THAT CONTAIN HYDROCARBONS SUCH AS KEROSENE, BENZENE, GASOLINE, ETC.

CLACK WATER METERS SHOULD NOT BE USED AS THE PRIMARY MONITORING DEVICE FOR CRITICAL OR HEALTH EFFECT APPLICATIONS

Teflon tape is recommended to be used on all threads. Do not use pipe dope, as it may break down the plastics in the control valve.

Allow one foot of clearance to service AM1.5 valves.

The valve will withstand transportation and storage temperatures of -13 °F (-25 °C) to 131 °F (55 °C) and for short periods up to 158 °F (70 °C). If valve has been exposed to freezing conditions let valve warm up to room temperature before running water through it. The valve has been packaged to prevent damage from the effects of normal humidity, vibration, and shock.

SITE REQUIREMENTS:

1. The plug-in Power Adapter is for dry locations only, and should be connected to an uninterrupted outlet installed within 15 feet (4.57 meters) of the water conditioner. If the Power Adapter cord has not yet been connected to the control valve, remove the control valve cover and the drive bracket, and thread the Power Adapter cord through the hole in the back plate. Reinstall the drive bracket. Weave the cord through the hooks on the right-hand side of the drive bracket and connect the end to the four-prong connector on the printed circuit board. Replace the cover, and plug the Power Adapter into an uninterrupted outlet.
2. The tanks should be on a firm, level surface.
3. All plumbing should be done in accordance with local codes.
4. Do not locate the unit where it or its connections (including the drain and overflow lines) will ever be subjected to room temperatures below 40° F (4° C).
5. **INLET/OUTLET PLUMBING:** Connect to a supply line downstream of outdoor spigots. Install an inlet shutoff valve and plumb to the unit's inlet. Installation of a bypass valve is recommended. If using plastic fittings, ground the water conditioner per local electrical codes. Do not install any water conditioner with less than 10 feet of piping between its outlet and the inlet of a water heater. If a water meter is used, install the water meter on the outlet side of the control valve. The turbine assembly may be oriented in any direction but is usually oriented pointing up to reduce drainage out of the pipe during service.
6. Locate the water conditioner so the distance between the drain and the water conditioner is as short as possible. All units are shipped without a drain line flow control washer. Correctly size the drain line and install an appropriately sized drain line flow control. 1.5" valves are shipped with a 3/4" fitting that can be used with the drain line flow control up to 10 gpm, or an optional 1" fitting can be purchased to be used with drain line flow controls up to 25 gpm. For higher backwash rates, the adapter can be removed and the 1 1/4" NPT threaded drain outlet can be used. Solder joints near the drain must be done before connecting the drain line flow control fitting. Leave at least 6" (152.4mm) between the drain line flow control fitting and the solder joints to prevent heat from damaging the flow control. Avoid elevating the drain line above the control valve where possible. Discharge the drain line through an air gap to a receptacle in accordance with local plumbing codes.

IMPORTANT: Never insert a drain line directly into a drain, sewer line, or trap. Always allow an air gap between the drain line and the receptacle to prevent back siphonage.

Distributor Tube Pipe Height for Top Mount AM1.5, AMS2 and AM2 QC control valves	
Control Valves	A
AM1.5	± 1/2"

A = Number of inches above the top of the tank for fiberglass tanks. Please verify distributor pipe and pilot O-ring engagement. Installer must determine engagement to be able to allow for tank expansion.

7. Regenerant tanks should be accessible for easy refilling. If the control valve is to be used to regenerate the water conditioner with brine (saturated salt solution) or other regenerants, use a polyethylene tube to connect the brine valve contained in the regenerant tank to the regenerant port on the control valve. It is recommended the brine valve contain a safety float. The 1.5" control valve's regenerant port has a 1/2" fitting. Note: 1/2" tubing that runs longer than 6 feet may restrict draw rates with G and H injectors. A 5/8" fitting is also available.

An overflow drain line from the regenerant tank that discharges into an acceptable drain is recommended, as a regenerant overflow could damage furnishings or the building structure. Connect a line to the overflow fitting on the regenerant tank. If an overflow fitting is not already installed on the regenerant tank, install one. Do not elevate the overflow drain line. Discharge the overflow drain line through an air gap to a receptacle in accordance with local plumbing codes.

8. Program the control valve: It is very important to program the control valve for the type of system (e.g. water softener or filter.) Consult your OEM for proper program system settings.
9. The use of resin cleaners in an unvented enclosure is not recommended.

System Startup

1. After installation is completed, turn on the supply water to check for leaks
2. Fully open a cold-water faucet downstream of the system
3. Allow water to run until clear
4. Close the cold-water faucet
5. Turn off the supply water
6. The system is now ready for startup

Systems With a Regenerant Tank

1. Manually pour enough water into the regenerant tank to reach the top of the air check valve.
2. Press and hold the REGEN button for three seconds until the drive motor starts. Press the REGEN button to advance the unit to the backwash cycle. Wait until the motor stops and the backwash time begins to count down.
3. Open the inlet water supply valve very slowly allowing water to fill the tank to expel air. CAUTION: If water flows too rapidly, there will be a loss of media out of the drain.
4. When the water is flowing steadily to the drain without the presence of air, press the REGEN button to advance the control to brine position. Wait until the motor stops and the brine time begins to count down.
5. Fully open the water supply inlet valve. Check that water is being drawn from the regenerant tank & there should be a slow flow to the drain. Allow three minutes for the media bed to settle.
6. Press the REGEN button to advance the unit to the rinse position. Allow water to run to drain for 2 - 3 minutes, or until the drain runs clear.
7. Press the REGEN button to advance to the fill position. Allow water to run into the regenerant tank and prepare it for the next regeneration. Allow the regenerant tank to fill automatically. Systems with a salt grid should see a water level of 1 ½" - 2" above the grid.
8. Add salt to the tank, and allow ample time to dissolve salt for the brine solution.
9. SANITIZE! Add a sanitizer to the regenerant tank brine well following dosage recommendations specified by the media manufacturer. Press and hold the REGEN button for three seconds to begin regeneration. Allow the system to complete the regeneration automatically. The system will now be sanitized and produce treated water. Be sure to check for local codes which may also specify sanitization methods.

Systems Without a Regenerant Tank

1. Press and hold the REGEN button for three seconds until the drive motor starts. Press the REGEN button to advance the unit to the backwash cycle. Wait until the motor stops and the backwash time begins to count down.
2. Open the inlet water supply valve very slowly allowing water to fill the tank to expel air. CAUTION: If water flows too rapidly, there will be a loss of media out of the drain.
3. When the water is flowing steadily to the drain without the presence of air, fully open the water supply inlet valve.
4. Press the REGEN button again to advance to the rinse position and allow water to run to the drain for 2 - 3 minutes or until the drain runs clear.
5. Press the REGEN button to advance to the service position.
6. SANITIZE! Add a sanitizer to the media following dosage recommendations specified by the media manufacturer. Be sure to check for local codes which may also specify sanitization methods.

Service Instructions



When servicing the valve, water may leak from the valve. Water from the valve may create a slip hazard. Clean up water spills.



Disconnect from electrical power prior to servicing the valve.

Drive Assembly

Disassembly and Inspection:

Remove the valve cover to access the drive assembly.

The drive bracket must be removed to access the drive cap assembly and pistons or the drive gear cover. It is not necessary to remove the PC board from the drive bracket to remove the drive bracket. Disconnect the power source plug (4 pin, black cable) from the PC board prior to disconnecting any other plugs from the PC board. Disconnect and MAV/ AUX drive motors (2 pin, black cable) from the PC board. Disconnect the water meter plug (3 pin, grey cable), located on the far-right side of the PC board. Unweave the wires from the side holders. Two tabs on the top of the drive back plate hold the drive bracket in place. Simultaneously lift the two tabs and gently ease the top of the drive bracket towards your body. The lower edge of the drive bracket has two notches that rest on the drive back plate. Lift up and outward on the drive bracket to disengage the notches.

To inspect the drive reduction gears, the drive gear cover needs to be removed. The drive gear cover is held in place on the drive bracket by three clips. The largest of the three clips is always orientated to the bottom of the drive bracket. With the PC board facing up, push in and down on the large clip on the drive gear cover. Handle the cover and the gears carefully so that the gears do not fall off of the pegs in the cover. Replace broken or damaged drive gears. Do not lubricate any of the gears. Avoid getting any foreign matter on the reflective coating because dirt or oils may interfere with pulse counting.

The drive bracket does not need to be removed from the drive plate if the motor needs to be removed. To remove the motor, disconnect the power and motor plugs from the jacks on the PC board. Move the spring clip loop to the right and hold. Rotate the motor at least a $\frac{1}{4}$ turn in either direction before gently pulling on the wire connectors to remove the motor. Pulling directly on the wires without rotating the motor may break the wires off the motor. Visually inspect the motor for free spinning and remaining brush life (visible through slots on the size of the motor). Check the pinion gear for endplay. If the pinion gear is pushed tight against the motor housing, eliminating endplay, slide it away from the housing so the end of the shaft is flush with the end of the gear.

The PC board can be removed separately from the drive bracket but it is not recommended. Do not attempt to remove the display panel from the PC board. Handle the board by the edges. To remove the PC board from the drive bracket, unplug the power, water meter, and motor plugs from the PC board. Lift the middle latch along the top of the drive bracket while pulling outward on the top of the PC board. The drive bracket has two plastic pins that fit into the holes on the lower edge of the PC board. Once the PC board is tilted about 45° from the drive bracket it can be lifted off of these pins. To reinstall the PC board, position the lower edge of the PC board so that the holes in the PC board line up with the plastic pins. Push the top of the PC board towards the valve until it snaps under the middle latch, weave the power and water meter wires into the holders, and reconnect the motor, water meter, and power plugs.

Reassembly:

If the drive gear cover was removed, reinstall it with the large clip orientated towards the bottom. If all three clips are outside of the gear shroud on the drive bracket the drive gear cover slips easily into place.

To reinstall the drive bracket, seat the bottom of the drive bracket so the notches are engaged at the bottom of the drive back plate. Push the top of the drive bracket towards the two latches. The drive bracket may have to be lifted slightly to let the threaded piston rod pass through the hole in the drive bracket. Maintain a slight engaging force on top of the drive bracket while deflecting the bracket slightly to the left by pressing on the side of the upper right corner. This helps the drive gears mesh with the drive cap assembly. The drive bracket is properly seated when it snaps under the latches on the drive back plate. If resistance is felt before latching, then notches are not fully engaged, the piston rod is not in hole, the wires are jammed between the drive bracket and drive back plate, or the gear is not engaging the drive cap assembly.

Replace the motor if necessary. Do not lubricate the motor or the gears. To reinstall the motor, move the spring clip loop to the right and hold. Gently turn the motor while inserting so that the gear on the motor meshes with the gears under the drive gear cover. Release the spring clip loop and continue to rotate the motor until the motor housing engages the small plastic bulge inside the drive bracket motor retainer. Reconnect the motor plug to the two-pronged jack on the lower left-hand side of the PC board. If the motor will not easily engage with the drive gear when reinstalling, lift and slightly rotate the motor before reinserting. Reconnect the power plug.

Replace the valve cover. After completing any valve maintenance, press and hold NEXT and REGEN buttons for 3 seconds or unplug power source jack (black wire) and plug back in. This resets the electronics and establishes the service piston position. The display should flash all wording, then flash the software version and then reset the valve to the service position.

Drive Cap Assembly

Disassembly 1.5" Valves

Turn off supply water and relieve system pressure. The drive assembly must be removed to access the drive cap assembly. The drive cap assembly must be removed to access the piston(s). The drive cap assembly is threaded into the control valve body and seals with an O-ring. To remove the drive cap assembly, use the special plastic wrench (V3193-02 Figure 1) or insert a ¼" to ½" flat bladed screwdriver into one of the slots around the top 2" of the drive cap assembly so it engages the notches molded into the drive back plate around the top 2" of the piston cavity. See Figure 2. The notches are visible through the holes. Lever the screwdriver so the drive cap assembly turns counterclockwise. Once loosened unscrew the drive cap assembly by hand and pull straight out.

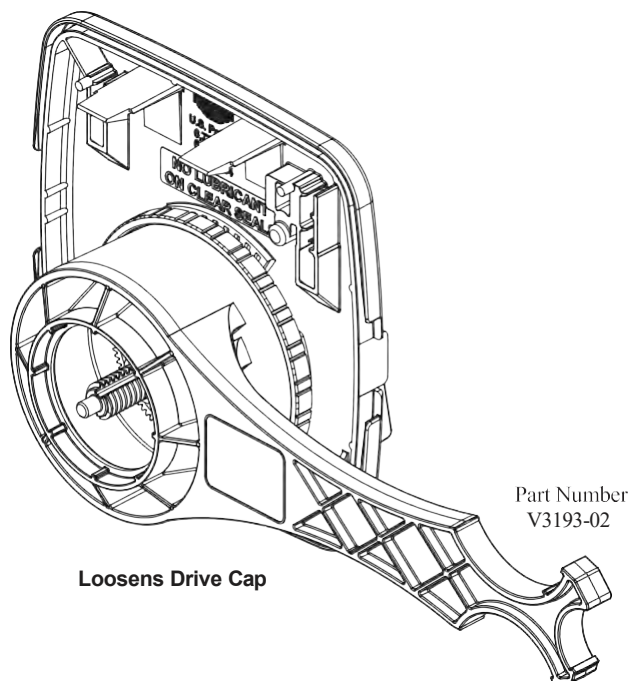


Figure: 1

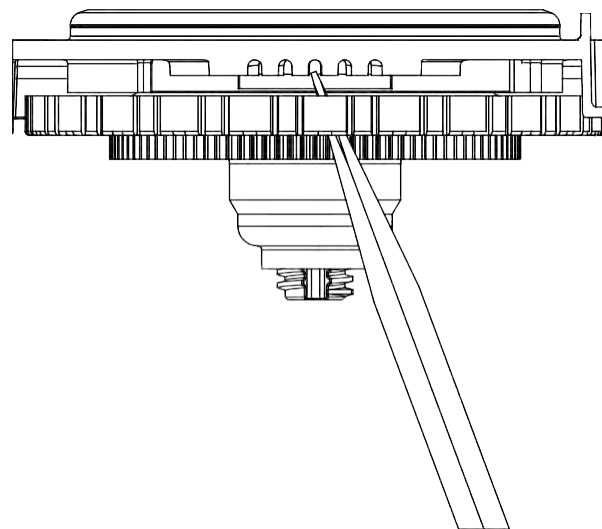


Figure: 2

Inspection

The drive cap assembly contains the drive cap, the main drive gear, drive cap spline, piston rod and various other parts that should not be disassembled in the field. Visually inspect the drive cap for damage and free operation of the gear and threaded rod. The only replaceable part on the drive cap assembly is the O-ring.

Main Piston and Regenerant Piston

Disassembly and Inspection

Attached to the drive cap assembly is the main piston and depending on the configuration, a regenerant piston. The regenerant piston (the small diameter one behind the main piston) is removed from the main piston by unsnapping it from its disassembly latch. To remove the main piston fully extend the piston rod and then unsnap the main piston from its latch by pressing on the side with the number. Chemically clean the piston in dilute sodium bisulfite or vinegar, or replace the them. The main piston is Teflon coated. If the Teflon coating is abraded, replace the main piston. For piston identification, refer to table.

Reassembly

Reattach the main piston to the drive cap assembly. Reattach the regenerant piston (if needed) to the main piston. Reinsert the drive cap assembly and piston into the spacer stack assembly and hand tighten the drive cap assembly. Continue to tighten the drive cap assembly until the backside of the drive cap bottoms out flush with the casting or the black O-ring on the spacer stack assembly is no longer visible through the drain port. Excessive force can break the notches molded into the drive back plate. Make certain that the main drive gear still turns freely. The exact position of the piston is not important as long as the main drive gear turns freely.

Reattach the drive assembly to the control valve and connect all plugs. After completing any valve maintenance, press and hold NEXT and REGEN buttons for 3 seconds or unplug the power source jack (4-pin, black cable) and plug it back in. This resets the electronics and establishes the service piston position. The display should flash all wording, then flash the software version, and then reset the valve to the service position.

Spacer Stack Assembly

Disassembly and Inspection

To access the spacer stack assembly, remove the drive assembly, drive cap assembly and piston. The spacer stack assembly can then be pulled straight out. Inspect the black O-rings and inner seals for wear or damage, replace the entire stack if necessary. Do not disassemble the stack.

The spacer stack assembly may be chemically cleaned (dilute sodium bisulfite or vinegar) or wiped with a soft cloth.

Reassembly

The spacer stack assembly can be pushed into the control valve body bore by hand. The assembly is properly seated when at least four threads are exposed (approximately 5/8"). Do not force the spacer stack assembly in. The control valve body bore interior can be lubricated with silicone to allow for easy insertion of the entire stack.

Reattach the drive cap assembly and piston(s) and the drive assembly.

After completing any valve maintenance, press and hold NEXT and REGEN buttons for 3 seconds or unplug the power source jack (4 pin, black cable) and plug back in. This resets the electronics and establishes the service piston position. The display should flash all wording, then flash the software version and then reset the valve to the service position.

Downflow/Backwash or Upflow Changes

	1.5"	
	Downflow/Backwash	Upflow
Main Piston	V3407 (amber)	V4042 (black)
Stack Assembly	V3430-01 (black)	V3430-01 (black)
Feed Tube	V3968 (black)	V3968-01 (grey)
Draw Tube	V3969 (black)	V3969-01 (grey)

Injector Cap, Screen, Injector Plug and Injector

Disassembly and Inspection

The injector can be accessed at the back of the valve by removing the threaded injector cap. The cap is removed by using the V3193-02 service wrench (figure 1).

Once the cap is removed:

- AM1.5 valve can use the bottom threaded edge of the injector cap at an angle to pry out the injector

An injector consists of a throat and nozzle. It can be chemically cleaned with vinegar or dilute sodium bisulfate. The holes can be blown out by air. Sharp objects, which can score the plastic, should not be used to clean the injector. Scoring the injector or increasing the diameter of the injector hole could change the operating parameters of the injector.

If the AM1.5 valve does not use a regenerant the injector plug should not need to be cleaned, just verify that it has both O-rings on the plug and that it is fully seated.

Reassembly

Press injector into its bore hole and press until seated all the way down. Replace the injector cap.

Refill Flow Control Assembly or Refill Port Plug

Disassembly and Inspection

To clean or replace the refill flow control pull out the locking clip (AM1.5 valves) and then pull the fitting straight out. Remove the flow control retainer. The flow control can be removed by prying upward through the side slots of the retainer with a small blade flat screwdriver, being careful not to mar the plastic seat.

Chemically clean the flow control or the flow control retainer using dilute sodium bisulfite or vinegar. **Do not clean with abrasive methods.** If necessary, replace the flow control, the O-ring on the flow control retainer, or the O-ring on the fitting.

Reassembly

Insert the flow control into its seat, confirming the correct flow control orientation. Reseat the flow control retainer and reassemble the fitting (see diagram in the exploded view section).

Do not use Vaseline, oils, or other unacceptable lubricants on O-rings. A silicone lubricant may be used on the O-ring on the elbow or the retainer, but not on the flow control or its seat.

Refill port plugs should not need to be serviced. O-rings may be replaced if necessary.

Regenerant Body

Disassembly and Inspection

Turn off supply water & relieve system pressure.

The regenerant body would typically only be removed for servicing of the injector screen. Removing the injector cap can allow much of the contained water to drained before removing the body. Remove the (4) ¼-20 screws, the body can then be pulled straight back off the main body taking care to not lose the O-ring between the regenerant & main body. The injector screen is installed inside the plastic body behind the injector feed tube. The injector screen can be pushed out from the half round hole feature behind the injector cap. For injector feed and draw tube identification, refer to table.

Reassembly

Insert the injector feed and draw tubes into the main body, bottoming them out in their bores. Install the injector screen in the 1.5 regenerant body, the small hole in the end of the screen will nest around a feature in the plastic body allowing the large end to be flush with a step in the tube bore. Confirm the placement of the O-ring on the flange of the plastic body then press the regenerant body straight onto the main body, assuring the O-rings engage the bore in the main body. Install & tighten the (4)1/4-20 screws. The lower injector O-ring engages the ID of the injector tube which may push the injector out of position when reinstalling the regenerant body. Verify the injector is seated all the way down into its bore, then reinstall the injector cap.

Drain Line Flow Control

Disassembly and Inspection

Depending on the flow control installed on the unit, remove the red plastic retaining clip (plastic flow control) or the (4) screws (stainless steel flow control) to expose the flow control and retainer. The flow controls can be removed by flexing the washer with a small screwdriver being careful not to mar the plastic seat. The flow control and retainer may be chemically cleaned using dilute sodium bisulfite or vinegar, do not clean with abrasive methods.

Reassembly

Insert the flow washers back into their respective bores, confirming correct flow control orientation (see diagram in the exploded view section). Place back into the housing and reassemble the housing /fitting. Do not use Vaseline, oils or other unacceptable lubricants on O-rings. A silicone lubricant may be used on the O-ring of the elbow or the retainer, but not on the flow control or its seat.

Front Cover and Drive Assembly

Drawing No.	Order No.	Description	Quantity
1	V3175EE-01	WS1EE FRONT COVER ASSEMBLY	1
2	V3107-01	WS1 MOTOR	1
3	V3002	WS1 DRIVE BRACKET ASY W/ MOTOR	1
4	V3408EE-05BOARD	WS1THRU2 EE5 20PIN PCB REPLC	1
5	V3110	WS1 DRIVE GEAR 12X36	3
6	V3109	WS1 DRIVE GEAR COVER	1
Not Shown	V3186-06	WS1 POWER SUPPLY US 15VDC HOCP	1
	V3186-01	WS1 POWER CORD ONLY	
Not Shown	V3178	WS1 DRIVE BACKPLATE	1

Refer to Control Valve Service Manual for other drawings and part numbers.

Relay Driver Output Type: Single Solid-State 12 VDC wet contact - N.O.


Relay Driver Output Capacity: 12 VDC @100 mA.

Note: Check for proper mounting dimensions on valve backplate prior to mounting an external relay under control cover.

We recommend that each externally wired relay contain a suppressor diode, which is normally placed across the relay coil in order to protect the control against back EMF at relay coil deactivation.

Power Supply	U.S.	International
Supply Voltage	100 – 120 VAC	100 – 240 VAC
Supply Frequency	50/60 Hz	50/60 Hz
Output Voltage	15 VDC	15 VDC
Output Current	500 mA	500 mA

Wiring For Correct On/Off Operation	
PC Board Relay Terminal Block	Relay
RLY 1	Coil -
COM	Coil +

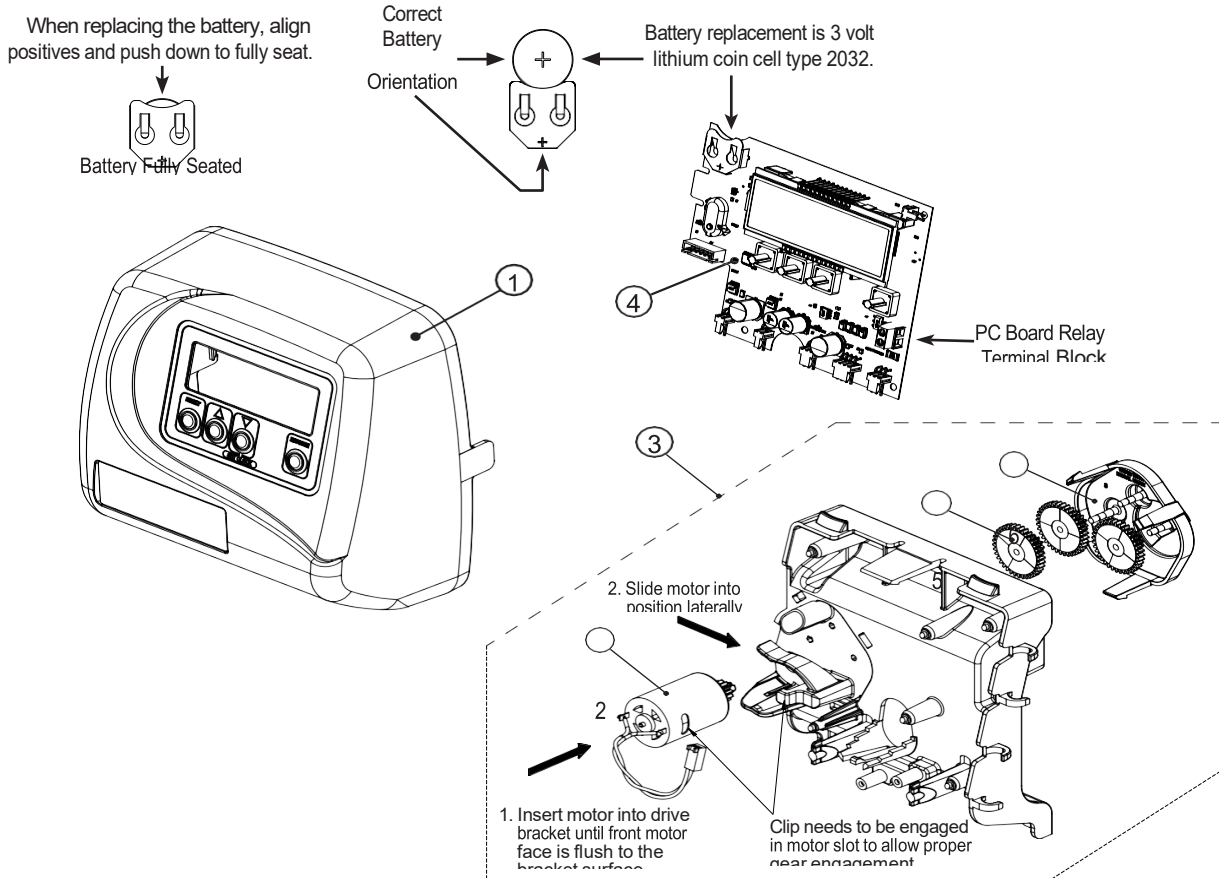

Regeneration and Error Screens



Regen Screen

Displays the time remaining in the current cycle. Press REGEN to advance to the next cycle.



Error Screen

Alternated flashing Err and error code every 3 seconds. To clear, disconnect the power supply at the PC board and reconnect, or press NEXT and REGEN simultaneously for 3 seconds.



REGEN Pndg is displayed in alternator systems when a unit is waiting to initiate the first cycle step of regeneration.



STBY is displayed in alternator systems when a valve is in standby mode.



REGEN Pndg RINSE FILL is displayed whenever a zero-capacity tank has transferred to an off-line state and is currently waiting to initiate the second portion of a regeneration cycle. Viewed only when Delayed Rinse and Fill is set to *ON*.

Button Operation and Function



Scrolls to the next display.

Press and release once to schedule a regeneration at the preset delayed regeneration time.

 


Press and release again to cancel the regeneration.

Press and hold for at least 3 seconds to initiate an immediate regeneration.

Press while in regeneration to advance to the next cycle.

Press while in the program levels to go back to the previous display.

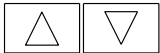

Changes variable being displayed.



Key sequence to lock and unlock program settings.



Hold for 3 seconds to initiate a control reset. The software version is displayed and the piston returns to the home/service position, resynchronizing the valve.



Used with valve type 1.0 T and 1.5T. Hold for at least 3 seconds to cause a switch in the tank in service without cycling the regeneration valve. After tank switch, days remaining and capacity remaining status is retained for each tank until the next regeneration.

Table 1 Regeneration Cycles and Times










Cycle	Range		
	Softening	Filtering Regen	Filtering Backwash
Backwash	1 – 120 min or OFF	1 – 120 min or OFF	1 – 120 min or OFF
Regenerant Draw/Slow Rinse (UP or DN)	1 – 180 min or OFF	1 – 180 min or OFF	N/A
Fast Rinse	1 – 120 min or OFF	1 – 120 min or OFF	1 – 120 min or OFF
Regenerant Refill	0.1 – 200 lb or OFF	0.05 – 20 gal or OFF	N/A
Regenerant Refill for 2.0" or 1.5" set to MIN (softening only)	0.1 – 99 min or OFF	0.1 – 99 min or OFF	N/A
Service	1 – 480 min or OFF	N/A	N/A

The user can initiate manual regeneration. The user has the option to request the manual regeneration at the delayed regeneration time or have the regeneration occur immediately:

1. Press and release REGEN. *REGEN TODAY* will flash on the display and regeneration will occur at the delayed regeneration time. Press and release REGEN to cancel the request.
2. Press and hold REGEN for approximately 3 seconds to immediately start the regeneration. The user cannot cancel this request except by resetting the control by pressing NEXT and REGEN simultaneously for approximately 3 seconds.

User Displays

         General Operation:

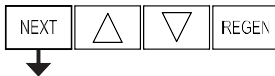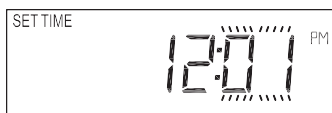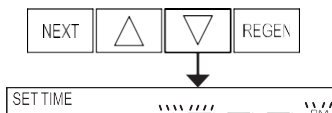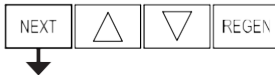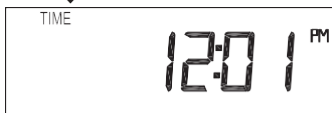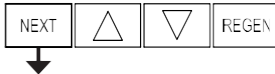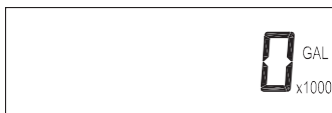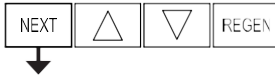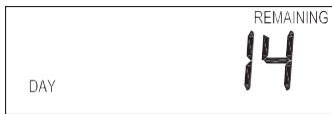

When the system is operating, one of 5 displays may be shown. Press NEXT to alternate between the displays shown below.

User 1

Typical user display. Shows volume remaining to regeneration. This screen will not be viewed if the control is set for time-clock operation.

User 2

Displays number of days to next regeneration.

User 3

Flow Rate.

Displays present flow rate.

This display will not appear if Step 5CS is set to *ALTA* or *ALT b* and the valve is currently in standby. If Step 2CS is set to *1.0T* or *1.5T*, the display will indicate the tank currently in Service (*A* or *b*) in the left-most digit.

User 4

Displays total volume in gallons since last reset. If a meter is not used, this display will show zero.

Press ▼ for 3 seconds to reset to 0.

User 5

Shows current time.


Setting Time of Day

Press NEXT until time of day is displayed. Then, press and hold ▼ until *SET TIME* is displayed and the hour flashes once. Press ▼ or ▲ until the correct hour is displayed.

Then, press NEXT. The minutes will flash. Press ▼ or ▲ until the correct minute is displayed.

Press NEXT to return to User displays. Time of day should only need to be set after power outages lasting more than 8 hours, if the battery has been depleted and a power outage occurs, or when daylight saving time begins or ends. If a power outage lasting more than 8 hours occurs, the time of day will flash, which indicates the time of day should be reset. If a power outage lasts less than 8 hours and the time of day flashes, the time of day should be reset and the battery replaced.



Configuration Settings

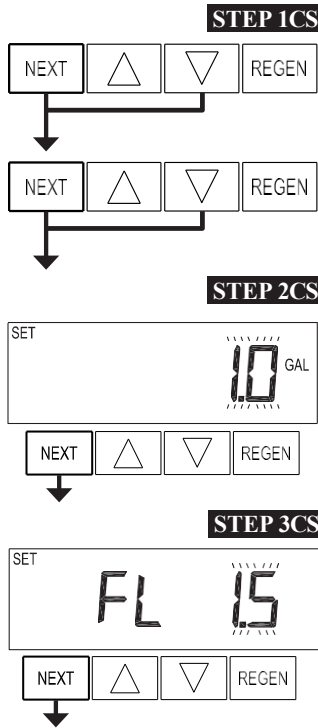

Step 1CS – Press NEXT and ▼ simultaneously for 5 seconds and release. Then, press NEXT and ▼ simultaneously for 5 seconds again and release. If screen in Step 2CS does not appear in 5 seconds, the lock on the valve is activated. To unlock, press ▼, NEXT, ▲, and REGEN in sequence, and try again.

Step 2CS – Valve Type: Use ▼ or ▲ to select *1.0* for 1" valve, *1.25* for 1.25" valve, *1.5* for 1.5" valve, *2.0* for 2" valve, *1.0T* for 1.0" twin valve, or *1.5T* for 1.5" twin valve. Press NEXT to go to Step 3CS. Press REGEN to exit Configuration Settings.


Step 3CS – Meter Size: Use ▼ or ▲ to select which size flow meter is to be used with the valve: 1.0r, 1.5, 2.0, or 3.0. Variable meter pulses of 0.1 – 150 PPG can also be selected. This display will only appear if Step 2CS is set to *1.5* or *2.0*. Press NEXT to go to Step 4CS. Press REGEN to return to the previous step.

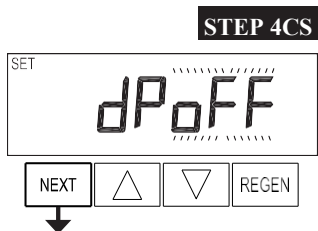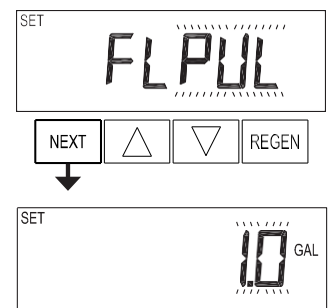

Step 4CS – Auxiliary Input: Allows for the use of an outside signal to control the initiation of a regeneration. Selection only needed if a connection is made to the 2-pin connector labeled *DP SWITCH* located on the printed circuit board. Use ▼ or ▲ to select one of the following options:

- *oFF*: Feature not used.
- *on0*: Regeneration will occur immediately if the dP switch is closed for 2 uninterrupted minutes. In a twin alternating system, the MAV will transition first to switch units so that the signaled unit can start regeneration. After the MAV has fully transitioned, the regeneration begins immediately. The Delayed Rinse and Fill feature will not be available for WS1 – WS1.5 control valves programmed for twin alternating if this option is selected.
- *dEL*: Regeneration will occur at the scheduled delayed regeneration time if the dP switch is closed for 2 uninterrupted minutes. In a twin alternating system, once the dP switch is triggered, the PC Board will display *REGEN TODAY*. At the delayed regeneration time, the control will switch tanks and the triggered unit will regenerate. The Delayed Rinse and Fill feature will not be available for WS1 – WS1.5 control valves programmed for twin alternating if this option is selected.
- *HoLd*: Regeneration will be prevented from occurring while the dP switch is closed. In a twin alternating system, the regeneration of a unit can be prevented upon switch closure. If the unit depletes the capacity down to zero, it will not be allowed to switch tanks to regenerate until the switch is open. The Delayed Rinse and Fill feature can be set in conjunction with this option if desired.

Note: In a twin alternating system each control must have a separate dP signal or dP switch. One dP signal or one dP switch cannot be used for both controls. Press NEXT to go to Step 5CS. Press REGEN to return to previous step.

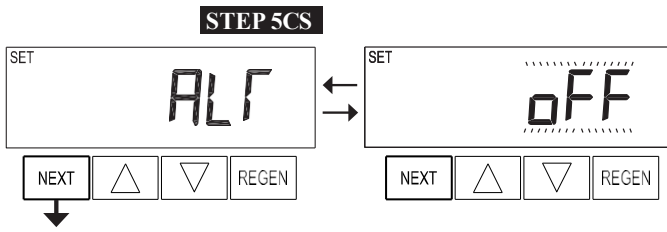

Step 5CS – ALT MAV Output: Use ▼ or ▲ to select one of the following options:

- *nHbP*: The control valve operates with a no hard water bypass.
- *SEPS*: The control valve has a separate source during the regeneration cycle.
- *SYS*: The control valve operates with a Clack system controller.
- *ALT A* or *ALT b*: The control valve acts as an alternator.
- *OFF*: None of these features are used.

This display will not appear if Step 2CS is set to *1.0T* or *1.5T*.

Only use Clack no hard water bypass valves or Clack motorized alternating valves (MAV) with these selections. Clack no hard water bypass valves (1" or 1.25" V3070FF or V3070FM) are not designed to be used with the Alternator or Separate Source functions.

Configuring the Control Valve for No Hard Water Bypass Operation:

Select *nHbP* for control operation. For no hard water bypass operation, the 3-wire communication cable is not used.

Selection requires that a connection to a MAV or a Clack no hard water bypass valve is made to the 2-pin connector labeled *MAV* located on the printed circuit board. If using a MAV, the A port of the MAV must be plugged and the B port connected to the valve outlet. When set to *nHbP*, the MAV will be driven closed before the first regeneration cycle that is not Fill, Softening, or Filtering and be driven open after the last regeneration cycle that is not Fill.

Note: If the control valve enters into an error state during regeneration, the no hard water bypass valve will return to the open position, if not already there.



Configuring the Control Valve for Separate Source Operation:

Select *SEPS* for control operation. For separate source operation, the 3-wire communication cable is not used.

Selection requires that a connection to a Clack motorized alternating valve (MAV) is made to the 2-pin connector labeled *MAV* located on the printed circuit board. The C port of the MAV must be connected to the valve inlet, the A port connected to the separate source used during regeneration, and the B port connected to the feed water supply.

When set to *SEPS*, the MAV will be driven closed before the first regeneration cycle and be driven open after the last regeneration cycle.

Note: If the control valve enters into an error state during regeneration mode, the MAV will return to the open position, if not already there.



Configuring the Control Valve to Operate with Clack System Controller:


Select *SYS* to link control valve to the Clack system controller. For communication between the control valve and the system controller, a 3-wire communication cable is required.

Selection requires that a connection to a Clack no hard water bypass (V3070FF or V3070FM) be made to the 2-pin connector labeled *MAV* located on the printed circuit board for WS1 and WS1.25 control valves. For valve types WS1.5 and WS2, a connection from a Clack no hard water bypass (V3097-BSPT or V3098-BSPT) to the 2-pin connector labeled *MAV* located on the printed circuit board is required.




Configuring the Control Valve to Act as an Alternator:

Prior to starting the programming steps, connect the communication cable to each control valve board's 3-pin connector labeled <i>COMM CABLE</i> . Also connect the meter cord to either control valve to the 3-pin connector labeled <i>METER</i> .			
		Softener Valve Programming Steps	
Configuration Settings	Step 5CS	Set to <i>ALTA</i> Connect the outlet plumbing of ALT A valve to the MAV's A port and connect the MAV's 2-pin wire connector to the 2-pin connector labeled <i>DRIVE</i> on the ALT A valve.	Set to <i>ALTb</i> Connect the outlet plumbing of ALT b valve to the MAV's B port. No electrical connections are required between the ALT b valve and the MAV.
Softener System Setup	Step 6S	Set Ionic Capacity.	Set Ionic Capacity.
Softener System Setup	Step 7S	Set to <i>AUTO</i> .	Set to <i>AUTO</i> .
Softener System Setup	Step 8S	Set Regeneration Time Option to <i>on 0</i> .	Set Regeneration Time Option to <i>on 0</i> .
Installer Display Settings	Step 3I	Set Day Override to <i>oFF</i> .	Set Day Override to <i>oFF</i> .
If set up for a filter, set Volume Capacity in Step 4F; set Regeneration Time Option in Step 5F to <i>on 0</i> ; and set Day Override in Step 3I to <i>oFF</i> .			

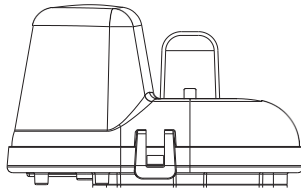

Retracted

Valve A in Service Position =
MAV piston rod retracted

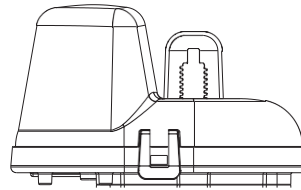

Extended


Valve B in Service Position =
MAV piston rod extended

Clack Twin Alternator Operations:

- Twin alternating systems can be programmed with a day override setting combined with the normal volume-based regeneration programming. A twin alternating system in this configuration will then regenerate based on the volume used or the day override if there is a period of low water usage.
- Twin alternating systems can be programmed as a time clock only based regenerating system. In this configuration, the days remaining are counted only on the unit that is in service. The unit in standby mode only notes days in diagnostics, which results in time clock only twin regeneration initiation.
- Twin alternating systems can be programmed for a delayed regeneration time. The system will allow an immediate transfer of the MAV to switch tanks and place a fully regenerated unit in service once a unit becomes exhausted. The exhausted unit will then be placed into standby mode and allowed to have a delayed regeneration at the pre-set time.

WS1, WS1.25, and WS1.5 Valves

For Clack alternator systems using WS1, WS1.25, and WS1.5 valves, there will be an option to delay the last 2 cycles of regeneration (Rinse and Fill). This feature splits the regeneration into 2 portions. The first portion of the regeneration will start immediately and all programmed cycles before Rinse and Fill will be performed. After all programmed cycles before Rinse and Fill are completed, the control valve will drive to the service position (displaying *Delayed Rinse + Fill Pending*). When the volume of the online unit is depleted to 10% of its programmed capacity, the control valve will be triggered to finish the second portion of the regeneration. Once Rinse and Fill cycles are complete, the valve will re-enter standby mode until requested to come online for service. Set to *oFF* to deactivate this feature.


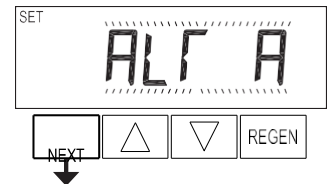


WS2 Valve


For Clack alternator systems using the WS2 valve, when NEXT is pressed after selecting *ALTA* or *ALT B*, a display will allow the user to set the length of pre-service rinse time for the standby tank just prior to returning to service. Set to *OFF* to deactivate this feature. With *1.0T* or *1.5T* set, the same display appears and is set in a similar manner.

Note: If the control valve is in an error state during regeneration mode, the MAV will close the B port and keep open the A port until the error is corrected and reset.

Press NEXT to go to Step 6CS. Press REGEN to return to previous step.

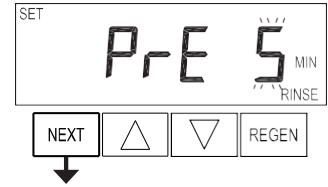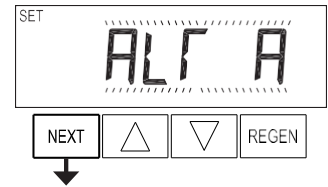

STEP 6CS

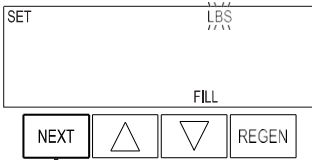

EXIT TO DISPLAY SCREENS

 
Step 6CS – Fill Units: If set as a softener, Step 2CS is set to *1.5* or *1.5T*, and Fill is part of the Regeneration Cycle Sequence, fill units of *MIN* or *LBS* can be selected.

Press NEXT to exit OEM Configuration Setup. Press REGEN to return to previous step.




OEM Softener System Setup

STEP 1S

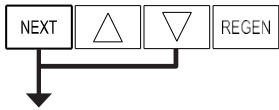


Step 1S – Press NEXT and ▼ simultaneously for 5 seconds and release. If screen in Step 2S does not appear, the lock on the valve is activated. To unlock, press ▼, NEXT, ▲, and REGEN in sequence, and try again.

STEP 2S

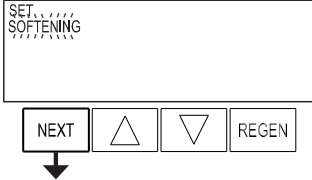


Step 2S – Treatment Type: Use ▼ or ▲ to select *SOFTENING*. Press NEXT to go to Step 3S. Press REGEN to exit OEM Softener System Setup.

STEP 3S

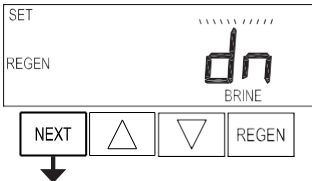

Step 3S – Brining Direction: Use ▼ or ▲ to select *UP* or *dn*. Prior to selecting the upflow regeneration cycle, verify that the correct body, main piston, regenerant piston, and stack are being used and that the injector plug(s) are in the correct location. Refer to the Service Manual for drawings and part numbers. Press NEXT to go to Step 4S. Press REGEN to return to previous step.

STEP 4S

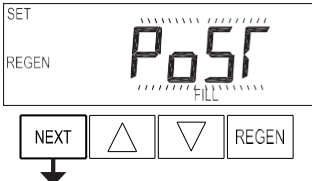


Step 4S – Refill Option: Use ▼ or ▲ to select one of the following options:

- *PoST*: The brine tank refills after the final rinse.
- *PrE*: The brine tank refills 4 hours before the regeneration time set.


Press NEXT to go to Step 5S. Press REGEN to return to previous step.

STEP 5S

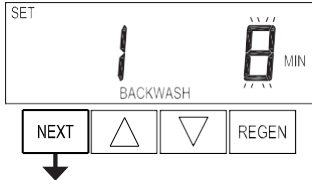


Step 5S – Cycle Durations: Use ▼ or ▲ to set the value for the first cycle. Value ranges and units will vary depending on the cycle, see Table 1 for more detail. Press NEXT to set the value for the next cycle. Repeat for all cycles. Once a value is set for all cycles, press NEXT to go to Step 6S. Press REGEN to return to previous step.

STEP 6S

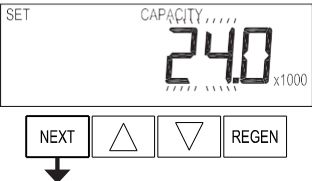

Step 6S – Ionic Capacity: Use ▼ or ▲ to set the ionic capacity. The ionic capacity is based on the volume of resin and LBS of salt fill previously selected. Press NEXT to go to Step 7S. Press REGEN to return to previous step.

STEP 7S

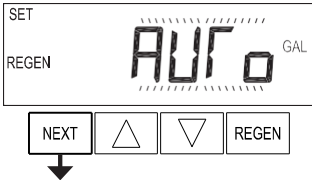

Step 7S – Volume Capacity: Use ▼ or ▲ to select one of the following options:

- *AUTO*: Capacity will be automatically calculated and reserve capacity will be automatically estimated.
- *oFF*: If this option is selected, regeneration trigger must be set in Step 7S(A).
- A number: Regeneration initiation will be based on the value specified (in gallons).

See Setting Options Table for more detail. Press NEXT to go to Step 8S. Press REGEN to return to previous step.

STEP 7S(A)




Step 7S(A) – Regeneration Trigger: Use ▼ or ▲ to select one of the following options:

- *28 day:* Regeneration will be triggered by Day Override set in Installer Settings.
- *7 day:* Regeneration will be triggered on specific days of the week.



This display will only appear if Step 7S is set to *oFF*. Press NEXT to go to Step 8S. Press REGEN to return to previous step.

STEP 8S

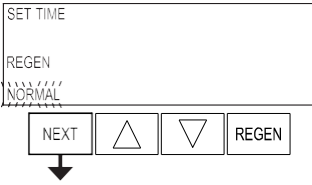

Step 8S – Regeneration Time Option: Use ▼ or ▲ to select one of the following options:


- *NORMAL:* Regeneration will occur at the preset time.
- *on 0:* Regeneration will occur immediately when the volume capacity reaches 0 (zero).
- *NORMAL + on 0:* Regeneration will occur at one of the following:
 - the preset time when the volume capacity falls below the reserve or the specified number of days between regenerations is reached, whichever comes first; or
 - immediately after 10 minutes of no water usage when the volume capacity reaches 0 (zero).

This option will not be available if Step 5CS is set to *ALTA* or *ALT b* or if Step 2CS is set to *1.0T* or *1.5T*.

This display will not appear if Step 7S is set to *oFF* or if Step 5CS is set to *SYS*. See Setting Options Table for more detail.

Press NEXT to go to Step 9S. Press REGEN to return to previous step.


STEP 9S

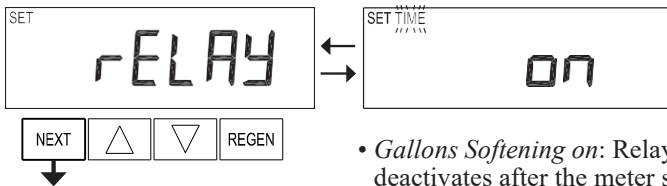

Step 9S – Relay Output: Use ▼ or ▲ to select one of the following options:

- *Time on:* Relay activates a set time after the start of a regeneration and deactivates after a set period of time. The start of regeneration is defined as the first Backwash cycle, Dn Brine cycle, or UP Brine cycle whichever comes first.
 - *Gallons Softening on:* Relay activates after a set volume has been used while in service and deactivates after the meter stops registering flow and the set time period has expired.
 - *Gallons Softening Regen on:* Relay activates after a set volume has been used while in service or during regeneration and deactivates after the meter stops registering flow and the set time period has expired.
 - *ERROR:* Relay closes whenever the valve enters an error state and immediately deactivates when the control exits the error state. Step 9S(A) and Step 9S(B) will not appear if this option is selected.
 - *Off:* Feature not used. Step 9S(A) and Step 9S(B) will not appear if this option is selected.
- Press NEXT to go to Step 9S(A). Press REGEN to return to previous step.

STEP 9S(A)

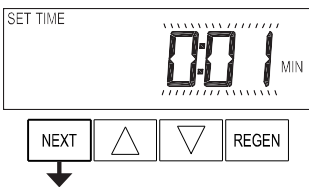


Step 9S(A) – Relay Setpoint Actuation: Use ▼ or ▲ to select one of the following options:

- *Relay Actuation Time:* Set the length of time after the start of regeneration prior to relay activation (Range: 1 second – 200 minutes). The start of regeneration is defined as the first Backwash cycle, Dn Brine cycle, or UP Brine cycle, whichever comes first.
- *Relay Actuation Gallons:* Set the number of gallons that will be treated prior to relay activation (Range: 1 – 200).

Press NEXT to go to Step 9S(B). Press REGEN to return to previous step.

STEP 9S(B)

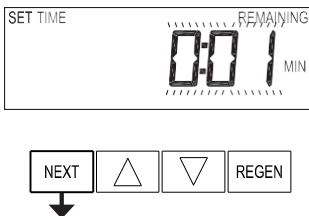

Step 9S(B) – Relay Duration: Use ▼ or ▲ to set the length of time the relay will stay active prior to deactivation. If Step 9S is set to *Time on*, value range is 1 second – 200 minutes. If Step 9S is set to *Gallons Softening on* or *Gallons Softening Regen on*, value range is 1 second – 20 minutes.

Press NEXT to exit OEM Softener System Setup. Press REGEN to return to previous step.

EXIT OEM SOFTENER SYSTEM SETUP

Setting Options Table


Filters should only use shaded options

Volume Capacity	Regeneration Time Option	Day Override	Result ¹
AUTO	NORMAL	oFF	Reserve capacity automatically estimated. Regeneration occurs at the next regeneration time when volume capacity falls below the reserve capacity.
AUTO	NORMAL	Any number	Reserve capacity automatically estimated. Regeneration occurs at the next regeneration time when volume capacity falls below the reserve capacity or the specified number of days between regenerations is reached, whichever comes first.
Any number	NORMAL	oFF	Reserve capacity <u>not</u> automatically estimated. Regeneration occurs at the next regeneration time when volume capacity reaches 0.
oFF	NORMAL (not adjustable)	Any number	Reserve capacity <u>not</u> automatically estimated. 28 day: Regeneration occurs at the next regeneration time when the specified number of days between regenerations is reached. 7 day: Regeneration will occur on the day(s) of the week set in Installer Settings.
Any number	NORMAL	Any number	Reserve capacity <u>not</u> automatically estimated. Regeneration occurs at the next regeneration time when volume capacity reaches 0 or the specified number of days between regenerations is reached, whichever comes first.
AUTO	On 0	oFF	Reserve capacity automatically estimated. Regeneration occurs immediately when volume capacity reaches 0. Time of regeneration will not be allowed to be set because regeneration will always occur when volume capacity reaches 0.
Any number	On 0	oFF	Reserve capacity <u>not</u> automatically estimated. Regeneration occurs immediately when volume capacity reaches 0.
AUTO	NORMAL + on 0	oFF	Reserve capacity automatically estimated. Regeneration occurs at the next regeneration time when volume capacity falls below the reserve capacity, or regeneration occurs after 10 minutes of no water usage when volume capacity reaches 0.
AUTO	NORMAL + on 0	Any number	Reserve capacity automatically estimated. Regeneration occurs at the next regeneration time when volume capacity falls below the reserve capacity or the specified number of days between regenerations is reached, or regeneration occurs after 10 minutes of no water usage when volume capacity reaches 0.
Any number	NORMAL + on 0	Any number	Reserve capacity <u>not</u> automatically estimated. Regeneration occurs at the next regeneration time when the specified number of days between regenerations is reached, or regeneration occurs after 10 minutes of no water usage when volume capacity reaches 0.

¹ Reserve Capacity estimate is based on history of water usage. Reserve capacity estimate is not available with alternator systems or twin tank valves.


OEM Filter System Setup

 STEP 1F

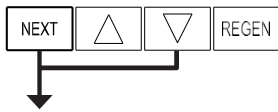

Step 1F – Press NEXT and ▼ simultaneously for 5 seconds and release. If screen in Step 2CS does not appear, the lock on the valve is activated. To unlock, press ▼, NEXT, ▲, and REGEN in sequence, and try again.


STEP 2F

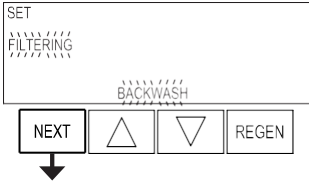

Step 2F – Treatment Type: Use ▼ or ▲ to select *FILTERING BACKWASH* or *FILTERING REGEN* (see table). Press NEXT to go to Step 3F. Press REGEN to exit OEM Filter System Setup.




STEP 3F

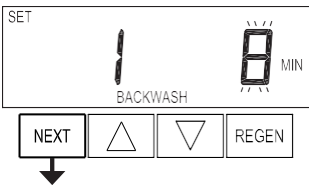

Step 3F – Cycle Durations: Use ▼ or ▲ to set the value for the first cycle. Value ranges and units will vary depending on the cycle, see Table 1 for more detail. Press NEXT to set the value for the next cycle. Repeat for all cycles. Once a value is set for all cycles, press NEXT to go to Step 4F. Press REGEN to return to previous step.

STEP 4F

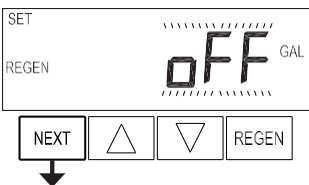

Step 4F – Volume Capacity: Use ▼ or ▲ to select one of the following options:

- *oFF*: If this option is selected, regeneration trigger must be set in Step 4F(A).
- A number: Regeneration initiation will be based on the value specified (in gallons). See Setting Options Table for more detail.

Press NEXT to go to Step 4F(A). Press REGEN to return to previous step.

STEP 4F(A)




Step 4F(A) – Regeneration Trigger: Use ▼ or ▲ to select one of the following options:

- *28 day*: Regeneration will be triggered by Day Override set in Installer Settings.
- *7 day*: Regeneration will be triggered on specific days of the week.

This display will only appear if Step 4F is set to *oFF*. Press NEXT to go to Step 5F. Press REGEN to return to previous step.



STEP 5F

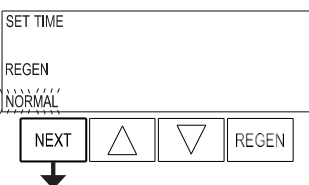


Step 5F – Regeneration Time Option: Use ▼ or ▲ to select one of the following options:

- *NORMAL*: Regeneration will occur at the preset time.
- *on 0*: Regeneration will occur immediately when the volume capacity reaches 0 (zero).
- *NORMAL + on 0*: Regeneration will occur at one of the following:
 - the preset time when the volume capacity falls below the reserve or the specified number of days between regenerations is reached, whichever comes first; or
 - immediately after 10 minutes of no water usage when the volume capacity reaches 0 (zero).
 This option will not be available if Step 5CS is set to *ALT A* or *ALT b* or if Step 2CS is set to *1.0T* or *1.5T*.

This display will not appear if Step 4F is set to *oFF* or if Step 5CS is set to *SYS*. See Setting Options Table for more detail. Press NEXT to go to Step 6F. Press REGEN to return to previous step.

STEP 6F

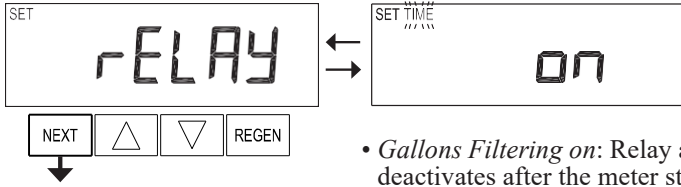


Step 6F – Relay Output: Use ▼ or ▲ to select one of the following options:

- *Time on:* Relay activates a set time after the start of a regeneration and deactivates after a set period of time. The start of regeneration is defined as the first Backwash cycle or Dn Brine cycle, whichever comes first.

- *Gallons Filtering on:* Relay activates after a set volume has been used while in service and deactivates after the meter stops registering flow and the set time period has expired.
- *Gallons Filtering Regen on:* Relay activates after a set volume has been used while in service or during regeneration and deactivates after the meter stops registering flow and the set time period has expired.
- *ERROR:* Relay closes whenever the valve enters an error state and immediately deactivates when the control exits the error state. Step 6F(A) and Step 6F(B) will not appear if this option is selected.
- *Off:* Feature not used. Step 6F(A) and Step 6F(B) will not appear if this option is selected. Press NEXT to go to Step 6F(A). Press REGEN to return to previous step.

STEP 6F(A)

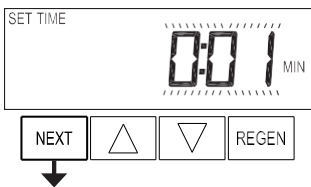


Step 6F(A) – Relay Setpoint Actuation: Use ▼ or ▲ to select one of the following options:

- *Relay Actuation Time:* Set the length of time after the start of regeneration prior to relay activation (Range: 1 second – 200 minutes). The start of regeneration is defined as the first Backwash cycle or Dn Brine cycle, whichever comes first.
- *Relay Actuation Gallons:* Set the number of gallons that will be treated prior to relay activation (Range: 1 – 200).

Press NEXT to go to Step 6F(B). Press REGEN to return to previous step.

STEP 6F(B)

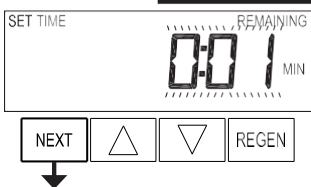

Step 6F(B) – Relay Duration: Use ▼ or ▲ to set the length of time the relay will stay active prior to deactivation. If Step 6F is set to *Time on*, value range is 1 second – 200 minutes. If Step 6F is set to *Gallons Filtering on* or *Gallons Filtering Regen on*, value range is 1 second – 20 minutes.

 
Press NEXT to exit OEM Filter System Setup. Press REGEN to return to previous step.

EXIT OEM FILTER SYSTEM SETUP


Installer Display Settings: 7 Day Regeneration

Note: These displays will only appear if Volume Capacity is set to *oFF* and Regeneration Trigger is set to *7 day*.

STEP 1I Step 1I – Press NEXT and ▲ simultaneously for about 5 seconds and release.

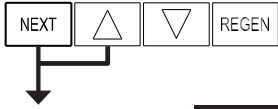


STEP 2I Step 2I – Current Day: Use ▼ or ▲ to set the current day of the week:

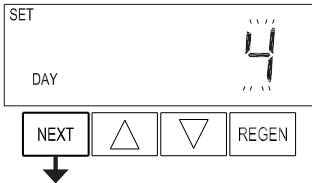

- 1: Sunday
 - 2: Monday
 - 3: Tuesday
 - 4: Wednesday
 - 5: Thursday
 - 6: Friday
 - 7: Saturday
- Press NEXT to go to Step 3I. Press REGEN to exit Installer Display.

STEP 3I Step 3I – Regeneration Days: Use ▼ or ▲ to turn regeneration *on* or *oFF* for day 1 (Sunday).

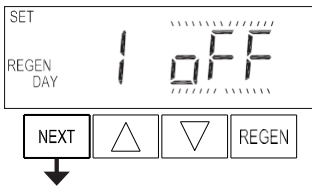

Press NEXT to advance to day 2. Repeat for each day of the week. After completing day 7, press NEXT to go to Step 4I. Press REGEN to go to previous display.

STEP 4I Step 4I – Next Regeneration Time: Use ▼ or ▲ to set the hour of day for regeneration. The default time is 2:00. Press NEXT to set the minutes.



Once the minutes are set, press NEXT to go to exit Installer Display Settings. Press REGEN to return to previous step.

EXIT INSTALLER DISPLAY SETTINGS

Installer Display Settings: 28 Day Regeneration / Auto

Note: These displays will only appear if Volume Capacity is set to anything other than *oFF* or if Regeneration Trigger is set to 28 day.

STEP 1I Step 1I – Press NEXT and ▲ simultaneously for about 5 seconds and release.



STEP 2I

Step 2I – Hardness: Use ▼ or ▲ to set the amount of influent hardness.

This display will only appear if Step 7S is set to *Auto*.

Press NEXT to go to Step 3I. Press REGEN to exit Installer Display Settings.



STEP 3I

Step 3I – Day Override: When Regeneration Trigger is set to 28 day, sets the number of days between regenerations. When Volume Capacity is set to *Auto* or a number, sets the maximum number of days between regenerations. Use ▼ or ▲ to select one of the following options:

- A number (1 – 28): Regeneration will be called for every set number of days even if sufficient volume of water was not used to call for a regeneration.
- *oFF*: Regeneration initiation is based solely on volume used.

See Setting Options Table for more detail on setup.

 
Press NEXT to go to Step 4I. Press REGEN to return to previous step.



STEP 4I


Step 4I – Next Regeneration Time: Use ▼ or ▲ to set the hour of day for regeneration. The default time is 2:00. This display will show *REGEN on 0 GAL* if Regeneration Time Option is set to *on 0*. Press NEXT to set the minutes.

Once the minutes are set, press NEXT to exit Installer Display Settings. Press REGEN to return to previous step.

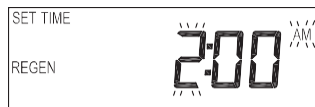

EXIT INSTALLER DISPLAY SETTINGS

Diagnostics

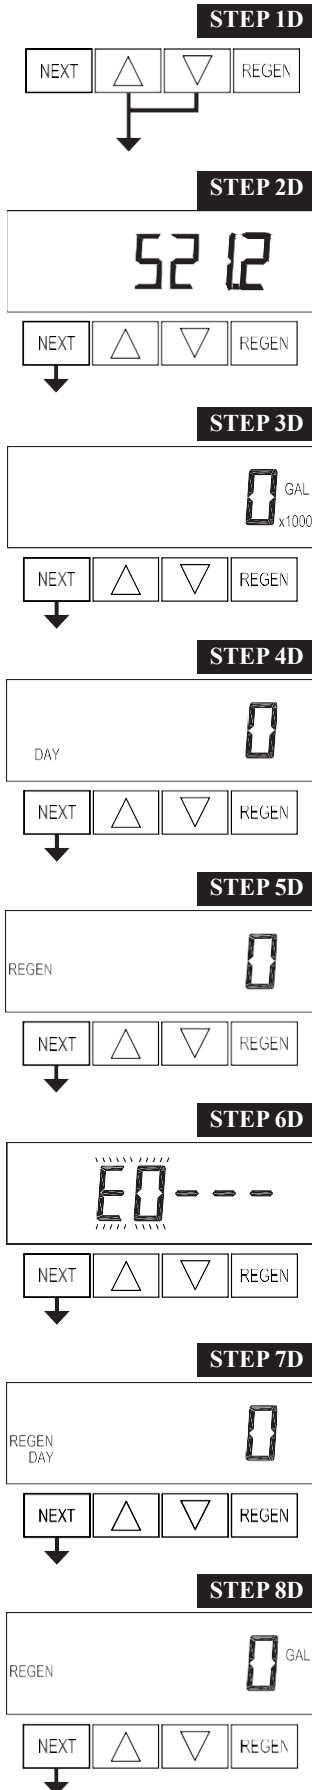

Step 1D – Press ▼ and ▲ simultaneously for 5 seconds and release. If screen in Step 2D does not appear, the lock on the valve is activated. To unlock, press ▼, NEXT, ▲, and REGEN in sequence, and try again.

Step 2D – Software Version.

Press NEXT to go to Step 3D. Press REGEN to exit Diagnostics.

Step 3D – Total Volume Used Since Startup: This display will show zero if a water meter is not installed.

Press NEXT to go to Step 4D. Press REGEN to return to previous step.

Step 4D – Total Days Since Startup.

Press NEXT to go to Step 5D. Press REGEN to return to previous step.

Step 5D – Total Regenerations Since Startup.

Press NEXT to go to Step 6D. Press REGEN to return to previous step.

Step 6D – Error Log: Use ▼ or ▲ to scroll through the last 10 errors generated by the control during operation.

Press NEXT to go to Step 7D. Press REGEN to return to previous step.


Step 7D – Days Since Last Regeneration.

Press NEXT to go to Step 8D. Press REGEN to return to previous step.

Step 8D – Volume Since Last Regeneration: This display will show zero when a water meter is not installed.

Press NEXT to go to Step 9D. Press REGEN to return to previous step.

STEP 9D

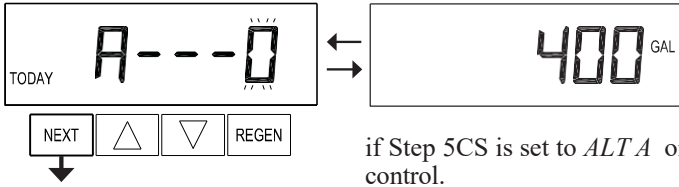


Step 9D – Reserve History, Last 7 Days: If the valve is set up as a softener, a meter is installed, and Volume Capacity is set to *AUTO*, this display shows the reserve capacity for each of the last 7 days. Use ▼ or ▲ to scroll. Day 0 is today, day 1 is yesterday, etc.

This display will not appear if Step 2CS is set to *1.0T* or *1.5T*, if Step 5CS is set to *ALTA* or *ALT b*, or anytime the reserve capacity is not determined by the control.

Press NEXT at any time to go to Step 10D. Press REGEN to return to previous step.


STEP 10D

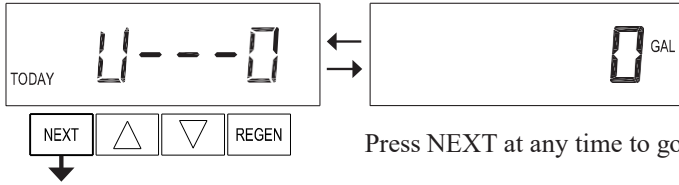

Step 10D – Usage History, Last 63 Days: This display shows the volume of water treated on each of the last 63 days. Use ▼ or ▲ to scroll. Day 0 is today, day 1 is yesterday, etc. If a regeneration occurred on the day, the word *REGEN* will also be displayed. This display will show dashes if a water meter is not installed.

Press NEXT at any time to go to Step 11D. Press REGEN to return to previous step.

STEP 11D

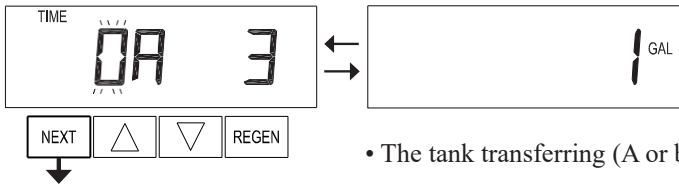

Step 11D – Twin Tank Transfer History: This display will only appear if Step 2CS is set to *1.0T* or *1.5T*. Use ▼ or ▲ to scroll through the last 10 tank transfers. This display shows, from left to right:


- The transfer number (0 – 9) with 0 being the most recent transfer.
- The tank transferring (A or b).

• How many hours ago the transfer occurred (999 hour maximum).

The display alternates with the volume that was treated before the tank transferred.

Press NEXT at any time to go to Step 12D. Press REGEN to return to previous step.

STEP 12D

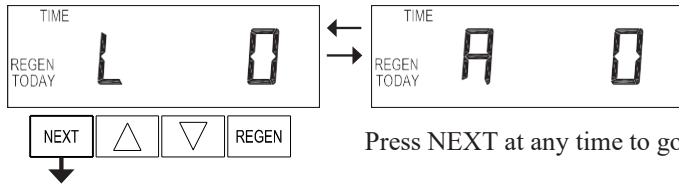


Step 12D – MAV Drive History (Retracted): This display shows the history of MAV output to drive the piston rod into the valve. This display will only appear if the MAV Output is active. *L* is the latest drive time and *A* is the average drive time.

Drive time is measured in 1/100 of a second, meaning a 17.10 second move is displayed as *1710*.


Press NEXT at any time to go to Step 13D. Press REGEN to return to previous step.

Press and hold ▼ and ▲ for 3 seconds while in Step 12D to reset the MAV Drive History in both the retracted and extended piston rod position. To view the old MAV drive history data for retracted and extended rod position, press and hold REGEN and ▲ while in Step 12D.

Press NEXT to advance display to the old MAV drive history.

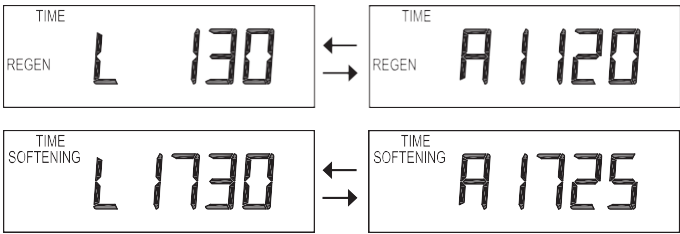

STEP 13D

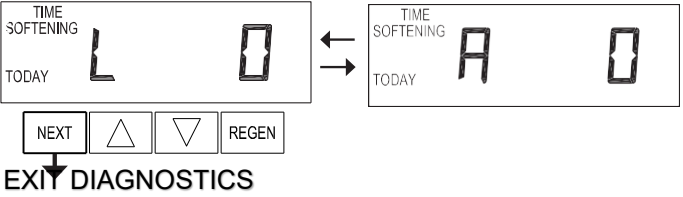

Step 13D – MAV Drive History (Extended): This display shows the history of MAV output to drive the piston rod out of the valve. This display will only appear if the MAV Output is active. *L* is the latest drive time and *A* is the average drive time.

Drive time is measured in 1/100 of a second, meaning a 17.10 second move is displayed as 1710.

Press and hold ▼ and ▲ for 3 seconds while in Step 13D to reset the MAV drive history in both the extended and retracted piston rod position. To view the old MAV drive history data, see Step 12D.

Press NEXT at any time exit Diagnostics. Press REGEN to return to previous step.

Troubleshooting Procedures



Problem	Possible Cause	Solution
1. No Display on PC Board	a. No power at electric outlet	a. Repair outlet or use working outlet
	b. Control valve Power Adapter not plugged into outlet or power cord end not connected to PC board connection	b. Plug Power Adapter into outlet or connect power cord end to PC Board connection
	c. Improper power supply	c. Verify proper voltage is being delivered to PC Board
	d. Defective Power Adapter	d. Replace Power Adapter
	e. Defective PC Board	e. Replace PC Board
2. PC Board does not display correct time of day	a. Power Adapter plugged into electric outlet controlled by light switch	a. Use uninterrupted outlet
	b. Tripped breaker switch and/or tripped GFI	b. Reset breaker switch and/ or GFI switch
	c. Power outage	c. Reset time of day. If PC Board has battery backup present the battery may be depleted. See Front Cover and Drive Assembly drawing for instructions.
	d. Defective PC Board	d. Replace PC Board
3. Display does not indicate that water is flowing. Refer to user instructions for how the display indicates water is flowing	a. Bypass valve in bypass position	a. Turn bypass handles to place bypass in service position
	b. Meter is not connected to meter connection on PC Board	b. Connect meter to three pin connection labeled METER on PC Board
	c. Restricted/ stalled meter turbine	c. Remove meter and check for rotation or foreign material
	d. Meter wire not installed securely into three-pin connectors	d. Verify meter cable wires are installed securely into three-pin connector labeled METER
	e. Defective meter	e. Replace meter
	f. Defective PC Board	f. Replace PC Board
4. Control valve regenerates at wrong time of day	a. Power outage	a. Reset time of day. If PC Board has battery backup present the battery may be depleted. See Front Cover and Drive Assembly drawing for instructions.
	b. Time of day not set correctly	b. Reset to correct time of day
	c. Time of regeneration set incorrectly	c. Reset regeneration time
	d. Control valve set at "on 0" (immediate regeneration)	d. Check programming setting and reset to NORMAL (for a delayed regen time)
	e. Control valve set at "NORMAL + on 0" (delayed and/ or immediate)	e. Check programming setting and reset to NORMAL (for a delayed regen time)
5. Time of day flashes on and off	a. Power outage	a. Reset time of day. If PC Board has battery backup present the battery may be depleted. See Front Cover and Drive Assembly drawing for instructions.
6. Control valve does not regenerate automatically when the REGEN button is depressed and held.	a. Broken drive gear or drive cap assembly	a. Replace drive gear or drive cap assembly
	b. Broken Piston Rod	b. Replace piston rod
	c. Defective PC Board	c. Defective PC Board
7. Control valve does not regenerate automatically but does when the REGEN button is depressed and held.	a. Bypass valve in bypass position	a. Turn bypass handles to place bypass in service position
	b. Meter is not connected to meter connection on PC Board	b. Connect meter to three-pin connection labeled METER on PC Board
	c. Restricted/ stalled meter turbine	c. Remove meter and check for rotation or foreign material
	d. Incorrect programming	d. Check for programming error
	e. Meter wire not installed securely into three-pin connectors	e. Verify meter cable wires are installed securely into three-pin connector labeled METER
	f. Defective meter	f. Replace meter
	g. Defective PC Board	g. Replace PC Board

Problem	Possible Cause	Solution
8. Hard or untreated water is being delivered	a. Bypass valve is open or faulty	a. Fully close bypass valve or replace
	b. Media is exhausted due to high water usage	b. Check program settings or diagnostics for abnormal water usage
	c. Meter not registering	c. Remove meter and check for rotation or foreign material
	d. Water quality fluctuation	d. Test water and adjust program values accordingly
	e. No regenerant or low level of regenerant in regenerant tank	e. Add proper regenerant to tank
	f. Control fails to draw in regenerant	f. Refer to Trouble Shooting Guide number 12
	g. Insufficient regenerant level in regenerant tank	g. Check refill setting in programming. Check refill flow control for restrictions or debris and clean or replace
	h. Damaged seal/stack assembly	h. Replace seal/stack assembly
	i. Control valve body type and piston type mix matched	i. Verify proper control valve body type and piston type match
	j. Fouled media bed	j. Replace media bed
9. Control valve uses too much regenerant	a. Improper refill setting	a. Check refill setting
	b. Improper program settings	b. Check program settings to make sure they are specific to the water quality and application needs
	c. Control valve regenerates frequently	c. Check for leaking fixtures that may be exhausting capacity or system is undersized
10. Residual regenerant being delivered to service	a. Low water pressure	a. Check incoming water pressure – water pressure must remain at minimum of 25 psi
	b. Incorrect injector size	b. Replace injector with correct size for the application
	c. Restricted drain line	c. Check drain line for restrictions or debris and clean
11. Excessive water in regenerant tank	a. Improper program settings	a. Check refill setting
	b. Plugged injector	b. Remove injector and clean or replace
	c. Drive cap assembly not tightened in properly	c. Re-tighten the drive cap assembly
	d. Damaged seal/ stack assembly	d. Replace seal/ stack
	e. Restricted or kinked drain line	e. Check drain line for restrictions or debris and or un-kink drain line
	f. Plugged backwash flow controller	f. Remove backwash flow controller and clean or replace
	g. Missing refill flow controller	g. Replace refill flow controller
12. Control valve fails to draw in regenerant	a. Injector is plugged	a. Remove injector and clean or replace
	b. Faulty regenerant piston	b. Replace regenerant piston
	c. Regenerant line connection leak	c. Inspect regenerant line for air leak
	d. Drain line restriction or debris cause excess back pressure	d. Inspect drain line and clean to correct restriction
	e. Drain line too long or too high	e. Shorten length and or height
	f. Low water pressure	f. Check incoming water pressure – water pressure must remain at minimum of 25 psi
13. Water running to drain	a. Power outage during regeneration	a. Upon power being restored control will finish the remaining regeneration time. Reset time of day.
	b. Damaged seal/ stack assembly	b. Replace seal/ stack assembly
	c. Piston assembly failure	c. Replace piston assembly
	d. Drive cap assembly not tightened in properly	d. Re-tighten the drive cap assembly


Problem	Possible Cause	Solution
14. E1, Err – 1001, Err – 101 = Control unable to sense motor movement	a. Motor not inserted full to engage pinion, motor wires broken or disconnected	a. Disconnect power, make sure motor is fully engaged, check for broken wires, make sure two pin connector on motor is connected to the two-pin connection on the PC Board labeled MOTOR. Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.
	b. PC Board not properly snapped into drive bracket	b. Properly snap PC Board into drive bracket and then Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.
	c. Missing reduction gears	c. Replace missing gears
15. E2, Err – 1002, Err – 102 = Control valve motor ran too short and was unable to find the next cycle position and stalled	a. Foreign material is lodged in control valve	a. Open up control valve and pull-out piston assembly and seal/ stack assembly for inspection. Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.
	b. Mechanical binding	b. Check piston and seal/ stack assembly, check reduction gears, check drive bracket and main drive gear interface. Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.
	c. Main drive gear too tight	c. Loosen main drive gear. Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.
	d. Improper voltage being delivered to PC Board	d. Verify that proper voltage is being supplied. Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.
16. E3, Err – 1003, Err – 103 = Control valve motor ran too long and was unable to find the next cycle position	a. Motor failure during a regeneration	a. Check motor connections then Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.
	b. Foreign matter built up on piston and stack assemblies creating friction and drag enough to time out motor	b. Replace piston and stack assemblies. Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.
	c. Drive bracket not snapped in properly and out enough that reduction gears and drive gear do not interface	c. Snap drive bracket in properly then Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.
17. Err – 1004, Err – 104 = Control valve motor ran too long and timed out trying to reach home position	a. Drive bracket not snapped in properly and out enough that reduction gears and drive gear do not interface	a. Snap drive bracket in properly then Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.

Problem	Possible Cause	Solution
<p>18. Err -1006, Err – 106, Err - 116 = MAV/ SEPS/ NHBP/ AUX MAV valve motor ran too long and unable to find the proper park position</p> <p>Motorized Alternating Valve = MAV</p> <p>Separate Source = SEPS</p> <p>No Hard Water Bypass = NHBP</p> <p>Auxiliary MAV = AUX MAV</p>	<p>a. Control valve programmed for ALT A or b, nHbP, SEPS, or AUX MAV without having a MAV or NHBP valve attached to operate that function</p>	<p>a. Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect. Then re-program valve to proper setting.</p>
	<p>b. MAV/ NHBP motor wire not connected to PC Board</p>	<p>b. Connect MAV/ NHBP motor to PC Board two pin connection labeled DRIVE. Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.</p>
	<p>c. MAV/ NHBP motor not fully engaged with reduction gears</p>	<p>c. Properly insert motor into casing, do not force into casing Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.</p>
	<p>d. Foreign matter built up on piston and stack assemblies creating friction and drag enough to time out motor</p>	<p>d. Replace piston and stack assemblies. Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.</p>
<p>19. Err – 1007, Err – 107, Err - 117 = MAV/ SEPS/ NHBP/ AUX MAV valve motor ran too short (stalled) while looking for proper park position</p> <p>Motorized Alternating Valve = MAV</p> <p>Separate Source = SEPS</p> <p>No Hard Water Bypass = NHBP</p> <p>Auxiliary MAV = AUX MAV</p>	<p>a. Foreign material is lodged in MAV/ NHBP valve</p>	<p>a. Open up MAV/ NHBP valve and check piston and seal/ stack assembly for foreign material. Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.</p>
	<p>b. Mechanical binding</p>	<p>b. Check piston and seal/ stack assembly, check reduction gears, drive gear interface, and check MAV/ NHBP black drive pinion on motor for being jammed into motor body. Press NEXT and REGEN buttons for 3 seconds to resynchronize software with piston position or disconnect power supply from PC Board for 5 seconds and then reconnect.</p>


AM1.5 Control Valve Cycle Positions

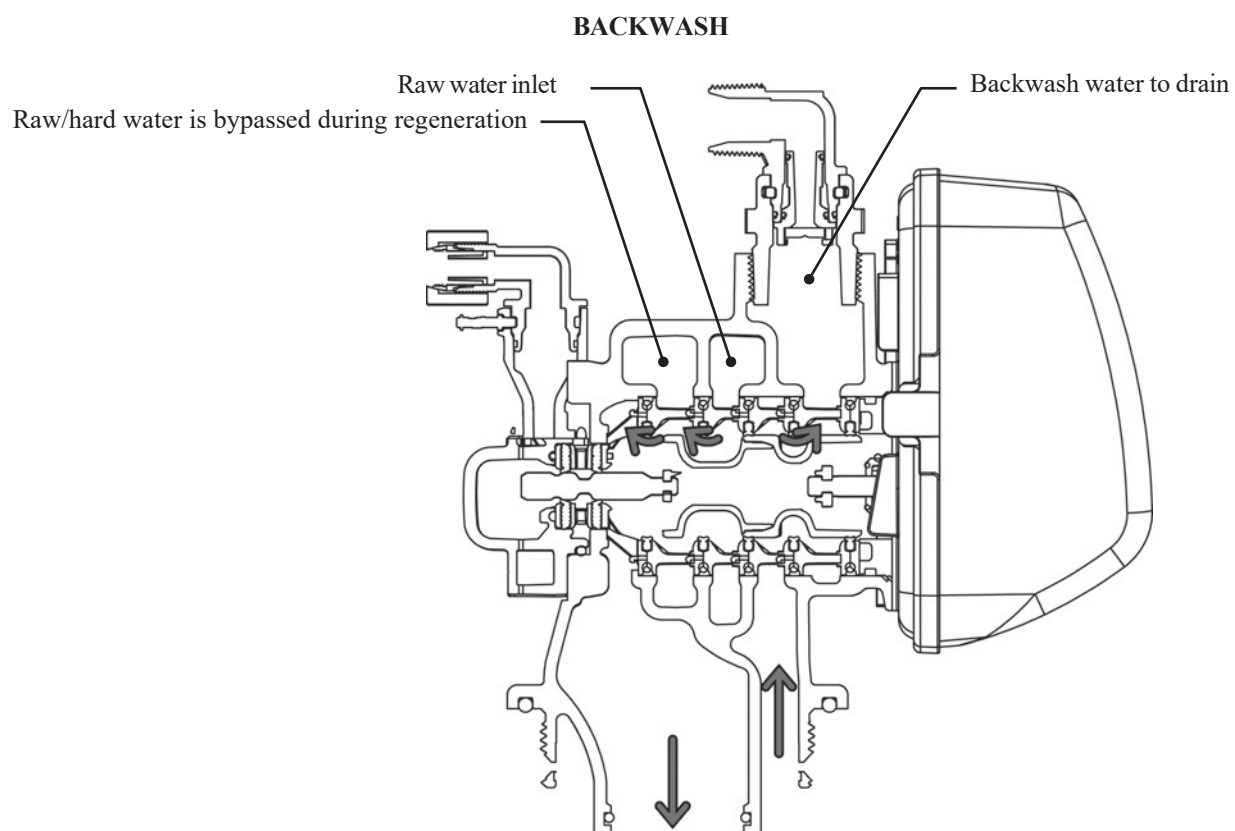
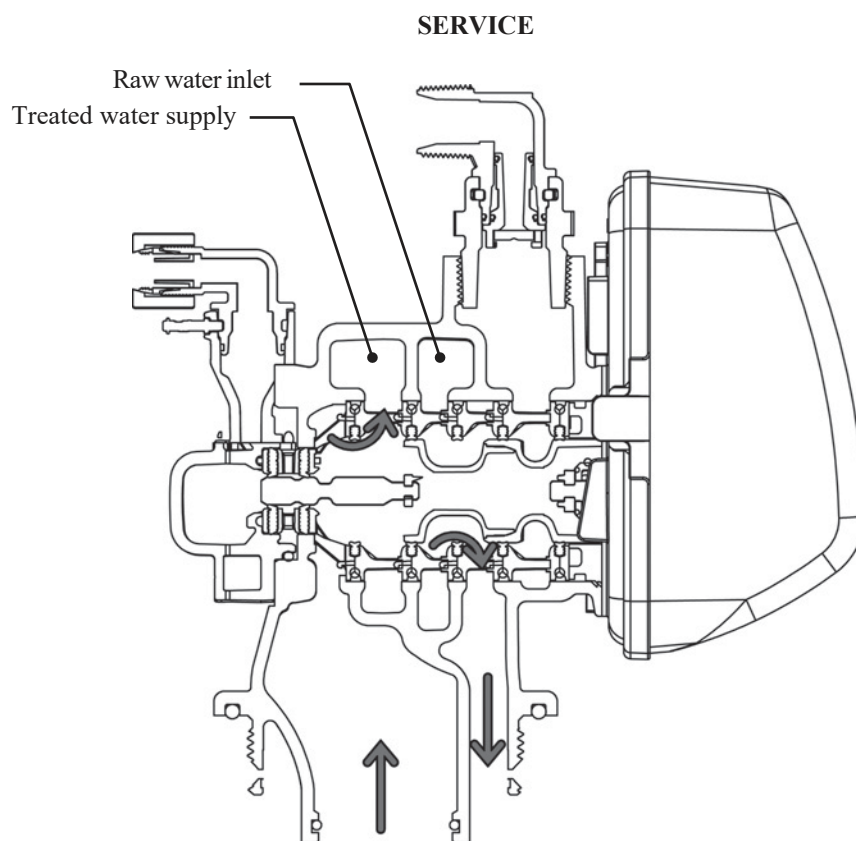


DOWNFLOW BRINE

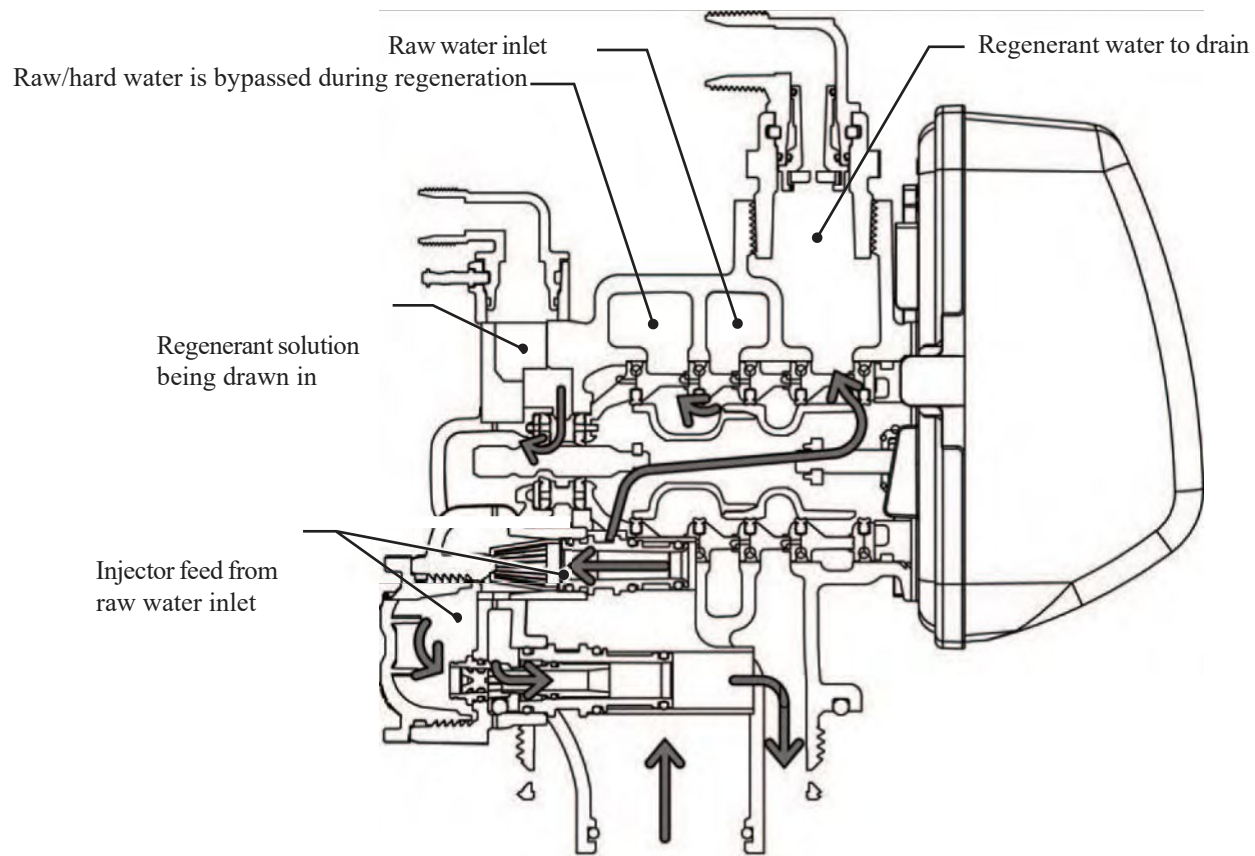

UPFLOW BRINE

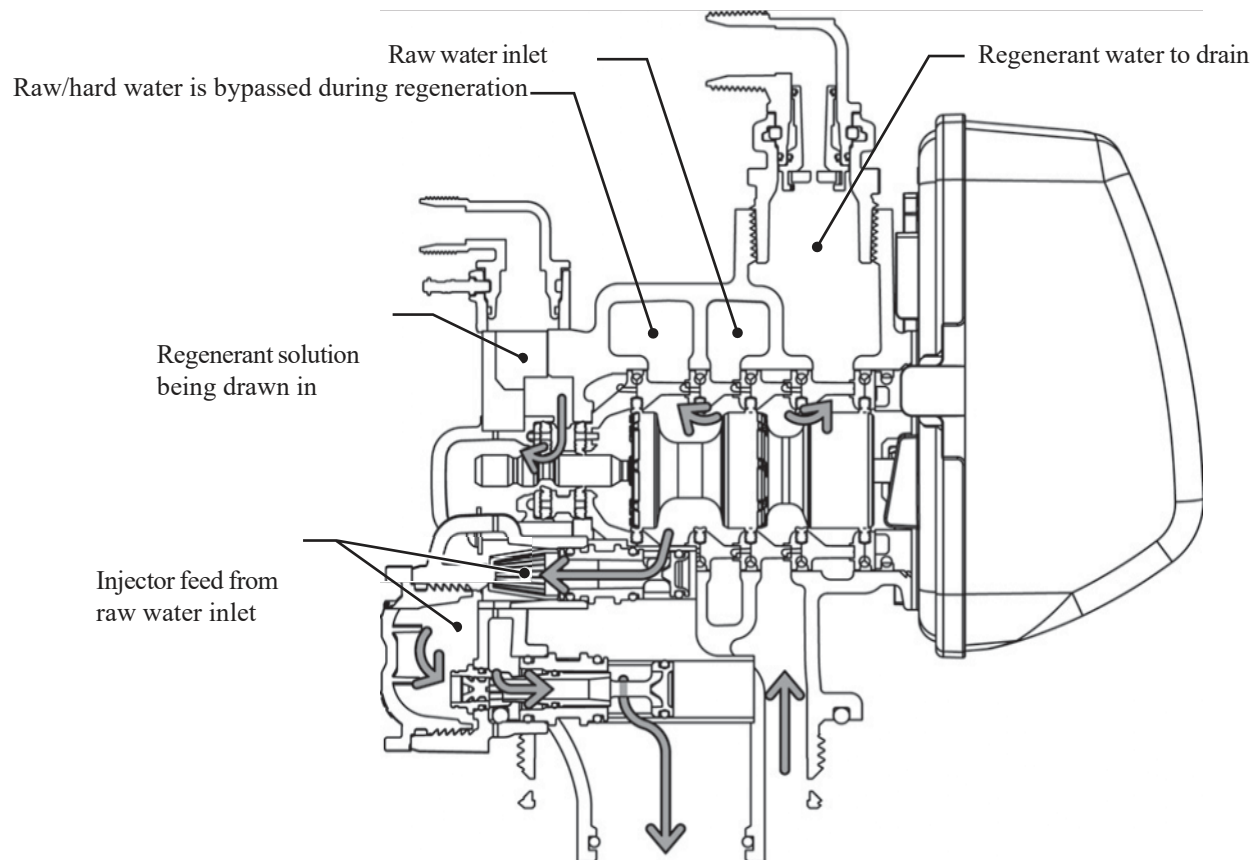


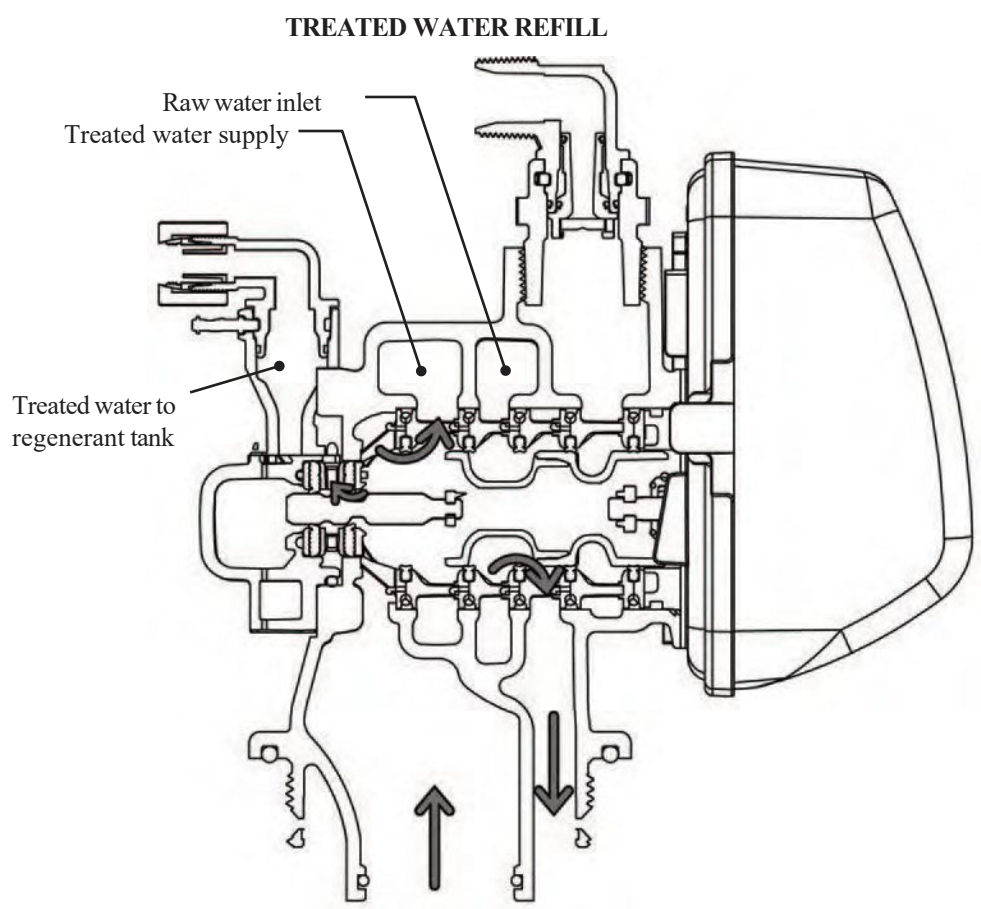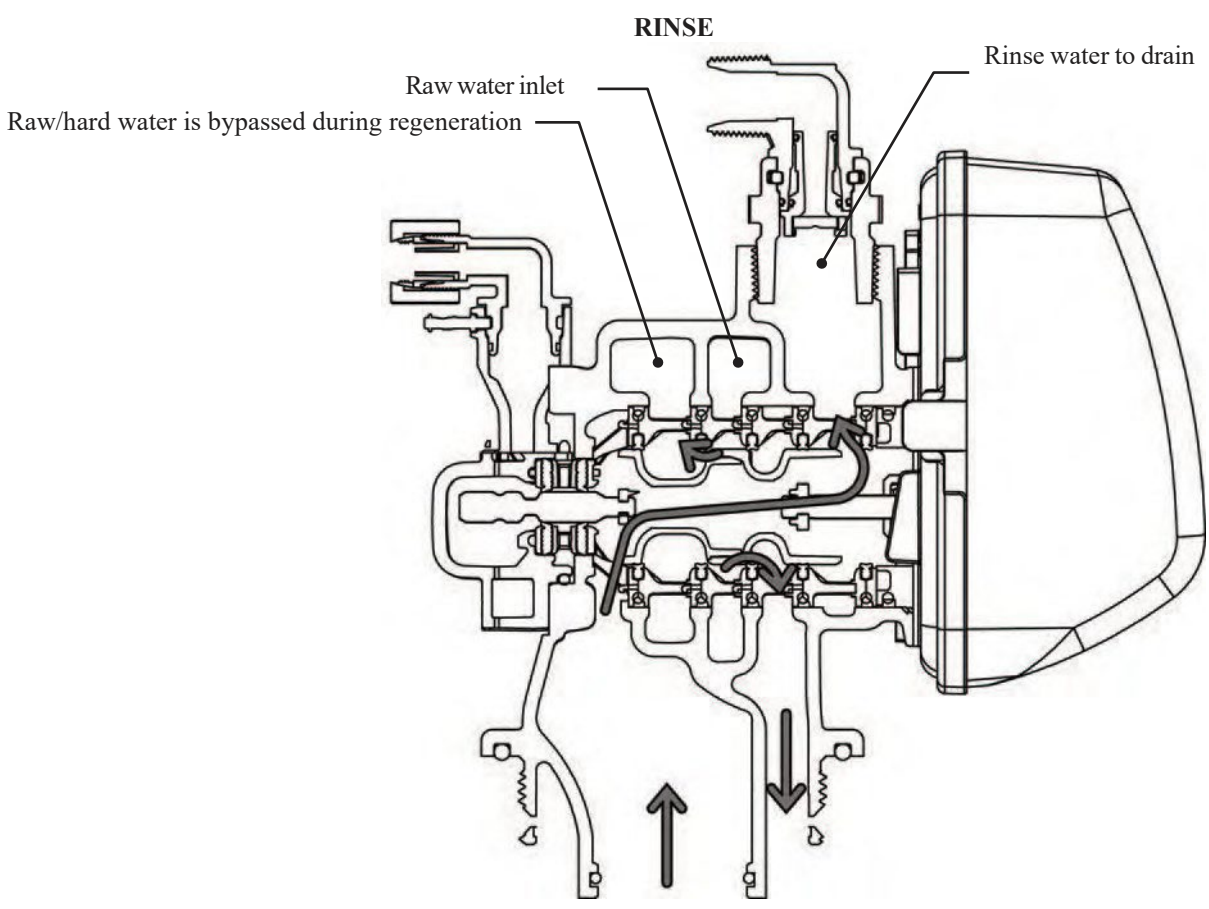

AM1.5 Drive Cap Assembly, Downflow Piston, Upflow Piston, Regenerant Piston, Spacer Stack Assembly and Main Body

Drawing No.	Order No.	Description	Quantity
1	V3004	AM1 DRIVE CAP ASSEMBLY	1
2	V3135	O-RING 228	1
3	V3407	AM1.25/1.5 PISTON DOWNFLOW ASSEMBLY (AMBER IN COLOR)	1
	V4042	AM1.25/1.5 PISTON UPFLOW ASSEMBLY (BLACK IN COLOR)	
4	V3174*	AM1 REGENERANT PISTON	1
5	V3423	AM1.5 BACKPLATE DOWEL	1
6	V3430-01	AM1.5 SPACER STACK ASSEMBLY	1
7	BACK PLATE	REFER TO PROGRAMMING AND COVER DRAWING MANUAL	1
8	V3419	O-RING 347	1
9	V3641	O-RING 225 FOR VALVE BODIES WITH NPT THREADS	1
	V3441	O-RING 226 FOR VALVE BODIES WITH BSPT THREADS	1
10	V3950-01	AM 1.5 NPT VALVE BODY, W/V3468	1
	V3950BSPT-01**	AM 1.5 BSPT VALVE BODY, W/V3465	1
NOT SHOWN	V3468	TEST PORT PLUG, 1/4" NPT	2
	V3465	TEST PORT PLUG, 1/4" BSPT	2
11	D1300	TOP BAFFLE DIFFUSER, 1.5/50MM	1

*V3174 regenerant piston not used for backwash-only valves. V3010-15Z injector plug and V3195-01 refill port plug assembly must be used for backwash-only valves.

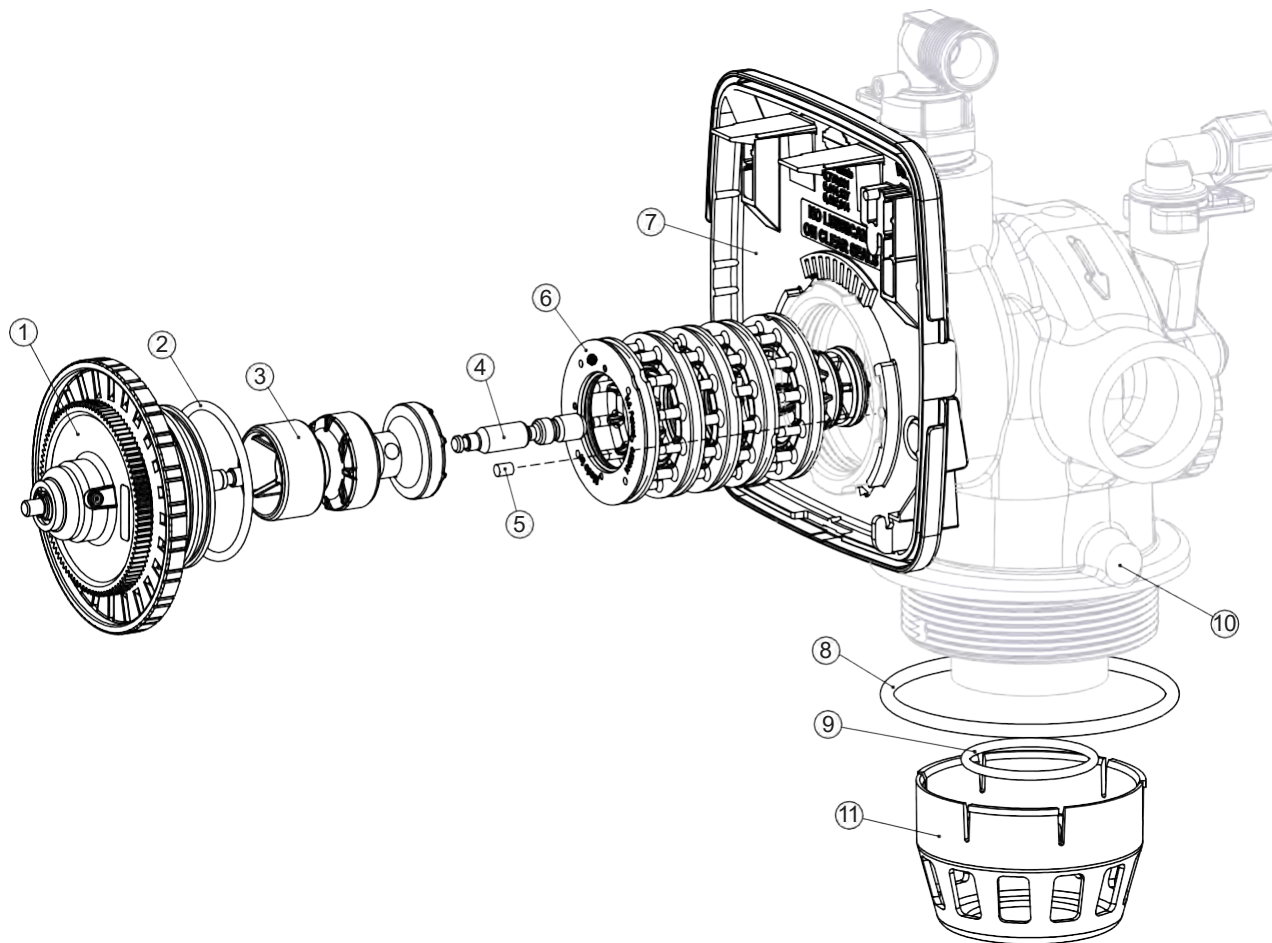

**BSPT threads on inlet and outlet ports on the V3950BSPT-01, NPT threads on drain port

AM1.5 Regenerant Components


Drawing No.	Order No.	Description	Quantity
1	V3967	AM1.5 INJECTOR BODY, WELDED ASSEMBLY	1
2	V3441	O-RING -226	1
3***	V3968	AM1.5 INJECTOR FEED TUBE DOWNFLOW (BLACK IN COLOR)	1
	V3968-01	AM1.5 INJECTOR FEED TUBE UPFLOW (GREY IN COLOR)	
4	V3177-01	AM1 INJECTOR SCREEN	1
5****	V3969	AM1.5 INJECTOR DRAW TUBE DOWNFLOW (BLACK IN COLOR)	1
	V3969-01	AM1.5 INJECTOR DRAW TUBE UPFLOW (GREY IN COLOR)	1
6	V4349	AM15P INJECTOR CAP	1
7	V3152	O-RING -135	1
8	SEE PAGE 33	AM 1.5 INJECTOR	1
9	V3498**	REFILL FLOW CONTROL, 1/2"	1
10	V3428**	AM 1.5 REFILL RETAINER ASSEMBLY (0.5 GPM)	1
11	V3163	O-RING, -019	1
12	H4612	REGENERANT ELBOW W/FLOW CONTROL	1
13	JCPG-8PBLK	NUT, COMPRESSION, 1/2" BLACK	1
14	JCP-P-8	INSERT, POLYTUBE 1/2"	1
15	V3182	REFILL FLOW CONTROL (0.5 GPM)	1
16	H4615	RETAINING CLIP	1
17	V3724	WASHER, FLAT STAINLESS STEEL	4
18	V3642	BOLT, BHCS STAINLESS STEEL 1/4-20X 1 1/4	4
19	V3195-01	REFILL PORT PLUG ASY	1

**Contains a V3182 0.5 gpm flow control

***V3968 and V3968-01 each contain one D1245 O-RING 111 and two V3155 O-RING 112

****V3969 and V3969-01 each contain one V3638 O-RING 113 and two V3157 O-RING 115

Proper RFC orientation directs refill water flow toward the washer face with radius and text.

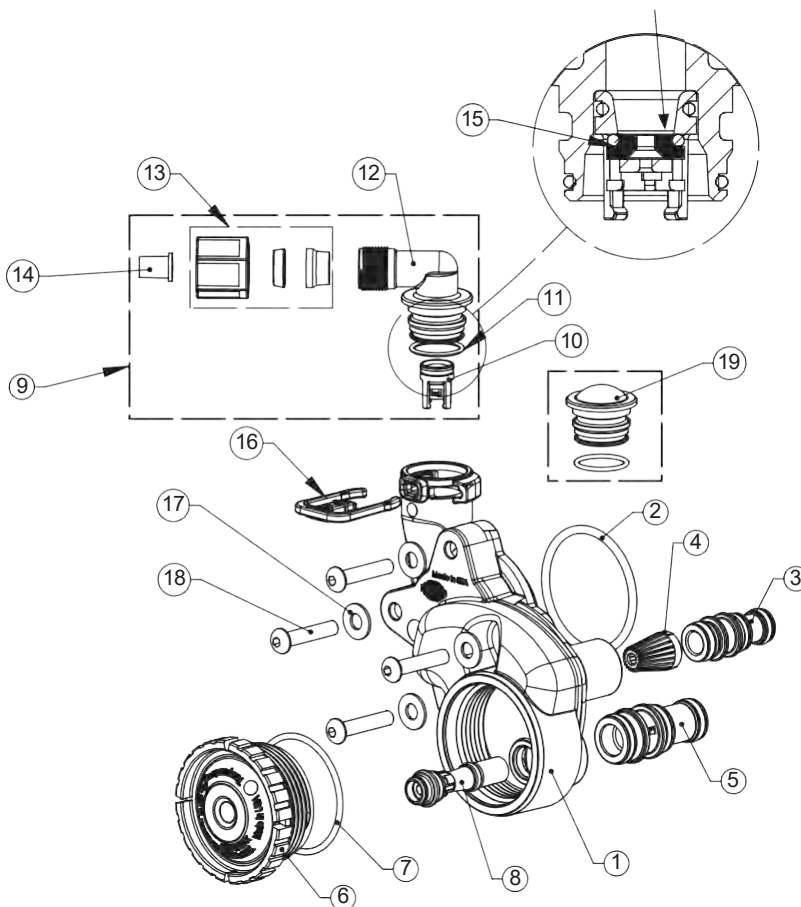


AM 1.5" Injectors

Drawing No.	Order No.	Description	Nozzle Color	Downflow Typical Tank Diameter ¹	Quantity
1	V3010-15B	AM1.5 Injector Asy B	Violet	12"	1
	V3010-15C	AM1.5 Injector Asy C	Red	13"	
	V3010-15D	AM1.5 Injector Asy D	White	14"	
	V3010-15E	AM1.5 Injector Asy E	Blue	16"	
	V3010-15F	AM1.5 Injector Asy F	Yellow	18"	
	V3010-15G	AM1.5 Injector Asy G	Green	21"	
	V3010-15H	AM1.5 Injector Asy H	Orange	24"	
2	V3010-15Z	AM1.5 Injector Plug		NA	

V301015B through V3010-15H injectors include one V3416 O-ring 012 (lower) and one V3171 O-ring 013 (upper).

For Upflow brine application downsize your injector by two tank sizes minimum and refer to the

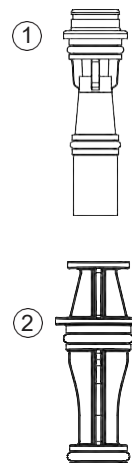

i
n
j
e
c
t
o
r
g
r
a
p
h
s
f
o
r
v
e

rifyin
g
proper
selecti
on.


Drain Line Flow Controls

All drain line flow control housings are shipped without flow control washers.
See the drain line flow control washer section for available flow selections.

Elbow, 0.7 - 10 GPM

Item	Part#	Description	Qty.
	V3158-04	AM Drain Fitting, 3/4" Elbow	
1	V3158-03	Drain Elbow, 3/4 NPT	1
2	V3159-01	DLFC Retainer Assembly	1
3	V3163	O-ring, -019	1
4	H4615	Locking Clip	1
5*	V3983	AM2 DLFC Adapter	1
6	V3162-xx	See DLFC Section	1


*Also available: V3414 AM1.5 DLFC Adapter

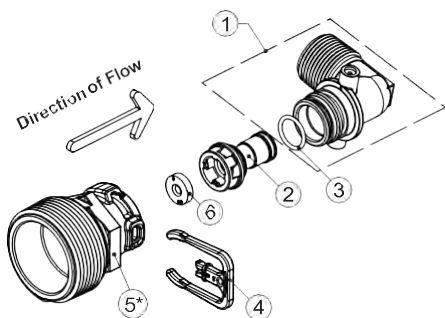

Inline Plastic, 9 - 25 GPM


Item	Part#	Description	Qty.
	V3008-05	AM Drain Fitting, 1" Straight	
1	V3167	AM Drain Fitting Adapter, 1" NPT	1
2	V3166-01	Drain Fitting Body	1
3	V3151	AM1 Nut, QC	1
4	V3150	AM1 Split Ring	1
5	V3105	O-ring -215	1
6	V3163	O-ring -019	1
7	H4615	Locking Clip	1
8**	V3983	AM2 DLFC Adapter	1
9	V3190-xx	See DLFC Section	1

**Also available: V3414 AM1.5 DLFC Adapter

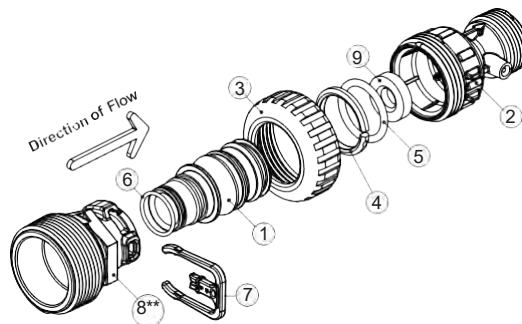



MxF Stainless Steel, 9 - 85 GPM

Drawing No.	Order No.	Description	Quantity			
			V3079	V3079BSPT	V3080	V3080BSPT
1	V3081	AM15 RETAINER DLFC ASY	1	1	1	1
2	V3645	AM15 DLFC FLANGE OUTLET FNPT	1		1	
	V3645BSPT	AM15 DLFC FLANGE OUTLET FBSPT		1		1
3	V3646	AM15 DLFC FLANGE INLET MNPT			1	1
4	V3388	AM125 DLFC FLANGE INLET MNPT	1	1		
5	V3652	BOLT HEXHD S/S HCS 5/16-18x3/4	4	4	4	4
6	V3441	O-RING 226	1	1	1	1
7	V3162-xx	See DLFC Section	0-6	0-6	0-6	0-6
8	V3190-xx	See DLFC Section	1	1	1	1

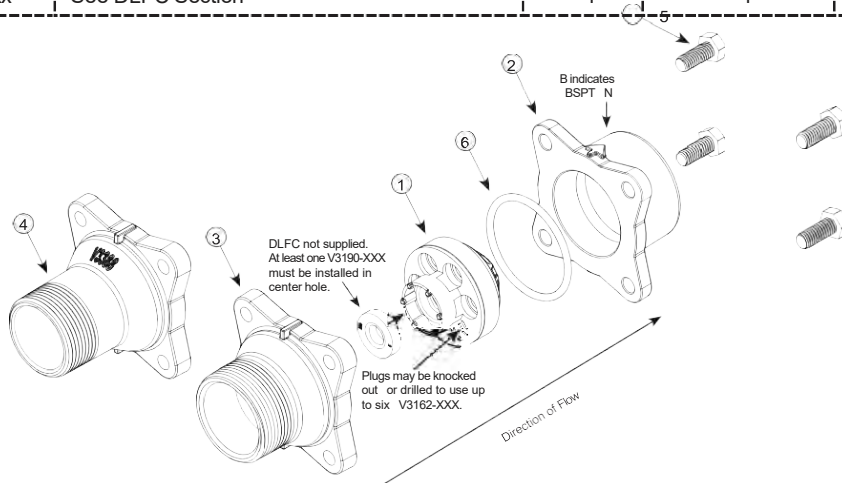

Drain Line Flow Control Washers

Order No.	Description
V3162-007	.7 GPM Drain line flow control
V3162-010	1.0 GPM Drain line flow control
V3162-013	1.3 GPM Drain line flow control
V3162-017	1.7 GPM Drain line flow control
V3162-022	2.2 GPM Drain line flow control
V3162-027	2.7 GPM Drain line flow control
V3162-032	3.2 GPM Drain line flow control
V3162-042	4.2 GPM Drain line flow control
V3162-053	5.3 GPM Drain line flow control
V3162-065	6.5 GPM Drain line flow control
V3162-075	7.5 GPM Drain line flow control
V3162-090	9.0 GPM Drain line flow control
V3162-100	10.0 GPM Drain line flow control
V3190-090	9.0 GPM Drain line flow control
V3190-100	10.0 GPM Drain line flow control
V3190-110	11.0 GPM Drain line flow control
V3190-130	13.0 GPM Drain line flow control
V3190-150	15.0 GPM Drain line flow control
V3190-170	17.0 GPM Drain line flow control
V3190-200	20.0 GPM Drain line flow control
V3190-250	25.0 GPM Drain line flow control

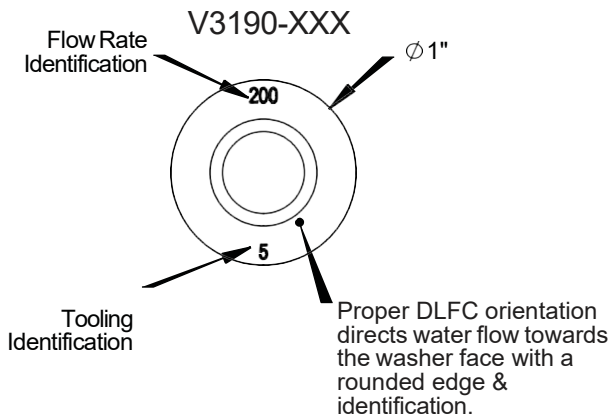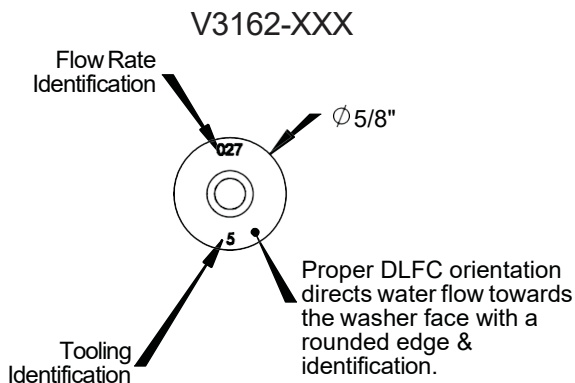

All DLFC housings ship without DLFC installed. Select control from the table for proper backwash, based on the media manufacturer's recommendations.


Meter Assembly for AM1.5 Valves

Note: Be sure the proper meter size is programmed in the software.

Standard meter cable is used for spacing up to 3” between the valve body and meter body, longer distance requires longer cable #V3221.

Service or replace the turbine by:

1. Turn the bypass for the system on and relieve the pressure on the system before removing the meter.
2. Press downward on the remote meter assembly to relieve tension on the retaining clip V3632. Remove the clip and take the meter assembly out of the housing.
3. Remove the bend from the two exposed tips of the retaining clip V3501 and remove the clip.
4. Service or replace the V3118-03 AM1.5 Turbine Assembly and place it back on the turbine shaft.
5. Insert the V3501 AM1.5 Turbine Clip and re-bend the exposed ends of the clip. The V3118-03 turbine has a groove to line up with the V3501 AM1.5 Turbine Clip.
6. Insert meter assembly back into the meter housing.
7. Re-install the meter retaining clip V3632 as shown below.
8. Open the bypass for the system slowly to bring it back into service and check to be sure you have no water leaks. The V3118-03 has a groove to line up with the V3501 AM1.5 Turbine Clip.

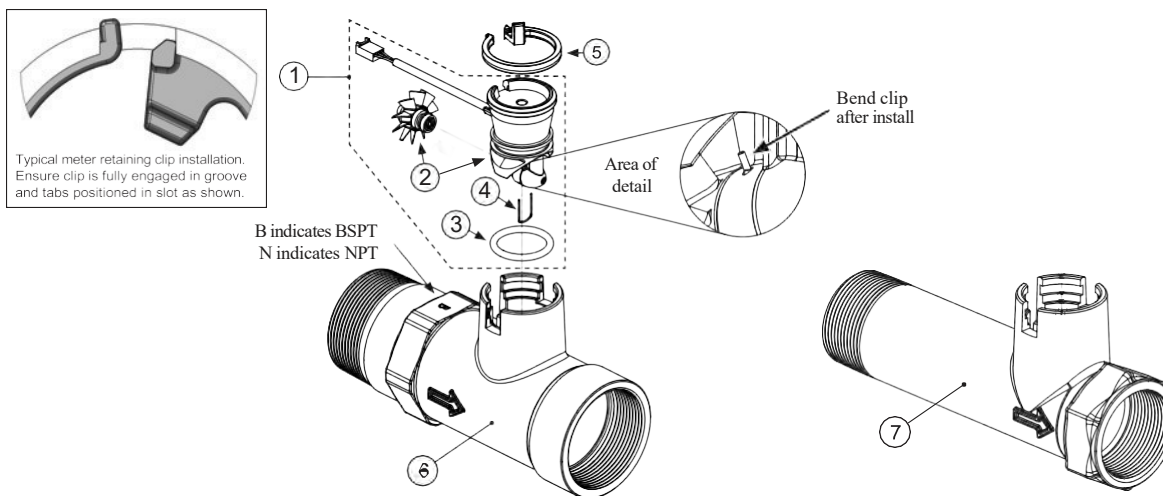

V3040	1.5” NPT Meter, 28” Cable
V3040BSPT	1.5” BSPT Meter, 28” Cable
V3040-15	1.5” NPT Meter, 15’ Cable
V3040BSPT-15	1.5” BSPT Meter, 15’ Cable

Drawing No.	Order No.	Description	Quantity
1	V3003-02	Commercial meter assembly, 28” Cable	1
	V3221	Commercial meter assembly, 15’ Cable	
2	V3118-03	Commercial meter turbine assembly	1
3	V3105	O-ring, -215	1
4	V3501	Turbine clip	1
5	V3632 *	Meter Retaining Clip	1
7	V3401-04	AM1.5 Meter Housing NPT	1
	V3401BSPT-04	AM1.5 Meter Housing BSPT	
Not Shown	V3437	AM1.5 Flow Straightener	1

WHEN INSTALLING THE METER, MAKE SURE THE ARROW ON THE METER BODY IS GOING THE SAME DIRECTION AS THE WATER FLOW. THIS WATER METER SHOULD NOT BE USED AS THE PRIMARY MONITORING DEVICE FOR CRITICAL OR HEALTH EFFECT APPLICATIONS. OPERATING PRESSURES: 20 PSI MINIMUM / 125 PSI MAXIMUM • OPERATING TEMPERATURES: 40°F MINIMUM / 110°F MAXIMUM

The meter can be installed in either horizontal or "upflow" vertical applications.

Motorized Alternating Valve Piston Style Applications

For V3071, V3071BSPT, V3076 or V3076BSPT

OPERATING PRESSURES: 20 PSI MINIMUM / 125 PSI MAXIMUM

OPERATING TEMPERATURES: 40°F MINIMUM / 110°F MAXIMUM

Service or Installation of Motor: Do not lubricate the motor or the gears. To install the motor, move the spring clip loop to the right and hold. Gently turn the motor while inserting it so that the gear on the motor meshes with the gears under the drive gear cover. If the motor will not easily engage with the drive gears when reinstalling, lift and slightly rotate the motor before reinserting. Release the spring clip loop and continue to rotate the motor until the wires are horizontal and the motor housing engages the small plastic bulge inside the drive bracket motor retainer. Reconnect the motor plug to the two-pronged jack on the board labeled drive.


If the control valve manual does not include instructions for setting up the software for No Hard Water Bypasses (NHWB), Separate Source (SEPS), or Twin Tank Operation (ALT A and ALT b), please contact your local equipment supplier for current copies of installation instructions.

Up to 2 additional cables can be brought through the back plate. Locate the round strain relief knock-out on the inside of the back plate. Use a punch and hammer to remove the knock-out. One or both tabs at the bottom of the strain relief feature may be broken out with needle-nose pliers. The additional cables may be brought through the knock-out hole, and connected to the PC board. After the cables are connected to the PC board, weave the cables through the strain relief feature, and then use V3805 Strain Relief Cover Kit to cover the cables in the strain relief. To help prevent damage to the cables, allow nearby solder joints to cool, or solvent cement joints to cure.

- For twin tank operation, the 8' interconnect cable must be threaded through the back plates and connected to the three-pin connector labeled COMM CABLE on both the ALT A and ALT b control valves. The 8' interconnect cable is not used for No Hard Water Bypass (NHWB) or Separate Source (SEPS) operation. NOTE: It is possible to use the Motorized Alternating Valve on controls with individual meters with some International or Custom PC Boards. When using the Motorized Alternating Valve with two meters, it is necessary to disconnect or cut the left wire on the interconnect cable. This is the wire closest to the center cut out on the PC Board.
- The 8' alternator valve motor cable must be threaded through the back plate and connected to the two-pin connector labeled MAV on the control valve board (for twin tank operation connect to the unit set as ALT A).
- The 15' water meter cable must be threaded through the back plate and connected to the three-pin connection labeled METER on the control valve board. NOTE: A meter must be used for twin tank operation, meters are recommended but not required for NHWB or SEPS operation. If using the Motorized Alternating Valve with a meter on each control, it is necessary to connect each meter to the PC Board.
- The 15' AC Adapter or power cable must be threaded through the back plate of all control valves. The AC adapter should be installed to a properly grounded (not switched) outlet.

No Hard Water Bypass:

The MAV will be driven closed before the first regeneration cycle that is not FILL or SOFTENING or FILTERING, and be driven open after the last regeneration cycle that is not FILL. If the control valve enters into an error state during regeneration mode, the MAV will remain in its current state until the error is corrected and reset.

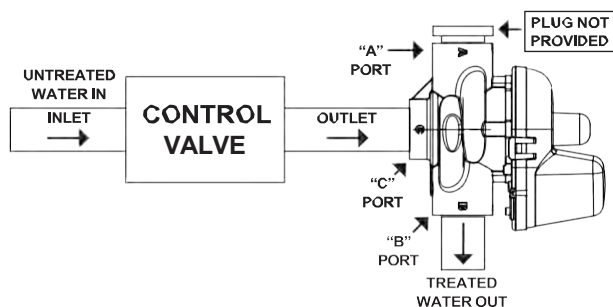


Caution:

No Hard Water Bypass installation prevents water from entering the downstream plumbing. If a downstream plumbing device or local code requires an uninterrupted water supply, design the installations to accommodate.

Separate Source Regeneration:

The MAV will be driven closed (i.e. let water flow from A port to C port) before the first regeneration cycle, and be driven open (i.e. let water flow from B port to C port) after the last regeneration cycle. If the control valve enters into an error during regeneration mode, the MAV will remain in its current state until the error is corrected and reset.


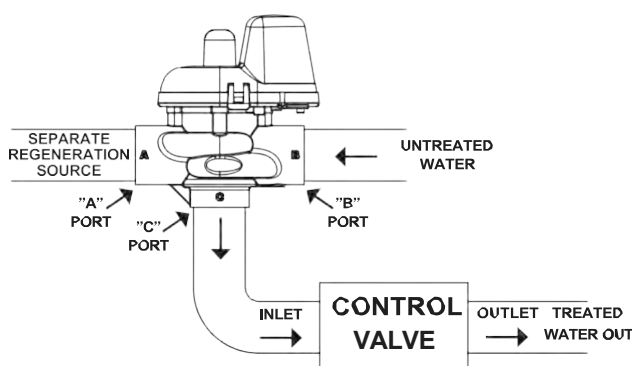


Note:

If there is a treated water demand during regeneration, separate source water will be used.

Twin Tank Alternator:


If the control valve manual does not include instructions for setting up ALTA and ALTb software, please contact your local equipment supplier for current copies of installation instructions. If the control valve is in an error state during regeneration mode, the MAV will close the B port and keep open the A port until the error is corrected and reset.

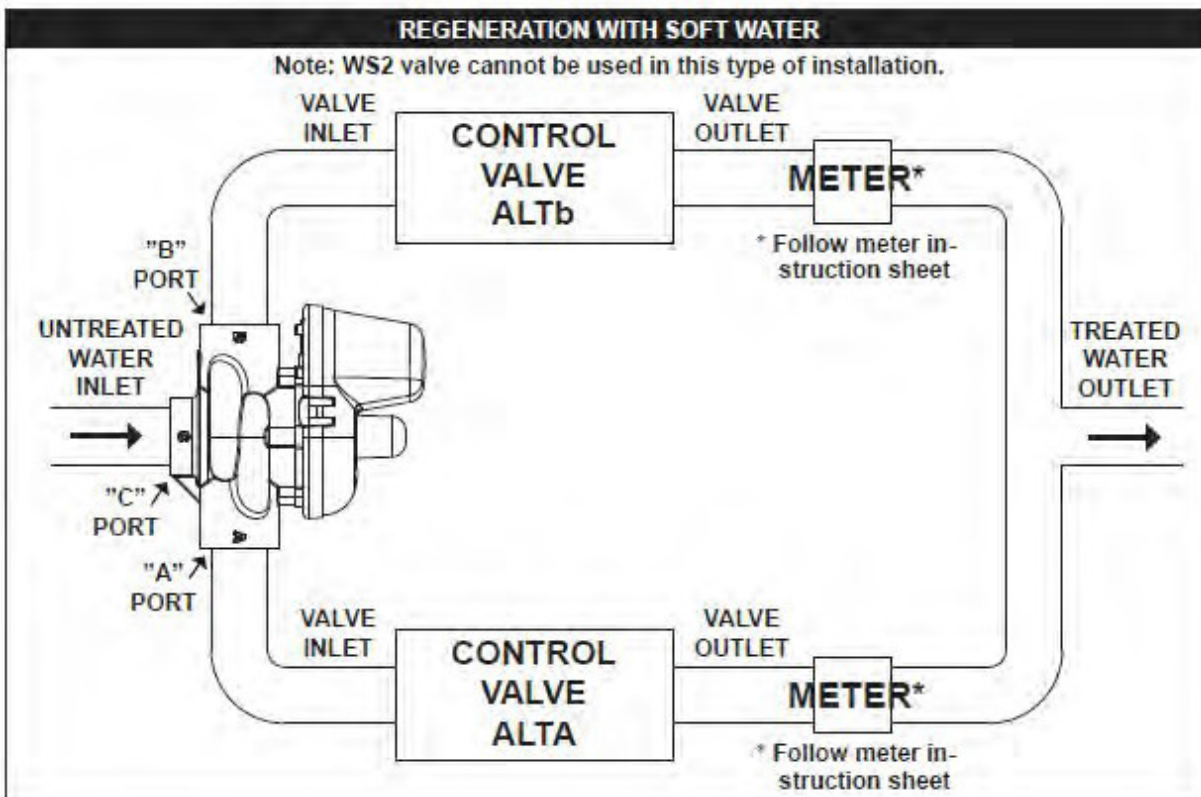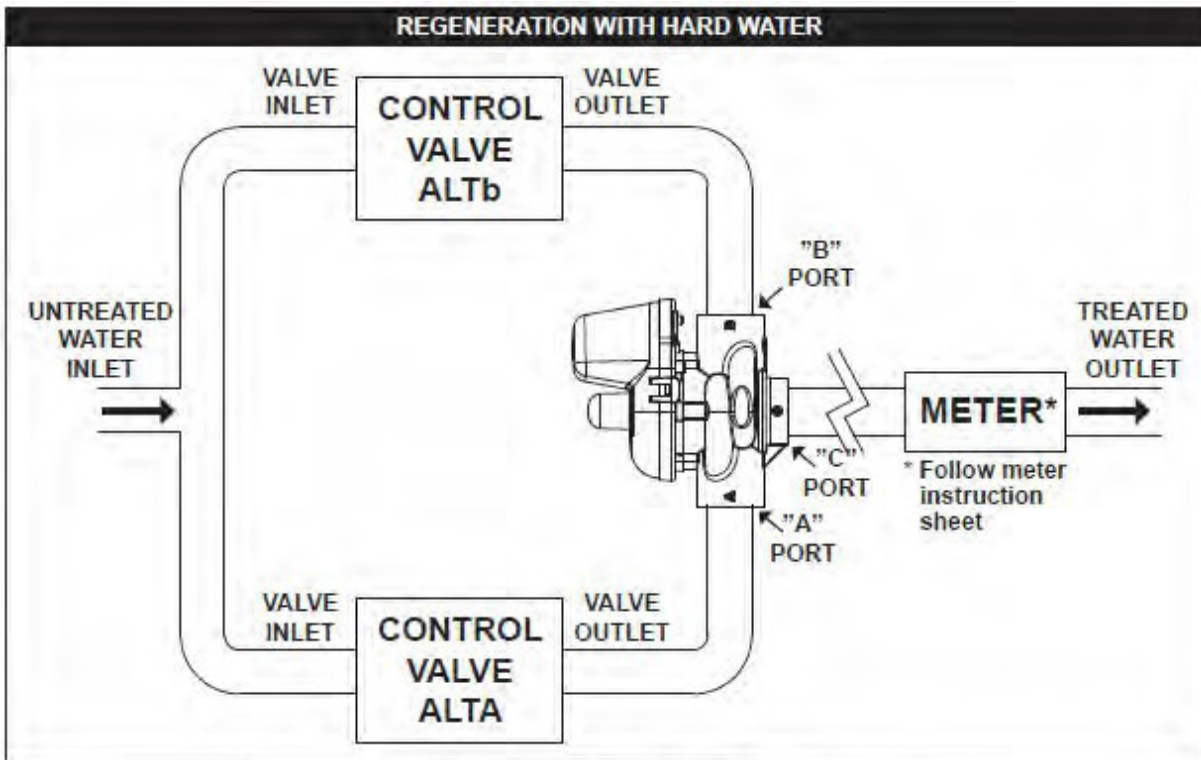

1.5" Piston Style MAV's (See Installation Instructions on Motorized Alternating Valves)


**Order No. V3071 • Description: MOTOR ALT VLV 1.5 NPT REV2 or
Order No. V3071BSPT • Description: MOTOR ALT VLV 1.5 BSPT REV2**

Drawing No.	Order No.	Description	Quantity	
			V3071	V3071BSPT
1	V3073	MAV/NOHWBY COVER ASY	1	1
2	V3476	AM MOTOR ASY 8 FT	1	1
3	V3592	SCREW #8-1 PHPN T-25 SS	3	3
4	V3262-01	AM1.5ALT/2BY REDUCGEARCVASY	1	1
5	V3110-01	AM1 DRIVE REDUCING GEAR PLAIN	3	3
7	V3527	SCREW 1/4-20 X 3/4 BHSCS SS (5/32" HEX ALLEN WRENCH REQUIRED)	4	4
8	V3072	MAV/NOHWBY 1/125/15 DRIVE ASY	1	1
9	V3506-01	MAV/NOHRD 1/125/15 PISTON	1	1
10	V3074	MAV 1/125/15 STACKASY	1	1
11	V3525-01	MAV BODY 1.5 NPT	1	N/A
12	V3525BSPT-01	MAV BODY 1.5 BSPT	N/A	1
Not Shown	V3474	AM ALT CONNECT CORD 8FT BLK	1	1

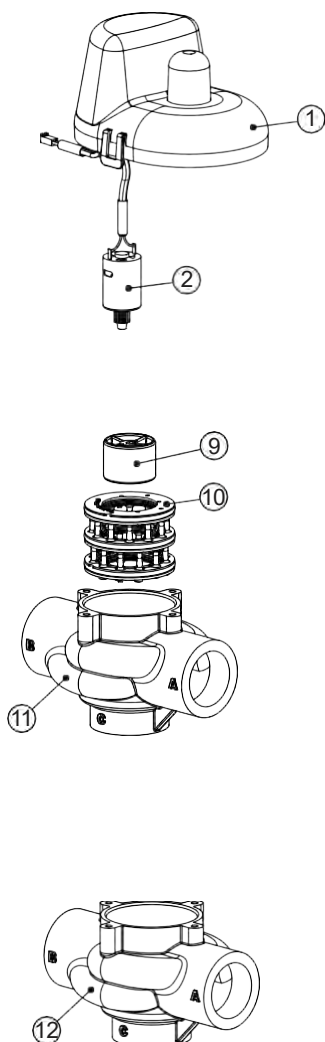


Operating Pressures:
20 PSI Minimum / 125 PSI Maximum

Operating Temperatures:
40°F Minimum / 110°F Maximum

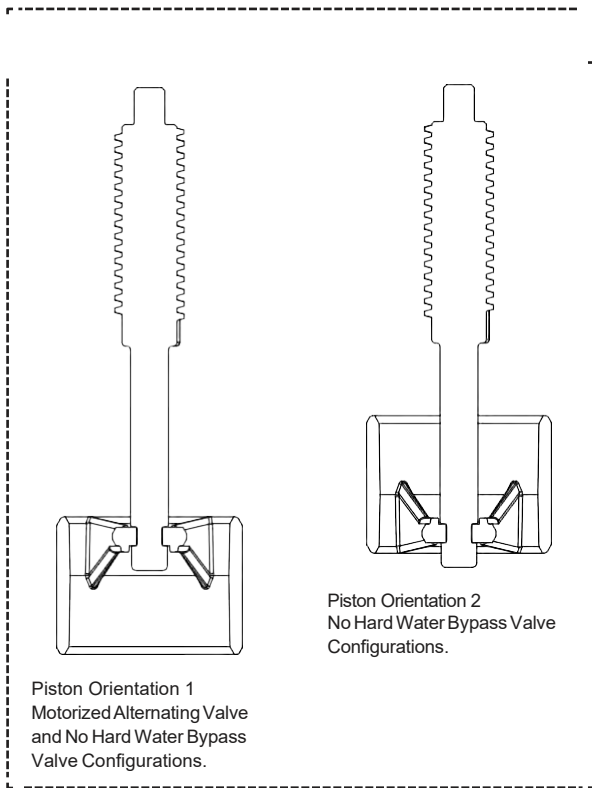


V3076 MAV and AM2 valves shown. Diagram is typical for AM1.5, AM2L, or AM2 valves using V3071 or V3076 piston style MAV's and regenerating with hard water

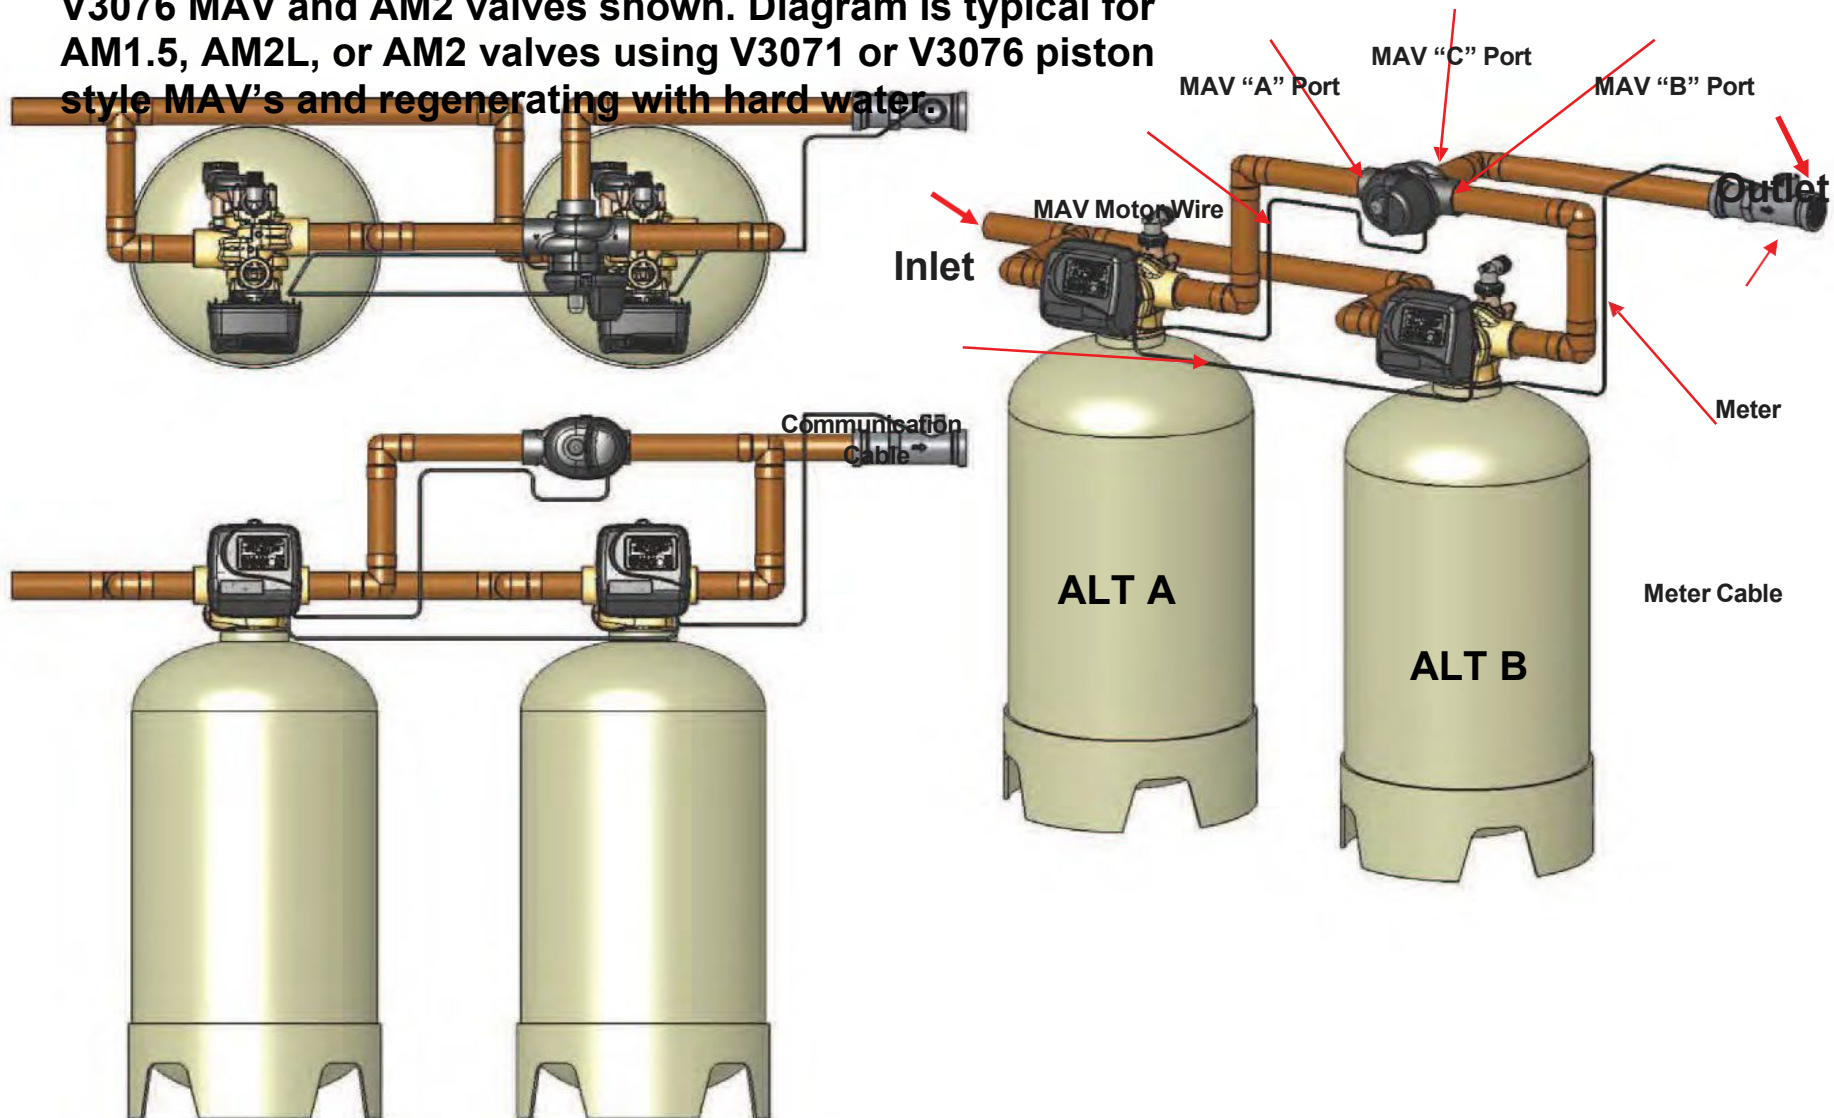


Note: These drawings are for reference. Installer needs to install inlet & outlet isolation ball valves for each control valve and a three-valve bypass for the system. It is recommended to have some unions in the plumbing. Meter should be mounted horizontally or in a downflow vertical position to reduce bearing wear.

**Order No. V3097 • Description: NO HARDWATERBYPASS 15INMXF NPT or
Order No. V3097BSPT • Description: NOHARDWATERBYPASS 15INMXF BSPT**

Drawing No.	Order No.	Description	Quantity	
			V3097	V3097BSPT
1	V3073	MAV/NOHWBY COVER ASY	1	1
2	V3476	AM MOTOR ASY 8 FT	1	1
3	V3592	SCREW #8-1 PHPN T-25 SS	3	3
4	V3262-01	AM1.5ALT/2BY REDUCGEARCVRAS	1	1
5	V3110-01	AM1 DRIVE REDUCING GEAR PLAIN	3	3
7	V3527	SCREW 1/4-20 X 3/4 BHSCS SS (5/32" HEX ALLEN WRENCH REQUIRED)	4	4
8	V3072	MAV/NOHWBY 1/125/15 DRIVE ASY	1	1
9	V3506-01	MAV/NOHRD 1/125/15 PISTON	1	1
10	V3886	AM15 NHWBY STACK ASY	1	1
11	V3832-01	AM15 NHWBY BODY M X F NPT	1	N/A
	V3832BSPT-01	AM15 NHWBY BODY M X F BSPT	N/A	1
Not Shown	V3805	STRAIN RELIEF COVER KIT	1	1

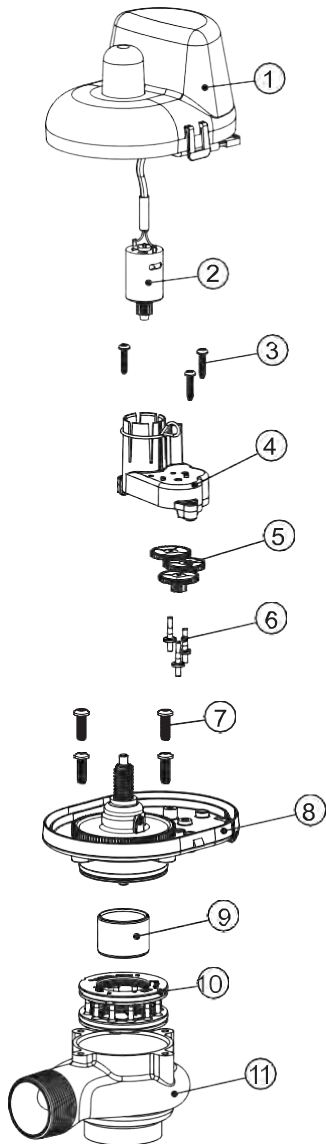

•Operating Pressures:
20 PSI Minimum / 125 PSI Maximum
•Operating Temperatures:
40°F Minimum / 110°F Maximum

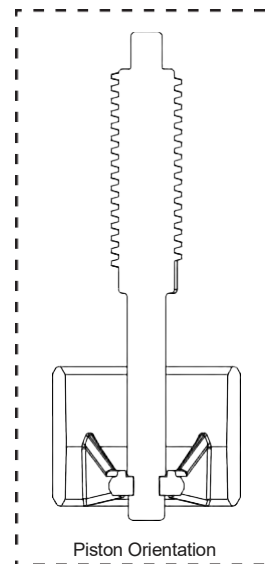

Water Treatment System Warranty

This quality FRAKCO water softener is designed and built to provide many years of satisfactory performance under normal use. FRAKCO, INC. pledges to the original owner that for sixty months, all non-wearable items of the above-described water treatment system proven to be defective due to workmanship and/or materials will be replaced or repaired. Our pledge does not apply if the damage is caused by defective installation; water pressure in excess of eighty pounds per square inch; water temperature in excess of 110° F.; misuse; unauthorized alterations; freezing; accident; fire; neglect; or damage caused by shipping.

To obtain service under this warranty, notify FRAKCO, INC in writing of any defects in workmanship within thirty days of the appearance of such defects. Such written notice must include the date of purchase, the part number, and a description of the defect. Upon receiving such notice and determining that the defect is covered by this warranty, FRAKCO, INC. will replace or repair the defective item. Replacement of a defective item will be at FRAKCO'S factory in Luverne, MN, and the purchaser must ship the defective item at its own expense to FRAKCO'S factory. Replacement items will be shipped by FRAKCO F.O.B. Luverne, Minnesota, with a shipping carton furnished. In the event certain models or colors of the replacement item are out of stock, FRAKCO, INC. may, after notifying the purchaser, furnish another model or color of the replacement item. The factory will not pay for service charges and will not perform any repair or service functions other than at its home office.

Please follow the enclosed instructions and local codes in installing your water treatment system. Failure to do so will void this warranty. Nothing in the warranty may be construed as involving the factory in the relationship between Dealer and Owner.

This warranty gives the purchaser specific legal rights. The purchase may also have implied warranty rights. In the event of a problem with warranty service or performance, the purchaser may be able to go to a Small Claims Court, a State Court, or a Federal District Court. This warranty complies with the 1975 Federal Warranty Law.

Model No. _____ Serial No. _____

Date Installed _____ Dealer _____

Address _____

*MANUFACTURED BY: FRAKCO, INC.
500 N BLUE MOUND AVE
LIVERNE, MINNESOTA 56156
WWW.FRAKCO.COM*