



TOLL FREE 800-967-1762 • DIRECT 507-283-4416

FAX 507-283-4417

TRAVELSOFT

OPERATION INSTRUCTIONS (MODEL RV 1200)



Specifications:

	RV 1200	RV 2400	RV2400
Capacity	10,000 grains	24,000 grains	32,000 grains
Tank Size	8" x 17"	8" x 40"	10" x 40"
Overall Height	20 1/4"	43 1/4"	43 1/4"
Resin Capacity	.33 cu. ft.	.75 cu. ft.	1.0 cu. ft.
Inlet & Outlet	3/4" G.H.	3/4" G.H.	3/4" G.H.
Weight (empty of water)	31 lbs.	70 lbs.	70 lbs.

1

Turn valve lever to conditioned water position (Figure #1)



2

Connect garden hose from water supply to inlet of RV Water Softener.

3

Connect garden hose from outlet of RV Water Softener to your RV city water connection or portable water tank. (On initial installation softener is ready for use and does not need to be regenerated. Allow water to run into a drain for a few minutes as there may be some color throw from the new softening material in your new softener.)

4

Open water supply and enjoy all the benefits of soft water. *Turn handle to the bypass position (figure #2) to have non-softened water. For example, when you water the lawn, you do not want to waste softened water.

When to Regenerate RV Softener...



Check water inside your RV or at the outlet side of the RV Softener with the test strips supplied. If water tests more than 3 grains hard (50ppm) it is time to regenerate the RV Softener following the instructions on the next page, download the PDF, or watch the Regeneration video.




TOLL FREE 800-967-1762 • DIRECT 507-283-4416

FAX 507-283-4417

TRAVELSOFT

REGENERATION INSTRUCTIONS (MODEL RV 1200)

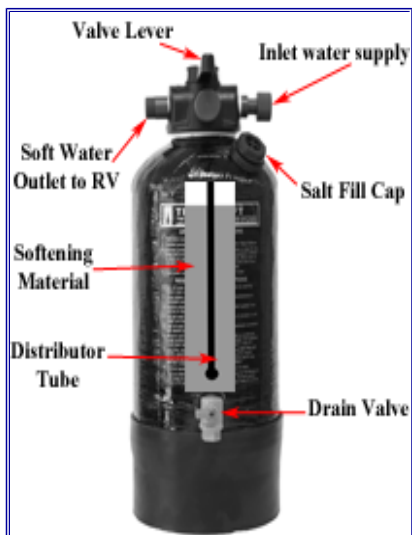

- 1** Turn **off** water supply. (Relieve pressure from system by opening bottom drain valve.)
- 2** Close bottom drain valve and turn valve lever counter clockwise to backwash position. (Figure #1)
- 3** Remove plastic cap from backwash connection, attach garden hose and **run** to drain.
- 4** Turn **off** water supply and let softener backwash for 5 minutes or until water runs clear.
- 5** Turn **off** water supply, remove garden hose from backwash connection and replace plastic cap.
- 6** Remove salt fill cap, turn valve lever clockwise back to conditioned water position, open bottom drain valve and drain water from softener, close drain valve. (This is done to make room for salt in step #7.)



- 7** Add 6 lbs. solar or rock salt **NOT PELLET TYPE** (approximately 10 cups), softener may have to be tipped slightly and gently shaken to get all the salt in. Clean salt fill cap threads and replace salt fill cap. **DO NOT OVERTIGHTEN - CAP HAS O-RING SEAL!!**

- 8** Connect garden hose from outlet of softener and **run** to drain.

- 9** Turn **on** water supply slowly (approximately 1.5 gpm) for 15 minutes or until water is no longer salty. Turn **off** water supply. Connect garden hose to RV and turn **on** water supply. Softener is now ready for service.

Open drain valve to drain water before storage - keep it from freezing.

The RV 1200 may be stored horizontally or vertically (must be vertical when in use).

Never remove the softening material from inside the tank.

If softener is stored for a long period of time, a capfull of bleach may be added with the salt in step #7 to sanitize the softener.