



## Owner and Operational Manual

Model: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Install Date: \_\_\_\_\_

Installed By: \_\_\_\_\_

Service Phone: \_\_\_\_\_

Sold By: \_\_\_\_\_



Please read this manual carefully before proceeding with installation. Your failure to follow any of these instructions or operating parameters may lead to personal injury or damage to the equipment and/or personal property. Do not use this Iron Filter system with water that is microbiologically unsafe or of unknown quality, without adequate disinfection before or after the system. This water treatment system contains replaceable treatment components critical for effective performance. It is the user's responsibility to periodically test the product water to verify the system is performing satisfactorily. Failure to properly maintain this water treatment system may cause a health risk.

Save this manual for future reference



## Table of Contents

|                                                                                                       |    |
|-------------------------------------------------------------------------------------------------------|----|
| Guardian General Specifications .....                                                                 | 3  |
| Operating Pressures .....                                                                             | 3  |
| Operating Temperatures .....                                                                          | 3  |
| Flow Rate .....                                                                                       | 3  |
| Dimensions .....                                                                                      | 3  |
| Pre-Installation Check List.....                                                                      | 4  |
| Start-Up Instructions .....                                                                           | 4  |
| User Displays .....                                                                                   | 6  |
| Installer Display Settings.....                                                                       | 7  |
| Front Cover and Drive Assembly.....                                                                   | 10 |
| Drive Cap Assembly, Downflow Piston, Upflow Piston, Regenerant Piston and Spacer Stack Assembly ..... | 11 |
| Injector Cap, Injector Screen, Injector, Plug and O-Ring .....                                        | 12 |
| Refill Control and Check Valve.....                                                                   | 13 |
| Drain Line – 3/4” .....                                                                               | 14 |
| Water Meter, Meter Plug and Mixing Valve .....                                                        | 15 |
| Bypass Valve .....                                                                                    | 16 |
| Service Spanner Wrench.....                                                                           | 17 |
| Troubleshooting.....                                                                                  | 19 |
| Ozotech Manual.....                                                                                   | 20 |
| Water Treatment System Warranty .....                                                                 | 34 |

This owner’s manual is designed to assist owners and installers with the operation, maintenance and installation of your new water filter. Detailed instructions on general operating conditions, installation instructions, start-up, and programming are included. A troubleshooting guide, service instructions and parts diagrams are also included to assist with future needs.

**Please contact the dealer who installed the system if you need professional assistance in service of your water filter.**

## Guardian General Specifications

Inlet/Outlet.....1"  
Cycles.....2  
Valve Material .....Noryl©

### Operating Pressures

Minimum/Maximum .....40 - 80psi  
Optimal Range.....40 - 60psi

**\*Pump output must meet or exceed backwash rate.**

### Operating Temperatures

Minimum/Maximum .....40° - 110°F

### Flow Rate

Guardian 150 Series .....5 - 9 gpm  
Guardian 250 Series .....9 - 14 gpm

### Dimensions

Drain Line .....¾" or 1" NPT  
Electrical Current Draw and Voltage .....120V/15VDC

\* Operating outside of the optimum pressure range may affect system functionality. Contact your dealer for more information.

\*\* Guardian Series not to be used with micro-biologically unsafe water sources

## Pre-Installation Check List

(All electrical and plumbing should be done in accordance to all local codes)

**Guardian Series is acceptable for indoor use only**

**Water Quality:** Sand and sediment are often problems in rural water supplies. They may plug the filter and restrict water flow through the media bed. Well and/or pump problems affecting the operation of the filter and repairs are not covered under warranty.

**Water Pressure:** A minimum of 40 pounds of water pressure (psi) is required for operation. Maximum pressure is 80 psi.

**Water Temperature:** Filter water temperature must not exceed 110°F or be subject to freezing.

**Existing Plumbing:** Must be free from build-up. If plumbing is blocked, it must be replaced or additional equipment may be needed ahead of filter.

**Electrical:** All electrical connections must be connected per local codes.

**Drain Line:** Filter should be located near drain. Do not use overhead drain lines as possible back pressure may occur.

**Bypass Valves:** Always allow for installation of a bypass valve.


## Start-Up Instructions

**\*For optimal results, the filter media should be soaked for 12 hours prior to installation.**


1. Complete all plumbing connections; inlet, outlet, and drain line.
2. Place bypass in bypass position. Turn on main water supply and open a cold filtered faucet to clear lines of air or obstructions.
3. Plug unit into a 120-volt outlet. Valve will move to service position once connection is made.
4. Start a backwash cycle by holding the "REGEN" button down until valve movement is heard.
5. Slowly open inlet valve on bypass until it is fully in open position. Allow water to run to the drain until clear.
6. Allow system to continue going through all the cycles.
7. Filter is ready for use after first regeneration cycle is complete.

# BYPASS VALVE OPERATION


## NORMAL OPERATION

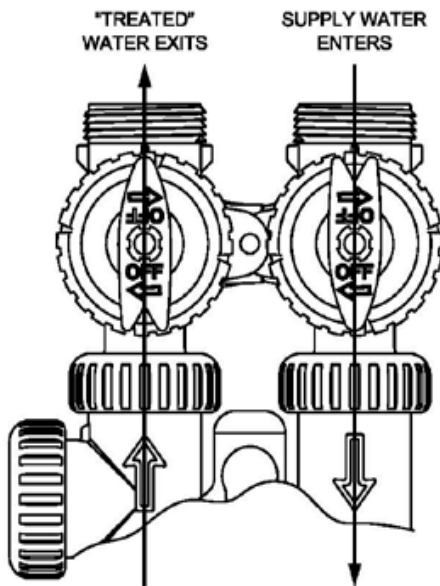


## BYPASS OPERATION

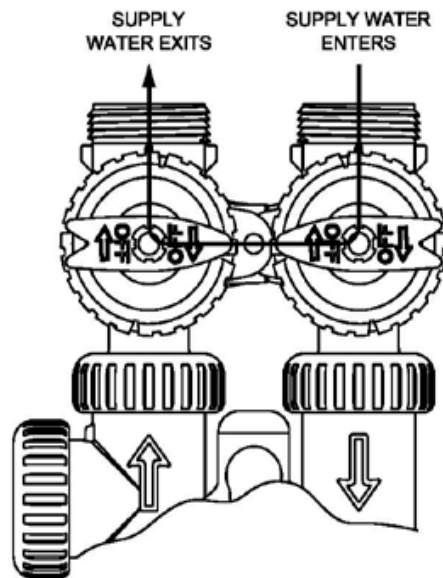

## DIAGNOSTIC MODE

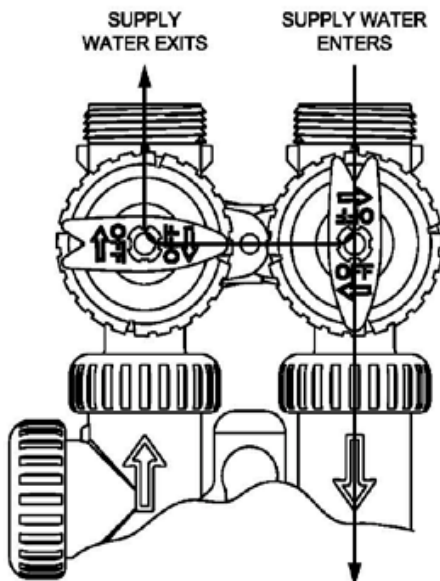


## SHUT OFF MODE

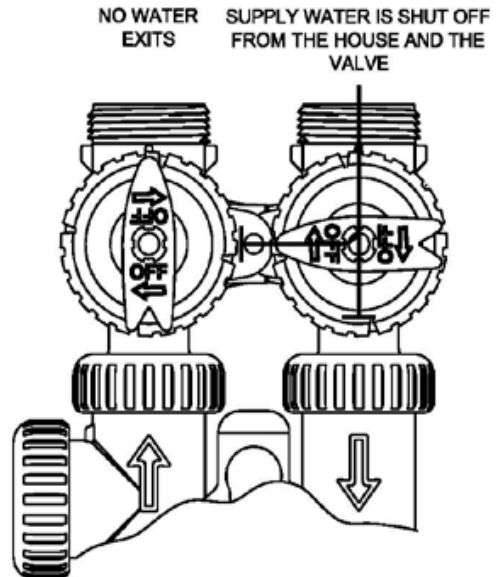

# User Displays


## General Operation

When the system is operating, one of four displays may be shown. Pressing NEXT will alternate between the displays shown below.

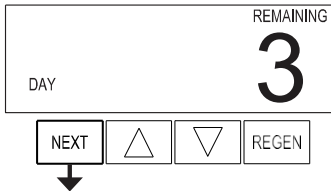


### **User 1**

Displays number of days to next regeneration.

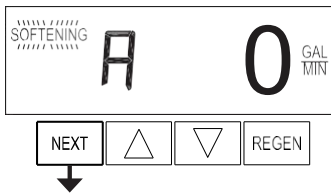


### **User 2**

Flow Rate. Displays present flow rate.

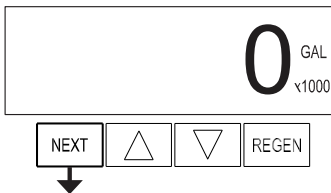

### **User 3**

Displays total volume in gallons since last reset.

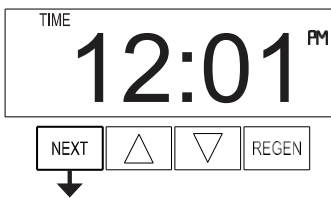


### **User 4**

Shows current time.


# Installer Display Settings

## STEP 1I



**STEP 1I** - Press NEXT and  $\blacktriangle$  simultaneously for 3 seconds. Press NEXT to advance through the programming settings.


## STEP 2I

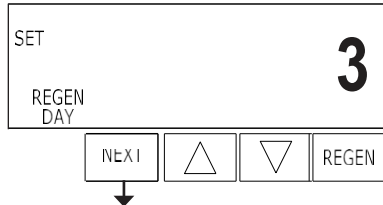

**STEP 2I** – Day Override: Sets the number of days between regenerations. Set Day Override using :  $\blacktriangle$  or  $\blacktriangledown$

- number of days between regeneration (1 to 28). Reference charts below.
- Backwash frequency based on incoming water quality


## STEP 3I

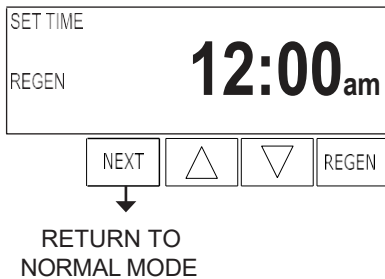

**STEP 3I** – Regeneration Time (hour): Set the hour of day for regeneration using  $\blacktriangle$  or  $\blacktriangledown$ . AM/PM toggles after 12. The default time is 12:00 a.m. as most water softeners regenerate at 2:00am. Regeneration should occur during a period of low water usage. Press REGEN to return to previous step.

### Regeneration Mode

Typically a system is set to regenerate at a time of low water usage. An example of a time with low water usage is when a household is asleep. If there is a demand for water when the system is regenerating, untreated water will be used.

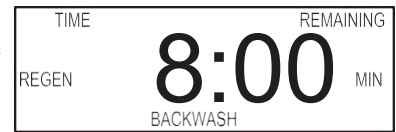

When the system begins to regenerate, the display will change to include information about the step of the regeneration process and the time remaining for that step to be completed. The system runs through the steps automatically and will reset itself to provide treated water when the regeneration has been completed.


### Manual Regeneration

Sometimes there is a need to regenerate the system sooner than when the system calls for it, usually referred to as manual regeneration. There may be a period of heavy water usage because of guests or a heavy laundry day.

To initiate a manual regeneration at the preset delayed regeneration time, press and release REGEN. The words "REGEN TODAY" will flash on the display to indicate that the system will regenerate at the preset delayed regeneration time. If you pressed REGEN in error, pressing the button again will cancel the request.

To initiate a manual regeneration immediately, press and hold REGEN for three seconds. The system will begin to regenerate immediately. The request cannot be cancelled.

REGEN TODAY will Flash if a regeneration is expected "Tonight."

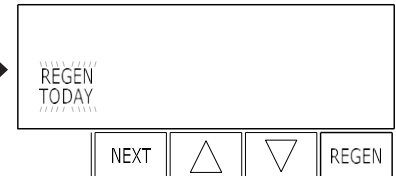


### Set Time of Day

The user can also set the time of day. Time of day should only need to be set after power outages lasting more than 8 hours, if the battery has been depleted and a power outage occurs, or when daylight saving time begins or ends. If a power outage lasting more than 8 hours occurs, the time of day will flash on and off which indicates the time of day should be reset. If a power outage lasts less than 8 hours and the time of day flashes on and off, the time of day should be reset and the battery replaced.

**STEP 1U** – Press and hold ▲ until the time starts to change.


**STEP 2U** - Current Time (hour): Set the hour of the day using ▲ or ▼. AM/PM toggles after 12. Press NEXT to go to step 3U.

**STEP 3U** - Current Time (minutes): Set the minutes of the day using ▲ or ▼. Press NEXT to exit Set Clock. Press REGEN to return to previous step.

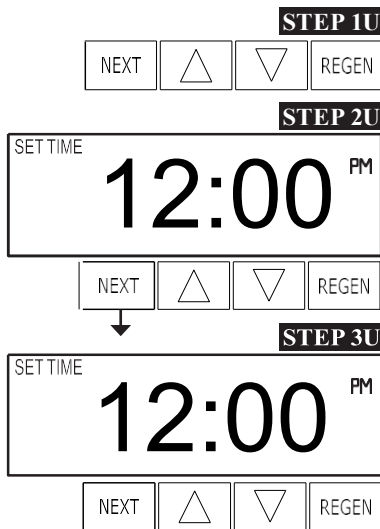

### Error Message

If the word "ERROR" and a number are alternately flashing on the display contact the OEM for help. This indicates that the valve was not able to function properly.

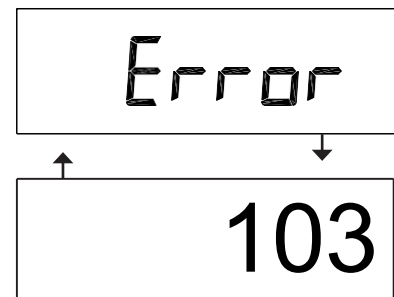

## Front Cover and Drive Assembly

| Drawing No. | Order No.       | Description                      | Quantity |
|-------------|-----------------|----------------------------------|----------|
| 1           | V3175EE-01      | Front Cover Assembly             | 1        |
| 2           | V3107-01        | Motor                            | 1        |
| 3           | V3002-B         | Drive Bracket & Spring Clip      | 1        |
| 4           | V3408EE-04BOARD | Thru/2EE PCB 5 Digit Replacement | 1        |
| 5           | V3110           | Drive Gear 12x36                 | 3        |
| 6           | V3109           | Drive Gear Cover                 | 1        |
| Not Shown   | V3186           | AC Adapter 120V/15VDC            | 1        |
|             | V3178           | Drive Back Plate                 |          |


Refer to Control Valve Service Manual for other drawings and part numbers.

| AC Adapter       | U.S.     | International |
|------------------|----------|---------------|
| Supply Voltage   | 120 V AC | 230V AC       |
| Supply Frequency | 60 Hz    | 50 Hz         |
| Output Voltage   | 15 V DC  | 15 V DC       |
| Output Current   | 500 mA   | 500 mA        |

Relay Specifications: 12V DC Relay with a coil resistance not less than 80 ohms. If mounting relay under the cover check for proper mounting dimensions on the backplate.

| Wiring for Correct On/Off Operation |        |
|-------------------------------------|--------|
| PC Board Relay Terminal Block       | Relay  |
| RLY 1                               | Coil - |
| + COM                               | Coil + |


When replacing the battery, align positives and push down to fully seat.

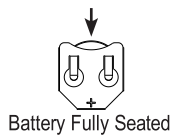

Correct Battery Orientation




Battery replacement is 3 volt lithium coin cell type 2032.

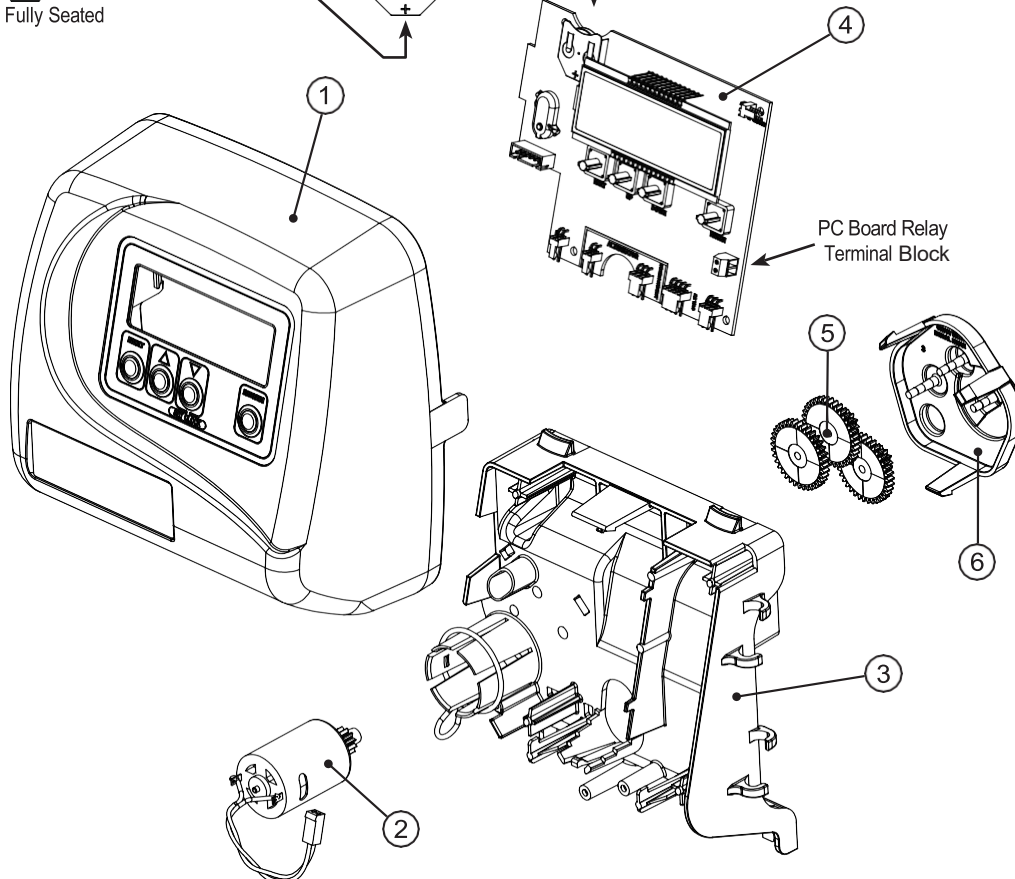


## Drive Cap Assembly, Downflow Piston, Upflow Piston, Regenerant Piston and Spacer Stack Assembly

| Drawing No. | Order No.  | Description                                   | Quantity |
|-------------|------------|-----------------------------------------------|----------|
| 1           | V3005-02   | Spacer Stack Assembly                         | 1        |
| 2           | V3004      | Drive Cap ASY                                 | 1        |
| 3           | Back Plate | Refer to Programming and Cover Drawing Manual | 1        |
| 4           | V3011      | Piston Downflow ASY                           | 1        |
| 5           | V3174      | Regenerant Piston                             | 1        |
| 6           | V3135      | O-ring 228                                    | 1        |
| 7           | V3180      | O-ring 337                                    | 1        |
| 8           | V3105      | O-ring 215 (Distributor Tube)                 | 1        |
| Not Shown   | V3001      | Body ASY Downflow                             | 1        |

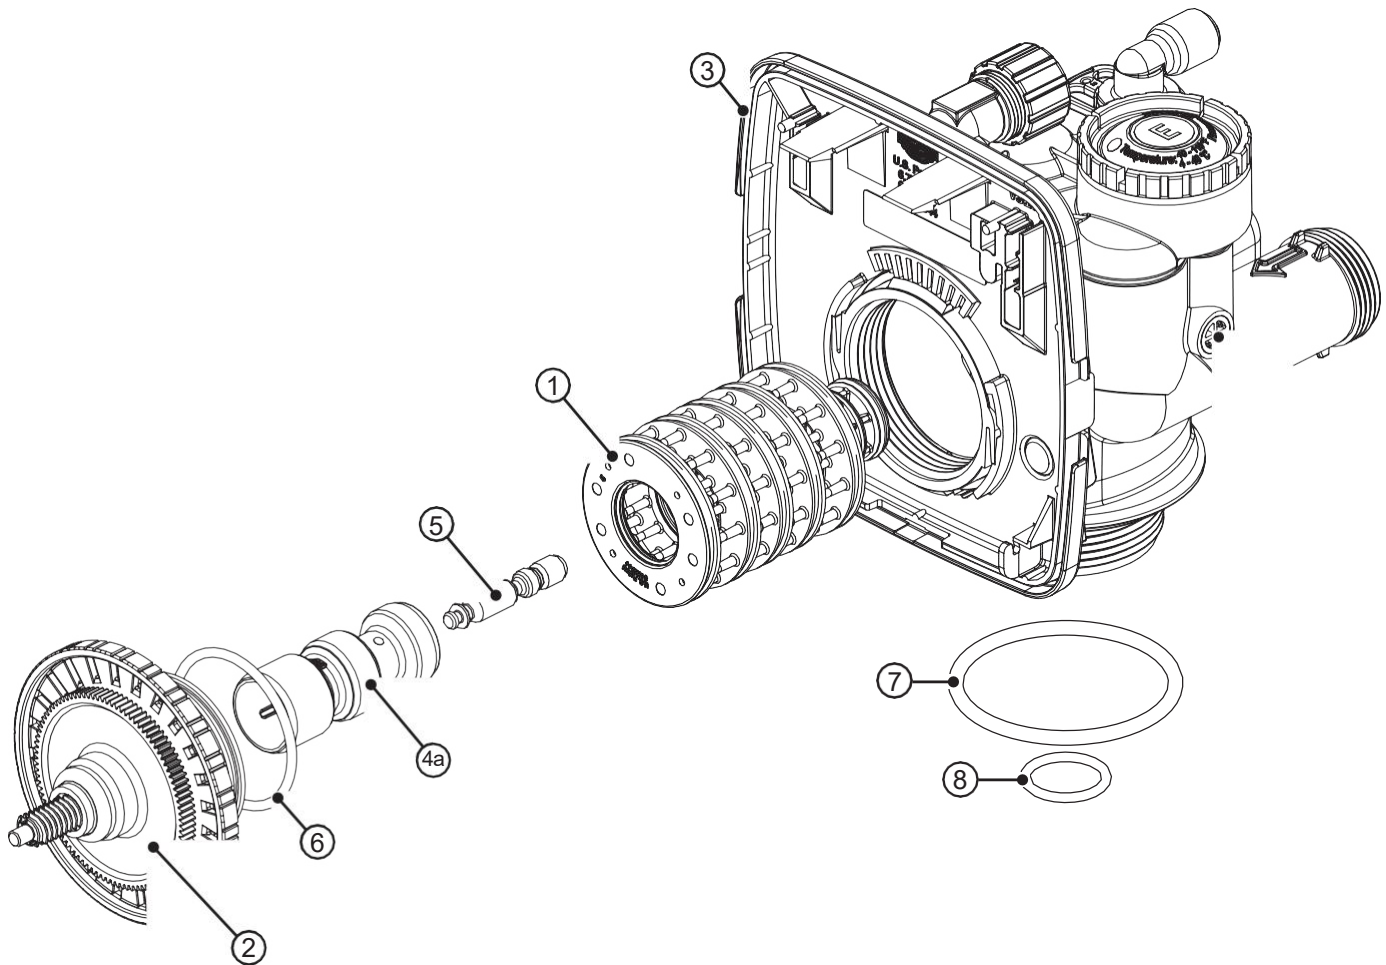


## Injector Cap, Injector Screen, Injector, Plug and O-Ring

| Drawing No. | Order No. | Description                      | Quantity |
|-------------|-----------|----------------------------------|----------|
| 1           | V3176     | Injector Cap                     | 1        |
| 2           | V3152     | O-Ring 135                       | 1        |
| 3           | V3177-01  | Injector Screen Cage             | 1        |
| 4           | V3010-1X  | Injector Asy (Specify Tank Size) | 1        |

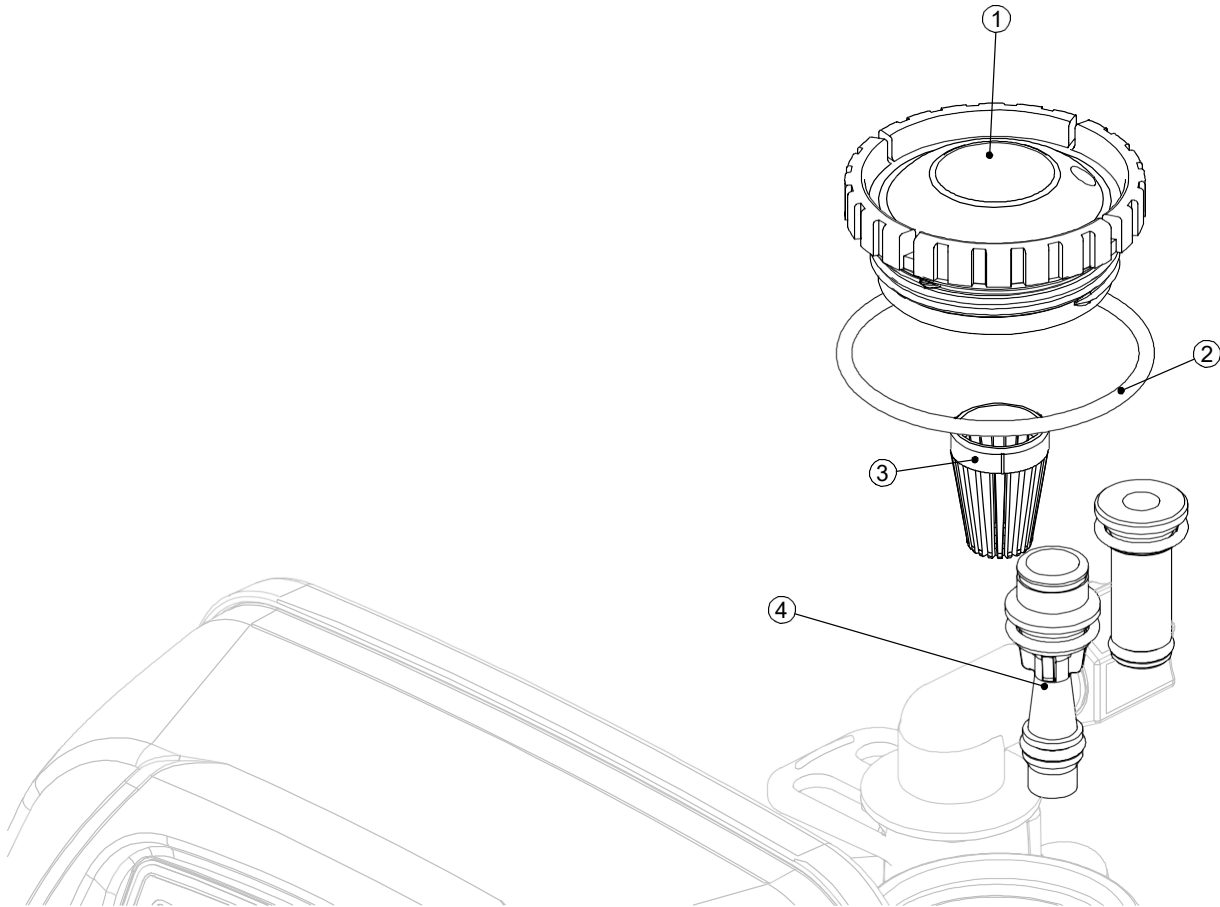


## Refill Control and Check Valve

| Drawing No. | Order No.  | Description                 | Quantity |
|-------------|------------|-----------------------------|----------|
| 1           | H4615      | Elbow Locking Clip          | 1        |
| 2           | V4144      | Elbow 3/8" Liquifit         | 1        |
| 3           | V3163      | O-ring 019                  | 1        |
| 4           | NeoOV15    | 15 MM Check Valve           | 1        |
| 5           | V4144-01CV | Elbow 3/8 Liquifit Asy w/CV | 1        |
| 6           | ABPUS1     | Brine Screen with Tube      | 1        |

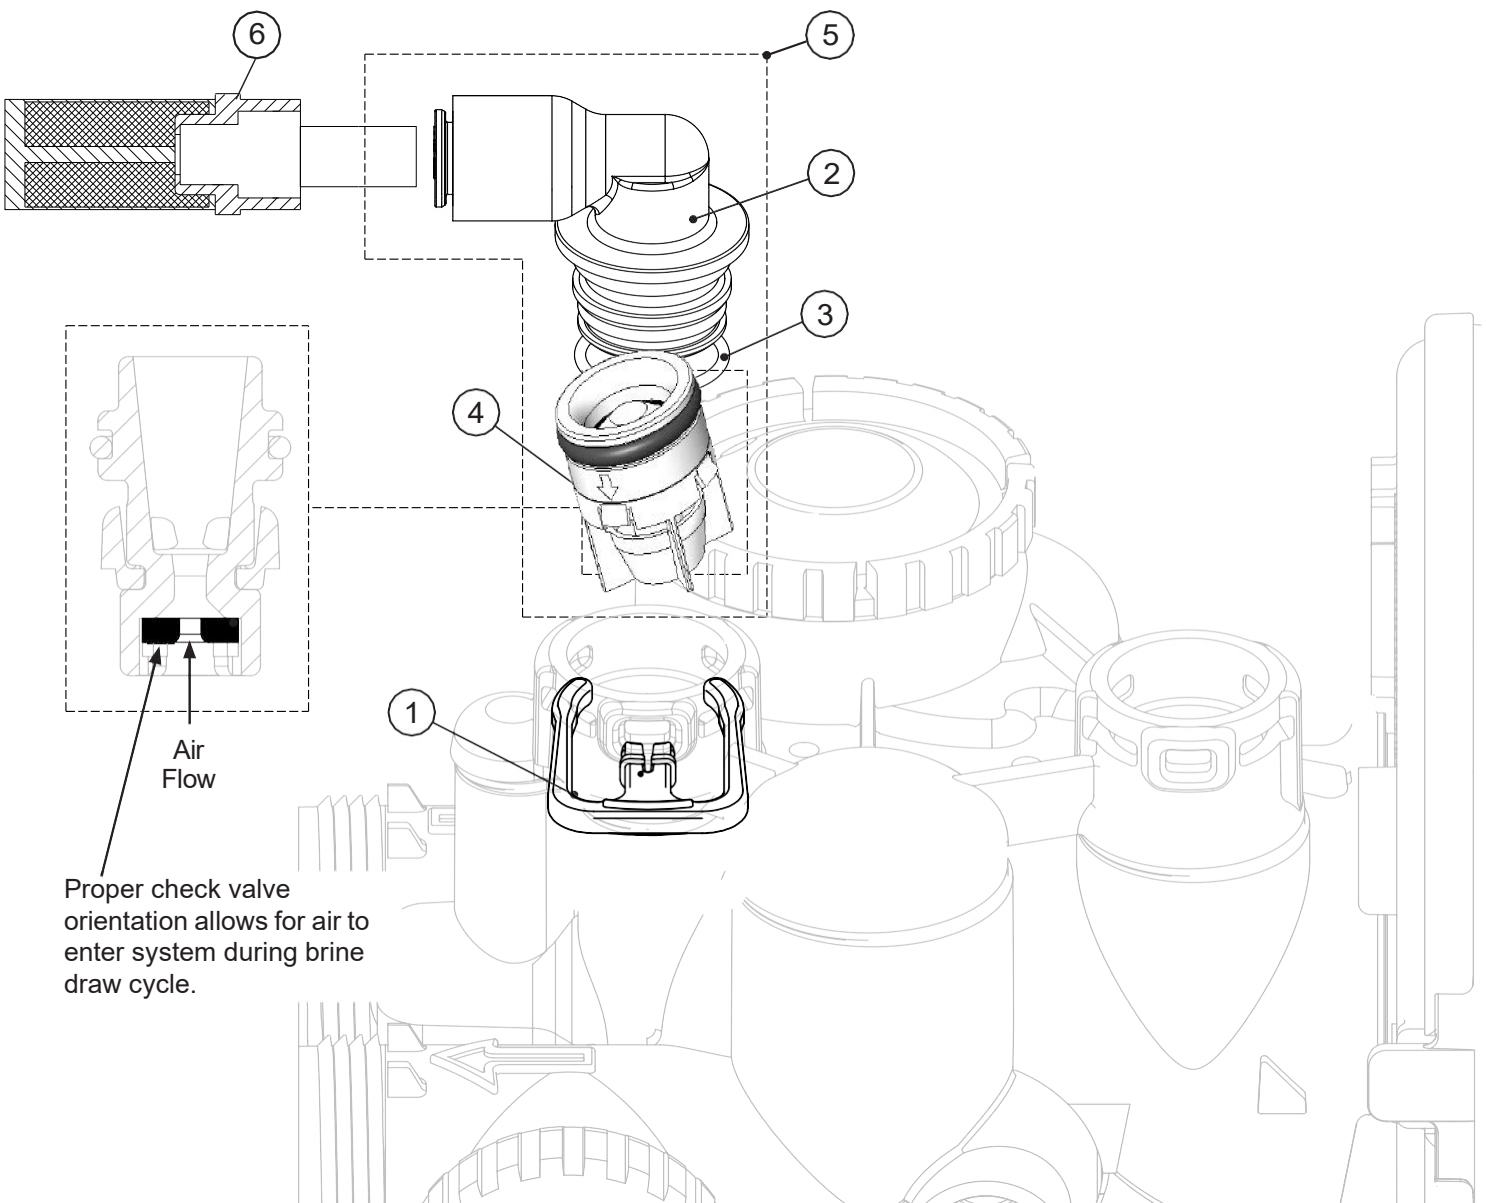

## Drain Line – 3/4"

| Drawing No. | Order No. | Description                         | Quantity                                   |
|-------------|-----------|-------------------------------------|--------------------------------------------|
| 1           | H4615     | Elbow Locking Clip                  | 1                                          |
| 2           | V3962     | Drain Elbow ¾ Male                  | 1                                          |
| 3           | V3163     | O-ring 019                          | 1                                          |
| 4           | V3159-01  | DLFC Retainer ASY                   | 1                                          |
| 5           | V3162-xxx | DLFC Based Upon tank and media used | One DLFC must be used if ¾ fitting is used |

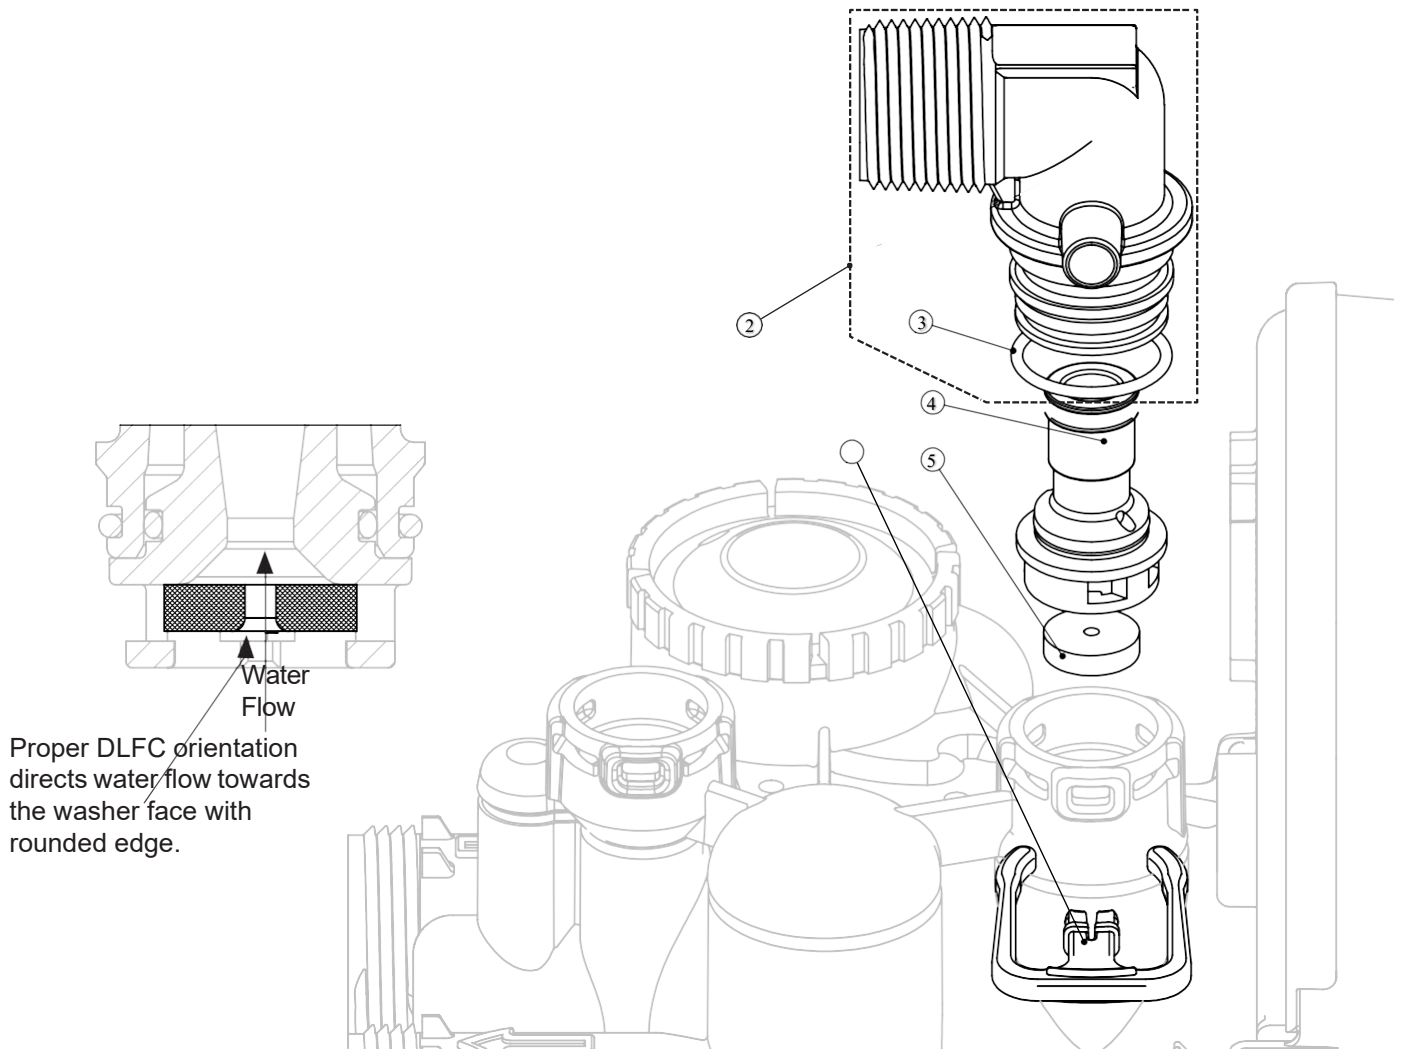


## Water Meter, Meter Plug and Mixing Valve

| Drawing No. | Order No. | Description    | Quantity |
|-------------|-----------|----------------|----------|
| 1           | V3151     | Nut 1" QC      | 1        |
| 2           | V3003-05  | Meter ASY      | 1        |
| 3           | V3118-01  | Turbine ASY    | 1        |
| 4           | V3105     | O-ring 215     | 1        |
| 5           | V3003-01  | Meter Plug ASY | 1        |

Order number V3003-05 includes V3118-01 AM1 Turbine ASY and V3105 O-ring 215.

**THIS WATER METER SHOULD NOT BE USED AS THE PRIMARY MONITORING DEVICE FOR CRITICAL OR HEALTH EFFECT APPLICATIONS.**

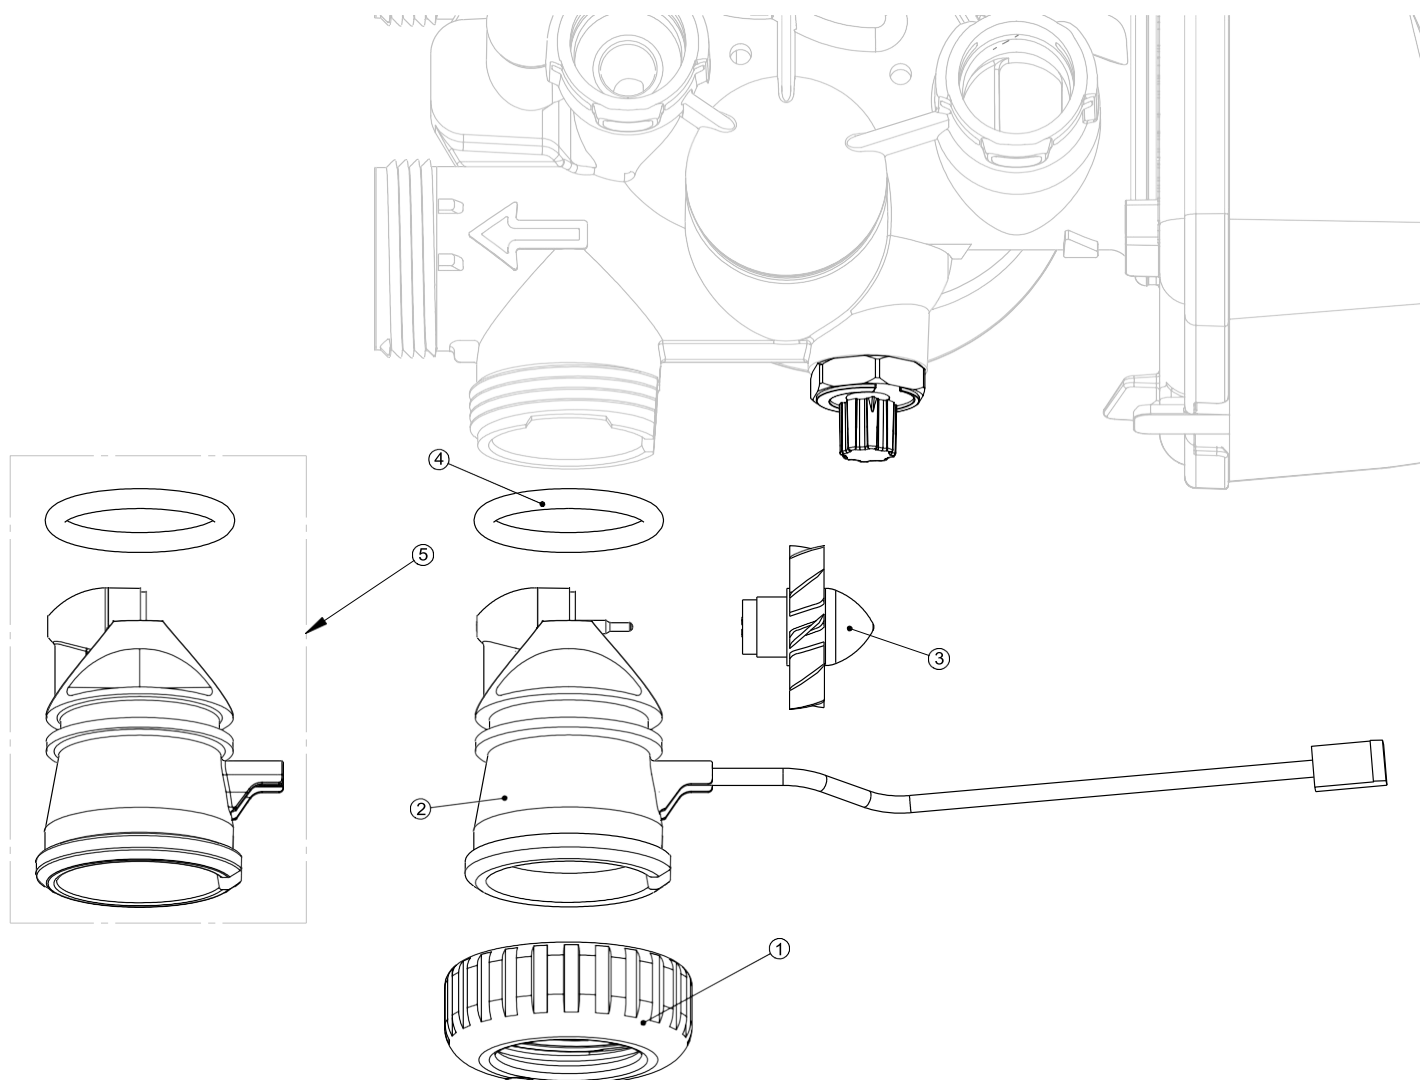


## Bypass Valve

| Drawing No. | Order No. | Description                | Quantity |
|-------------|-----------|----------------------------|----------|
| 1           | V3151     | Nut 1" Quick Connect       | 2        |
| 2           | V3150     | Split Ring                 | 2        |
| 3           | V3105     | O-Ring 215                 | 2        |
| 4           | V3145     | Bypass 1" Rotor            | 2        |
| 5           | V3146     | Bypass Cap                 | 2        |
| 6           | V3147     | Bypass Handle              | 2        |
| 7           | V3148     | Bypass Rotor Seal Retainer | 2        |
| 8           | V3152     | O-ring 135                 | 2        |
| 9           | V3155     | O-ring 112                 | 2        |
| 10          | V3156     | O-ring 214                 | 2        |

(Not Shown) Order No. V3191-01, Description: AM1 Bypass Vertical Adapter Assembly


| Order No. | Description             | Quantity |
|-----------|-------------------------|----------|
| V3151     | Nut 1" Quick Connect    | 2        |
| V3150     | Split Ring              | 2        |
| V3105     | O-Ring 215              | 2        |
| V3191     | Bypass Vertical Adapter | 2        |

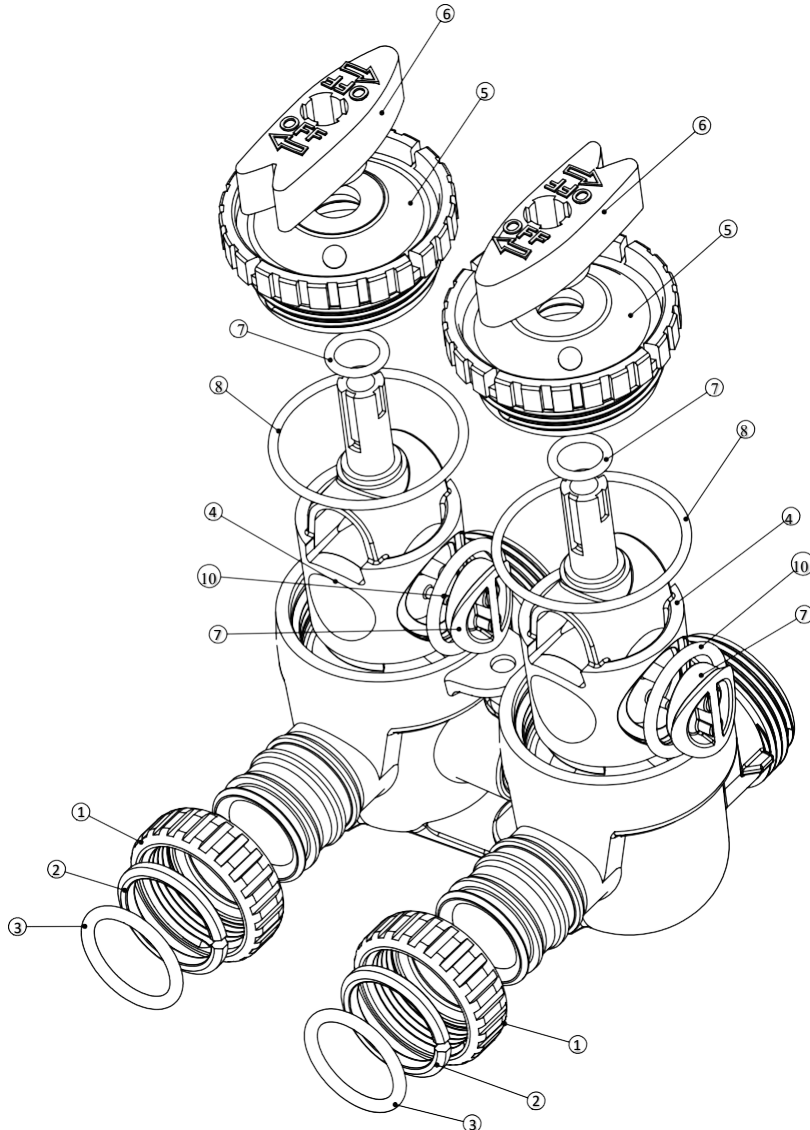


## Service Spanner Wrench

(Order No. V3193-02)

Although no tools are necessary to assemble or disassemble the valve, the WS1 wrench (shown in various positions on the valve) may be purchased to aid in assembly or disassembly.

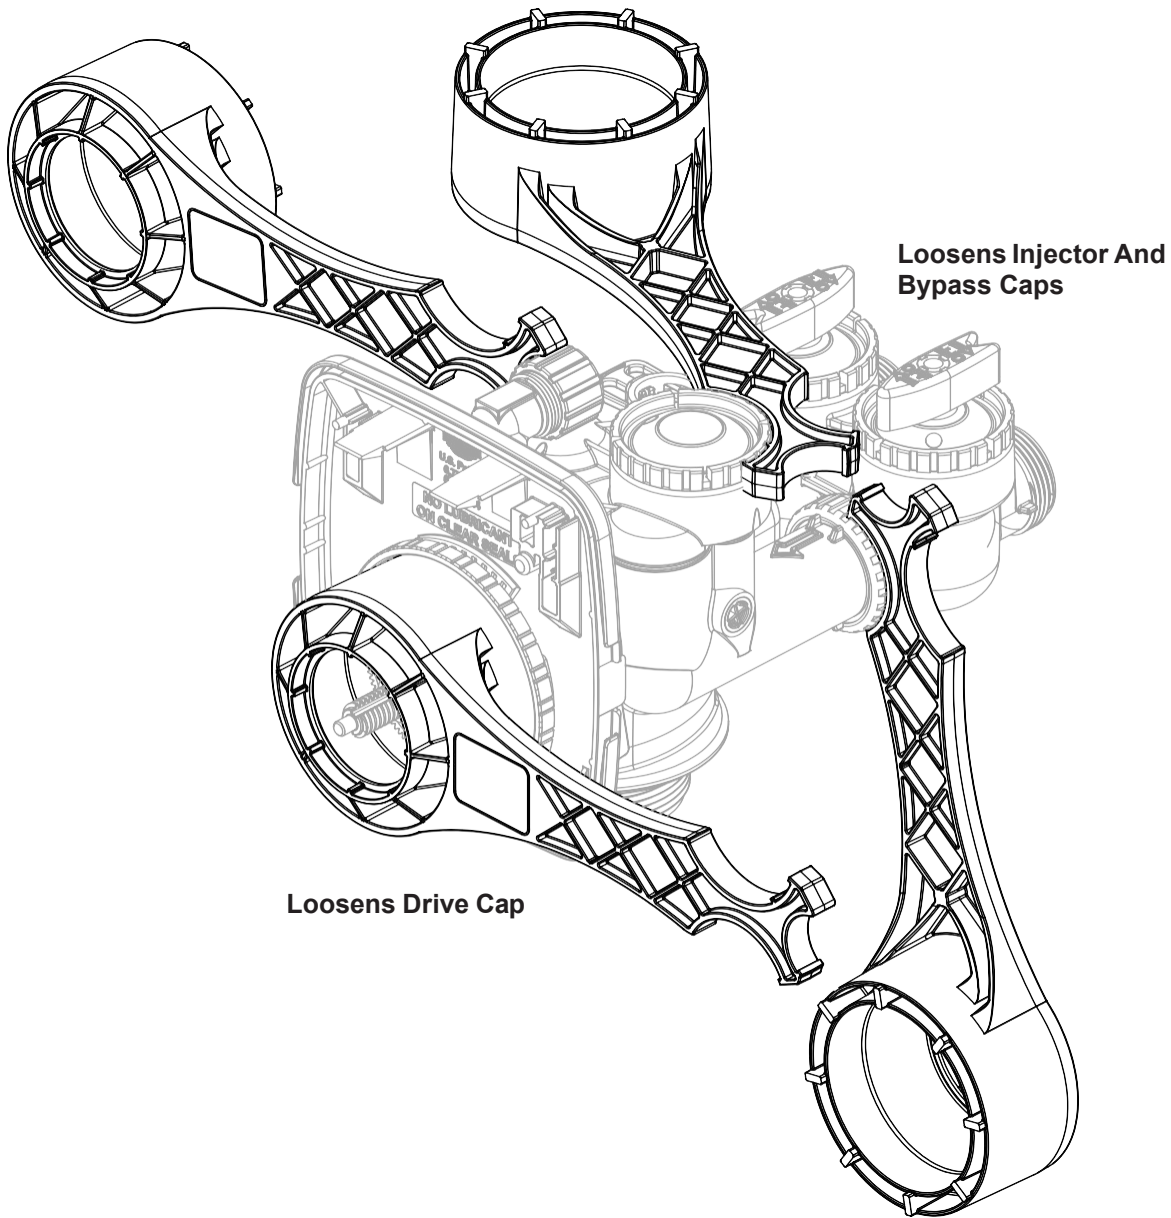

| <u>Item</u> | <u>Quantity</u> | <u>Part Number</u> | <u>Description</u>       |
|-------------|-----------------|--------------------|--------------------------|
| 1           | 1               | CIOX-V1EEDTF       | CIOX Valve               |
| 2           | 1               | ENDT               | Distributor Tube         |
| 3           | 1               | EN104 * VT         | Vortech Mineral Tank     |
|             |                 | EN1354 * VT        | Vortech Mineral Tank     |
| 4-5         | 1.5/2.5         | ***                | Filter Media             |
| 6           | 1               | D1047              | Air Blocker              |
| 7           | 1               | V3006              | Bypass Assembly          |
| 8           | 1               | V3191-01CV         | Elbow Assembly with CV** |
| 9           | 1               | V4144-01CV         | Brine Elbow with CV      |
| 10          | 1               | V3962              | Drain Assembly           |

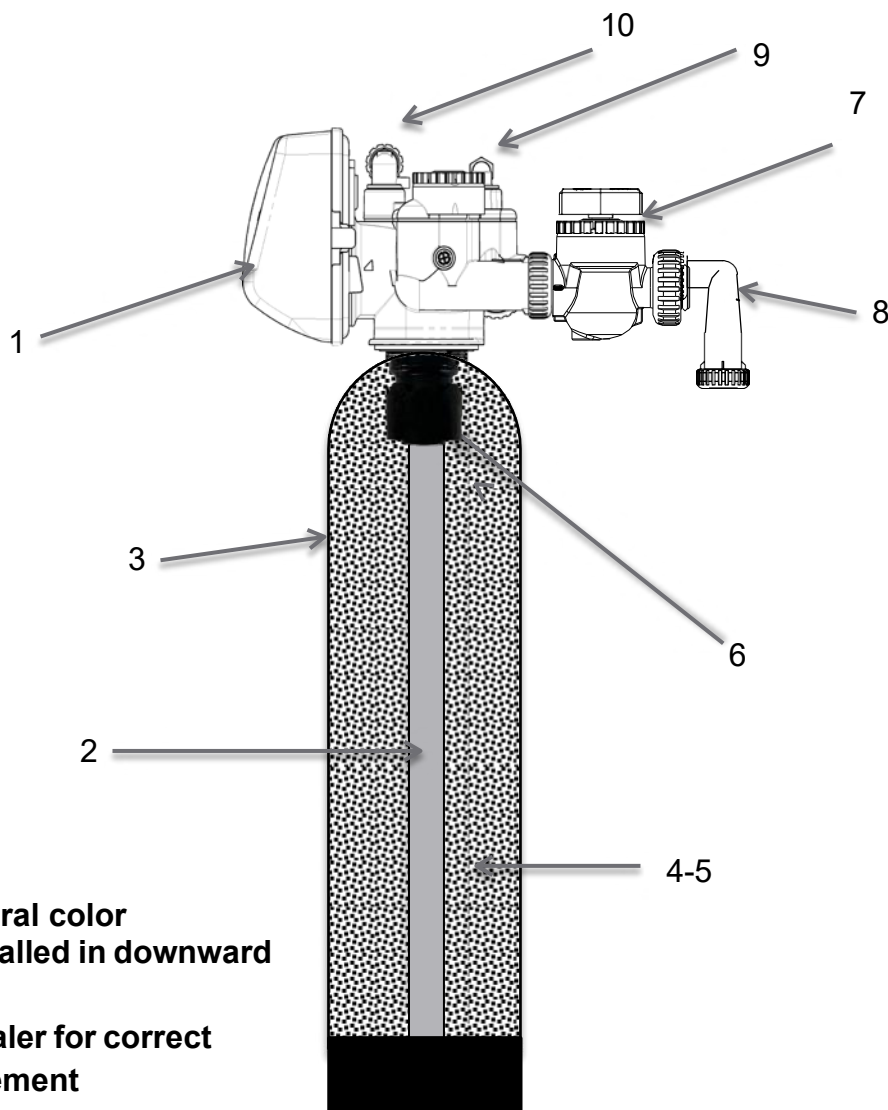

**\*Black or natural color**

**\*\*Must be installed in downward position**

**\*\*\*Consult dealer for correct media replacement**

# Troubleshooting

| Problem                                           | Cause                                                                                                                                                                                                                                                                     | Solution                                                                                                                                                                                                                                                                                       |
|---------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1. Blank or unreadable LCD display                | <ul style="list-style-type: none"> <li>A. Transformer unplugged</li> <li>B. Defective transformer</li> <li>C. No electric power at outlet</li> <li>D. Check battery in valve</li> <li>E. PC board is defective</li> </ul>                                                 | <ul style="list-style-type: none"> <li>A. Connect to Power</li> <li>B. Check to ensure 12 volt motor, replace transformer</li> <li>C. Repair outlet or switch to working outlet</li> <li>D. Replace battery if less than 3 volts</li> <li>E. Replace PC Board</li> </ul>                       |
| 2. Control valve stalled in regeneration          | <ul style="list-style-type: none"> <li>A. Broken drive gear or drive cap assembly</li> <li>B. Broken regenerant piston</li> <li>C. Broken main piston</li> <li>D. Motor not operating correctly</li> <li>E. Defective transformer</li> <li>F. No power to unit</li> </ul> | <ul style="list-style-type: none"> <li>A. Replace drive gear or drive cap assembly</li> <li>B. Replace regenerant piston</li> <li>C. Replace main piston</li> <li>D. Replace motor</li> <li>E. Check to ensure 12 volt motor, replace transformer</li> <li>F. Ensure working outlet</li> </ul> |
| 3. Control valve regenerates at wrong time of day | <ul style="list-style-type: none"> <li>A. Power outages</li> <li>B. Time of day not set correctly</li> <li>C. Control valve is programmed incorrectly</li> </ul>                                                                                                          | <ul style="list-style-type: none"> <li>A. Reset time of day, replace lithium coin type battery on circuit board</li> <li>B. Reset time of day</li> <li>C. Check control valve programming procedure</li> </ul>                                                                                 |
| 4. Odor/Color noticed on outlet of filter         | <ul style="list-style-type: none"> <li>A. Perform water analysis</li> <li>B. Determine if filter media needs replacing</li> </ul>                                                                                                                                         | <ul style="list-style-type: none"> <li>A. Increase regeneration time. <ul style="list-style-type: none"> <li>a. Exceeding flow rate specification</li> </ul> </li> <li>B. Replace filter media</li> </ul>                                                                                      |
| 5. Reduction of water pressure                    | <ul style="list-style-type: none"> <li>A. Determine if filter media needs replacing</li> </ul>                                                                                                                                                                            | <ul style="list-style-type: none"> <li>A. Replace filter media</li> </ul>                                                                                                                                                                                                                      |

## Water Treatment System Warranty

This quality FRAKCO Iron Filter is designed and built to provide many years of satisfactory performance under normal use. FRAKCO, INC. pledges to the original owner that for sixty months, all non-wearable items of the above-described water treatment system proven to be defective due to workmanship and/or materials will be replaced or repaired. FRAKCO also pledges that the fiberglass media tank is covered under this warranty for ten years if owned by the original purchaser. Our pledge does not apply if the damage is caused by defective installation; water pressure in excess of eighty pounds per square inch; water temperature in excess of 110° F.; misuse; unauthorized alterations; freezing; accident; fire; neglect; or damage caused by shipping.

To obtain service under this warranty, notify FRAKCO, INC in writing of any defects in workmanship within thirty days of the appearance of such defects. Such written notice must include the date of purchase, the part number, and a description of the defect. Upon receiving such notice and determining that the defect is covered by this warranty, FRAKCO, INC. will replace or repair the defective item. Replacement of a defective item will be at FRAKCO'S factory in Luverne, MN, and the purchaser must ship the defective item at its own expense to FRAKCO'S factory. Replacement items will be shipped by FRAKCO F.O.B. Luverne, Minnesota, with a shipping carton furnished. In the event certain models or colors of the replacement item are out of stock, FRAKCO, INC. may, after notifying the purchaser, furnish another model or color of the replacement item. The factory will not pay for service charges and will not perform any repair or service functions other than at its home office.

Please follow the enclosed instructions and local codes in installing your water treatment system. Failure to do so will void this warranty. Nothing in the warranty may be construed as involving the factory in the relationship between Dealer and Owner.


This warranty gives the purchaser specific legal rights. The purchase may also have implied warranty rights. In the event of a problem with warranty service or performance, the purchaser may be able to go to a Small Claims Court, a State Court, or a Federal District Court. This warranty complies with the 1975 Federal Warranty Law.

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

Date Installed \_\_\_\_\_ Dealer \_\_\_\_\_

Address \_\_\_\_\_

*MANUFACTURED BY: FRAKCO, INC.  
500 N BLUE MOUND AVE  
LUVERNE, MINNESOTA 56156  
WWW.FRAKCO.COM*

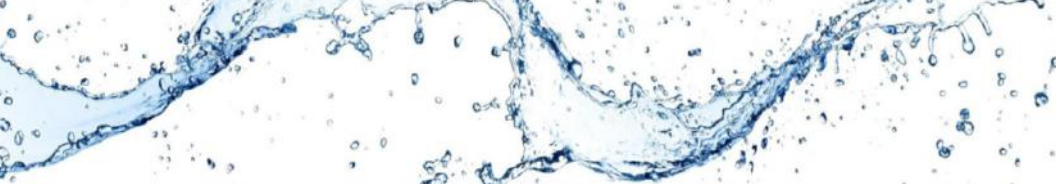

# **OzotechEOG**

## **Enhanced Oxidation Generator**



**Installation and Service Manual**

# Table of Contents

|      |                                      |       |
|------|--------------------------------------|-------|
| 1.0  | Limited Warranty                     | 4     |
| 2.0  | Service Returns                      | 5     |
| 3.0  | Caution                              | 6     |
| 4.0  | Installation and Operation           | 7     |
|      | 4.1 Operating Environment            | 7     |
|      | 4.2 Installation                     | 8-9   |
|      | 4.3 Operation                        | 10    |
| 5.0  | Maintenance                          | 11    |
|      | 5.1 Ozone Generator Maintenance      | 12-13 |
| 6.0  | Spare/Replacement Parts              | 14    |
| 7.0  | Specifications                       | 14    |
| 8.0  | Component Replacement                | 15    |
| 9.0  | Troubleshooting Guide                | 15    |
| 10.0 | Illustrations                        | 16    |
|      | Figure 1. OzotechEOG internal layout | 16    |

## 1.0 Limited Warranty

Ozotech, Inc., warrants the OzotechEOG series ozone generators to be free from defects in parts and workmanship for (12) months from date of invoice, under conditions of normal use. The corona discharge (CD) cell is warranted against catastrophic electrical failure for 3 years from date of invoice. All other parts, repaired or replaced, will be warranted only for the remainder of the original warranty period.

Ozotech, Incorporated will refund the purchase price, perform repairs or replace equipment, at the option of Ozotech, Incorporated.

The warranty shall be null, void, and non-binding upon Ozotech, Incorporated if Ozotech, Incorporated (or authorized service center) determines the cause of malfunction or defect to be a result of:

- 1)** Failure to perform proper maintenance as defined and recommended in this manual.
- 2)** Failure to adhere to and provide proper operating conditions, as defined in this manual, including operation outside of temperature range, operating in wet or dirty environment, operation outside of manufacturer's specifications.
- 3)** Adjustments made by user other than product output flow rate within ranges specified by manufacturer.

Ozotech, Incorporated assumes no liability for damages incurred by deliberate or incidental misuse of this product, or damages incurred in transit.

## 2.0 Service Returns

If the need arises to return your equipment for service, the following procedure must be followed to ensure accurate and timely processing of repairs.

- ✓ Obtain model number/name of unit to be returned.
- ✓ Contact Ozotech, Inc and request a Return Material Authorization (RMA) form. Make sure to give the factory representative an accurate and current shipping address.
- ✓ Provide a description detailing the problem with the unit. Be as specific as possible.
- ✓ After receipt of RMA form, package unit for shipment. Enclose the RMA form with the unit. Use the original packaging materials if possible. If not, please package the product to ensure against shipping damage.
- ✓ Clearly write the RMA number on the outside of the shipping package.
- ✓ Verify that the address is correct and current.
- ✓ Shipments that are not factory authorized will be refused.

It is recommended that you ship with a reputable and reliable shipping company, and that the contents of the package are insured. Ozotech, Inc. accepts no responsibility for damage or loss of equipment in transit.

**ALL FREIGHT CHARGES INTO THE FACTORY MUST BE PREPAID.** If the repair is covered under warranty, the factory will pay return shipping charges (surface rates only) to the address listed on the RMA, within the Continental United States.

If the repair is not covered under warranty, the returning party is responsible for payment of return shipping and handling charges, as well as labor and equipment costs associated with the repair.

### 3.0 Caution



Read the following safety guidelines thoroughly before attempting to operate or install your equipment.



As with all electrical devices, this equipment should never be allowed to come in contact with water.



Only qualified personnel should be allowed to set up, maintain and operate this equipment.



The equipment must be operated using a properly grounded electrical circuit that is protected by either a fuse or circuit breaker.



Do not use an extension cord to supply power to this equipment.

\* Ozotech, Inc., assumes no liability for damages or injuries incurred by misuse of this product.

## 4.0 Installation and Operation

Your generator requires special operating conditions in order to maintain performance and reliability. Your ozone generator is designed to be operated under a negative pressure situation.

Warranty coverage of your equipment is contingent upon strict compliance with the operating conditions specified in this manual.

### 4.1 Operating Environment

#### **External**

It is most important to choose a cool, clean external operating environment. Consideration of these factors should be a priority. Mount your ozone generator in the best possible operating environment that is available at the chosen site. If possible, mount in an area that is free of airborne moisture particles.

#### **Internal**

Keep the inside of the generator chassis clean and dry. Dust particles and condensation pose a challenge to the consistent operation of all ozone generators. Make a note to inspect the internal cleanliness of the equipment when scheduled maintenance is performed. For further information, refer to section 5.0.

## 4.2 Installation

1. Mount the OzotechEOG to the Clack® control valve. A #2 Philips screwdriver will be required.
  - a. Install clamp ring into OzotechEOG backplate receiver.
  - b. Install port clip into OzotechEOG backplate receiver.
  - c. Loosen clamp screw, slide clamp over valve injector cap. Rotate OzotechEOG counterclockwise to secure port clip. Tighten clamp screw.



2. Disconnect power to the control valve. Remove the front cover from valve backplate. Release the control board bracket from backplate.



3. Route the grey control wire from the OzotechEOG into Clack® valve housing through the hole in the backplate, and through the strain relief channel above to keep wiring in place.
  - a. Leave enough wire length to connect to the signal relay terminal block of the control circuit board. Make sure the wire is flush in the channel for proper bracket installation.
  - b. Replace the control board bracket into backplate until it "snaps" into place.

## 4.2 Installation Continued

4. Secure red wire into RLY 1 terminal, and black wire into +COM terminal on Clack® control board.
5. Replace control valve front cover.
6. Plug the supplied wall transformer into a wall outlet. Plug the male DC plug into the female DC jack located at the back of the OzotechEOG. Press alarm reset button on OzotechEOG PCB to reset 365 day maintenance timer.
7. Program ozone start and end schedule using control valve PCB.
  - a. Enter cycle programming mode
  - b. Set backwash to 14 minutes
  - c. Set draw time to 40 minutes
  - d. Turn off fill
  - e. Turn off rinse
  - f. Set relay to "on"
  - g. Set the relay on time to 15 minutes (one minute longer than backwash)
  - h. Set the relay duration for 38 minutes (2 minutes less than draw time)
  - i. Return to service
  - j. Press regeneration button to lock in timing

## 4.3 Operation

The OzotechEOG will automatically turn on and off by the Clack® control PCB defined timing schedule. The OzotechEOG control board utilizes an onboard diagnostic LED light to convey real-time performance status of the unit. The control board within the OzotechEOG has several inputs and outputs. The following will address functions of the diagnostic LED, control input, and auxiliary outputs.

### LED Diagnostic Functions:

**Green Light Blinking Slowly:** Standby mode; unit is powered, pilot input is OFF.

**Green Light Blinking Quickly:** High voltage startup (up to 3 seconds).

**Green Light Solid:** High voltage is ON & stable; CD cell producing ozone.

**Red Light Solid:** Unstable operation; CD cell may need cleaning.

**Green/Red Light Alternating Twice/Second:** HV is ON, but operating current is low. If persistent, CD cell may need cleaning.

**Red Light Flashing:** NO or NC contacts are shorted. Remove short condition.

**Orange Light:** 1-year timer has expired; clean CD cell, then reset timer by pressing red "alarm reset" button on PCB once.

## 4.3 Operation Continued

### **Control Input:**

The OzotechEOG PCB is activated to produce ozone when a pilot input signal is applied across "+" & "pilot" terminals.

### **Auxiliary Output Functions:**

The NO/NC auxiliary outputs have a 3 second off-delay, after the pilot signal is shut off. These outputs are capable of outputting a maximum of 60mA @ 70°F and are intended to be used as a control circuit only. Attach positive wire to NO or NC output terminal, and negative wire to GND terminal to complete the desired circuit. See figure 1, on page 14 for auxiliary output locations.

### **Fusing:**

The control PCB is equipped with automatically resetting on-board fuses. If these fuses trip, due to a short of the HV transformer, or excessive load on the auxiliary output(s), remove excessive load/cause of short, and cycle main power on/off to reset. If the HV transformer is shorted, the LED indicator will stay solid red until condition is remedied. If either NO or NC output is active and experiences excessive load, the LED indicator will quickly flash red until condition is removed.

## 5.0 Maintenance

The OzotechEOG ozone generator is delivered factory tested, calibrated, and adjusted for maximum efficiency and long life. Simple maintenance and appropriate operating conditions are the only requirements to keep the unit functioning within manufacturer's specifications.

Performing any other modifications or adjustments to internal components will cause the unit to function outside of manufacturer's specifications and will cause damage to the unit not covered under warranty terms.

## 5.1 Ozone Generator Maintenance

Frequency of Maintenance: **Every 12 months, more frequently in high humidity areas.**

**Perform the following CD cell cleaning procedure:**

**Note:** A CD cell cleaning kit may be purchased from Ozotech, Inc. Reference section 6.0 for more information.

**\*CAUTION:** UNPLUG POWER SUPPLY TO OzotechEOG BEFORE PERFORMING SERVICE\*

1. With the front cover removed, remove the CD cell from the ozone generator:
  - a. Disconnect the red spade terminal connector from the CD cell connection terminal.
  - b. Cut the CD cell retaining strap holding the cell into the cell clips, and discard.
  - c. Disconnect the air inlet and ozone outlet hoses from the CD cell barb fittings.
  - d. Pull the CD cell straight up from the retaining clips.
2. Flush the CD cell with warm water until the water comes out entirely clean:
  - a. Connect a 3/16" I.D. piece of tubing to either of the CD cell barb fittings.
  - b. Using a syringe or rubber bulb pump to work the warm water through the CD cell, flushing until all nitric acid or obstructions are removed, and the water runs clean.  
**(NOTE: Hot water can be used if nitric acid buildup is severe)**
3. Ensure that the CD cell is completely dry, inside and out, before re-installation:
  - a. Use dry, compressed air to blow through either CD cell barbed fitting until no moisture is ejected from the opposite barbed fitting.

## 5.1 Ozone Generator Maintenance Cont.

4. Reinstall clean, dry CD cell into OzotechEOG in reverse order, making sure all air and electrical connections are secure.

**Frequency of Maintenance:** Every 12 months

Perform the following general maintenance and CD cell cleaning procedure:

1. Disconnect OzotechEOG from power source.
2. Remove cover.
3. Inspect the inside of the generator for dust and moisture.
4. Thoroughly clean and dry the inside of the generator.
5. Replace top cover.
6. Replace any inline and brine elbow check valves.

### Maintenance timer service reset instructions:

Normally the EOG II controller board will signal cell maintenance is due by changing the LED indicator light to an orange color, once service has been performed then the timer will be reset simply by pressing the "Alarm Reset" button.

However, if a technician services or replaces the cell prior to the 1-year service signal is displayed, a "forced reset" on the timer should be performed.

#### Follow these instructions to do the reset...

1. Power off device by removing DC plug from back of EOG.
2. Remove front cover to access circuit board.
3. Find and press "Alarm Reset" button. Continuing to hold reset button, return power to device by plugging power plug back in. Hold button for 3 seconds, no indicator lights should be on.
4. After 3 seconds, release button. LED indicator light should pulse slowly in an orange-red color. This indicates maintenance timer reset function has been triggered.

Note: If a technician wants to abort the reset, power cycle device again without pressing any buttons now and original condition will be restored.

5. Press alarm reset button again to reset maintenance timer. LED should turn green.
6. EOG is now ready to operate as normal.

**Notes: This feature only applies to EOGs made after May 2020**

(See program rev code on side of transformer and or date code in serial number).

## 6.0 Spare/Replacement Parts

| Part #   | Description                                                                |
|----------|----------------------------------------------------------------------------|
| 33218    | Replacement CD cell, w/tubing                                              |
| 47035    | Ozone resistant inline check valve* (1)                                    |
| 40080-03 | Wall transformer, 120/240VAC to 12VDC, regulated (domestic customers only) |
| 47044-1  | Kit, CD cell maintenance                                                   |

\* Denotes recommended spare maintenance parts with initial purchase. Followed by additional quantity recommended for one year's scheduled maintenance.

## 7.0 Specifications

### Input Power Requirements:

Operating Voltage: 12VDC via 120/240VAC 50/60Hz switching power supply

Power Consumption: 600mA @ 12VDC (7.2 watts) nominal

Size (L x W x H): 6.8" x 4.4" 5.4"

Shipping Weight: 2 lbs.

Ozone Output: 220 mg/hr.

Enclosure: ABS

# 8.0 Component Replacement

## CD Cell Replacement

**\*CAUTION: UNPLUG POWER SUPPLY TO OzotechEOG BEFORE PERFORMING SERVICE\***

1. With the front cover removed, remove the CD cell from the ozone generator:
  - a. Disconnect the red spadeterminal connector from the CD cell connection terminal.
  - b. Cut the CD cell retaining strap holding the cell into the cell clips, and discard.
  - c. Disconnect the air inlet and ozone outlet hoses from the CD cell barb fittings.
  - d. Pull the CD cell straight up from the retaining clips.
2. Replace with new CD cell in reverse order, making sure all air and electrical connections are secure.

# 9.0 Troubleshooting Guide

| System                             | Possible Cause                                                                                                                   | Solution                                                                                                                                                                                                                                                                             |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Unit doesn't turn on               | Unit is not connected to power source, or is connected to improper power source                                                  | Refer to input power requirements on pg. 12, and Figure 1 on pg. 14 for proper electrical connections.                                                                                                                                                                               |
|                                    | Electrical short circuit                                                                                                         | Visually inspect unit and check for loose connections. Inspect printed circuit board (PCB) for burn marks. Inspect HV wire from PCB to CD cell for disconnection or burn marks. Repair any and all problems prior to placing unit back into service, or contact factory for service. |
|                                    | Unit is connected to improper power source                                                                                       | Refer to pg. 12 to ensure that unit is plugged into proper voltage outlet.                                                                                                                                                                                                           |
|                                    |                                                                                                                                  |                                                                                                                                                                                                                                                                                      |
| Unit turns on, but no ozone output | Frequency driver is defective                                                                                                    | Replace PCB board.                                                                                                                                                                                                                                                                   |
|                                    | Frequency driver high voltage lead not connected to ozone cell                                                                   | Connect red flag terminal to CD cell spade connection.                                                                                                                                                                                                                               |
|                                    | Water has been allowed to back up into the CD cell and has caused a direct short                                                 | Dry CD cell using drying procedure on pg. 10. Replace CD cell.                                                                                                                                                                                                                       |
|                                    | Cell is plugged with build-up of nitrous byproducts and particulate matter. Usually caused by the lack of proper air preparation | Refer to section 5.1 on pg. 10 to clean CD cell. Replace CD cell.                                                                                                                                                                                                                    |

## 10.0 Illustrations

Figure 1: OzotechEOG internal layout

